

**ARINC CHARACTERISTIC 702A
TABLE OF CONTENTS**

1	1.0	INTRODUCTION AND DESCRIPTION	1
2	1.1	Purpose and Scope	1
3	1.2	Relationship to Other Documents	2
4	1.3	Functional Overview	2
5	1.4	Flight Management Computer Description	4
6	1.5	Interchangeability	4
7	1.5.1	General	4
8	1.5.2	Interchangeability for the ARINC 702A Flight Management Computer System	4
9	1.5.3	Generation Interchangeability Considerations	4
10	1.6	Regulatory Approval	4
11	1.7	Integrity and Availability	5
12	1.8	Reliability 5	
13	1.9	Testability and Maintainability	5
14	1.10	Flight Simulators	5
15	2.0	INTERCHANGEABILITY STANDARDS	7
16	2.1	Introduction	7
17	2.2	Form Factor, Connectors, and Index Pin Coding	7
18	2.3	Standard Interwiring	7
19	2.4	Power Circuitry	7
20	2.4.1	Primary Power Input	7
21	2.4.2	Power Control Circuitry	8
22	2.4.3	The AC Common Cold	8
23	2.4.4	The Common Ground	8
24	2.4.5	Batteries	8
25	2.5	Standardized Signaling	9
26	2.5.1	General Accuracy and Operating Ranges	9
27	2.5.2	Resolution	9
28	2.5.3	ARINC 429 Data Bus	9
29	2.5.4	Standard "Open"	9
30	2.5.5	Standard "Ground"	10
31	2.5.6	Standard "Applied Voltage" Output	10
32	2.5.7	Standard Discrete Input	10
33	2.5.8	Standard Discrete Output	11
34	2.5.9	Ethernet Interface	11
35	2.5.10	Standard Annunciators	11
36	2.6	Environmental Conditions	11
37	2.7	Cooling 11	
38	2.8	Weights 12	
39	2.9	Grounding and Bonding	12
40	3.0	SYSTEM DESIGN CONSIDERATIONS	13
41	3.1	System Configurations	13
42	3.1.1	Single System Configuration	13
43	3.1.2	Single System/Dual MCDU Configuration	13
44	3.1.3	Dual System Configuration	13
45	3.1.4	Other Configurations	14
46	3.2	Certification Design Considerations	14
47	3.2.1	Partitioning Considerations	14
48	3.2.2	Operational Functional Independence	14
49	3.2.3	Unit Identification Considerations	14
50	3.3	System Response to Power Interrupts	15

**ARINC STANDARD 702A
TABLE OF CONTENTS**

51	3.4	FMC Performance	16
52	3.4.1	Accuracy, Integrity, and Continuity	16
53	3.4.2	Response Time	16
54	3.5	Dual System Design Considerations	17
55	4.0	FLIGHT MANAGEMENT FUNCTIONS	18
56	4.1	Introduction	18
57	4.2	Functional Initialization and Activation	18
58	4.2.1	Navigation Sensor Initialization	18
59	4.2.1.1	IRS Initialization	18
60	4.2.1.2	IRS Heading Set	18
61	4.2.1.3	GNSS Initialization	18
62	4.2.2	Flight Plan Initialization and Activation	18
63	4.2.3	Performance and Predictions Initialization	19
64	4.2.4	Lateral and Vertical Guidance Activation	19
65	4.2.5	Use of Data Link for System Initialization	19
66	4.3	Functional Description	19
67	4.3.1	Navigation	19
68	4.3.1.1	Multi-Sensor Navigation	21
69	4.3.1.2	Navigation Modes	21
70	4.3.1.3	RNP-Based Navigation	22
71	4.3.1.3.1	RNP Determination	22
72	4.3.1.3.1.1	Manually Entered RNP Values	23
73	4.3.1.3.1.2	Preplanned RNP Values	23
74	4.3.1.3.1.3	Leg-Based RNP Values	24
75	4.3.1.3.1.4	Stored Default Values	25
76	4.3.1.3.2	Determination of Navigation System Performance	25
77	4.3.1.3.3	Navigation Alerting and Display	26
78	4.3.1.4	Navaid Data	26
79	4.3.1.5	Crew Controlled Navigation Options	26
80	4.3.1.6	VHF Radio Tuning	28
81	4.3.1.6.1	Automatic Station Selection	28
82	4.3.1.6.2	Navaid Reasonableness Determination	28
83	4.3.1.7	Real Time Clock	28
84	4.3.2	Flight Planning	28
85	4.3.2.1	Flight Plan States	29
86	4.3.2.2	Navigation Data Base	29
87	4.3.2.3	Supplemental and Temporary NDB Creation and Management	30
88	4.3.2.3.1	PBD Waypoints	31
89	4.3.2.3.2	PB/PB Waypoints	31
90	4.3.2.3.3	Along Track Fix Waypoints	31
91	4.3.2.3.4	Lat/Long Waypoints	31
92	4.3.2.3.5	Lat/Long Crossing Waypoints	31
93	4.3.2.3.6	Unnamed Airway Intersection	31
94	4.3.2.3.7	Fix Intersection Waypoints	32
95	4.3.2.3.8	Runway Extension Waypoints	32
96	4.3.2.3.9	Dir-To Abeam Waypoints	32
97	4.3.2.3.10	FIR/SUA Intersection Waypoints	32
98	4.3.2.3.11	Suggested Waypoint Naming Convention	32
99	4.3.2.4	Lateral Flight Planning	33
100	4.3.2.4.1	Flight Plan Construction	33
101	4.3.2.4.2	Terminal Area Procedures	33

**ARINC CHARACTERISTIC 702A
TABLE OF CONTENTS**

102	4.3.2.4.3	Flight Plan Editing	34
103	4.3.2.4.3.1	Direct/Intercept Option	34
104	4.3.2.4.3.2	Entry of Waypoints.....	34
105	4.3.2.4.3.3	Flight Plan Linking	34
106	4.3.2.4.3.4	Flight Plan Delete	34
107	4.3.2.4.3.5	Procedure Selection	34
108	4.3.2.4.3.6	Holding Patterns (HM Leg)	35
109	4.3.2.4.3.7	Flight Plan Editing using Data Link	35
110	4.3.2.4.3.8	Flight Plan Editing using a Pointing Device	35
111	4.3.2.4.4	Flight Planning Support for ATM.....	35
112	4.3.2.4.5	Missed Approach Procedures.....	36
113	4.3.2.4.6	Lateral Offset Construction	36
114	4.3.2.4.7	Magnetic Variation.....	37
115	4.3.2.5	Vertical Flight Planning	38
116	4.3.2.5.1	Wind, Temperature, and Atmospheric Model.....	39
117	4.3.2.5.2	Waypoint Altitude Constraints.....	40
118	4.3.2.5.3	Waypoint Speed Constraints	42
119	4.3.2.5.4	Temperature Compensation	43
120	4.3.3	Lateral and Vertical Guidance.....	45
121	4.3.3.1	Lateral Guidance and Path Construction.....	46
122	4.3.3.1.1	Lateral Reference Path Construction.....	46
123	4.3.3.1.2	Lateral Leg Transitions	47
124	4.3.3.1.2.1	Fly-By Turns	47
125	4.3.3.1.2.2	Fly-Over Turns.....	48
126	4.3.3.1.2.3	Fix Radius Transitions (FRT)	49
127	4.3.3.1.3	Special Lateral Path Construction.....	49
128	4.3.3.1.4	Lateral Guidance Roll Command.....	50
129	4.3.3.1.5	Lateral Guidance Output Parameters	50
130	4.3.3.1.6	Lateral Capture Path Construction.....	50
131	4.3.3.1.7	Localizer/MLS Capture	50
132	4.3.3.1.8	Earth Reference Model.....	50
133	4.3.3.2	Vertical Guidance and Trajectory Predictions.....	50
134	4.3.3.2.1	Trajectory Predictions	50
135	4.3.3.2.1.1	Takeoff Phase Predictions	53
136	4.3.3.2.1.2	Climb Phase Predictions.....	53
137	4.3.3.2.1.3	Cruise Phase Predictions.....	55
138	4.3.3.2.1.4	Descent Phase Path Construction and Predictions	55
139	4.3.3.2.1.4.1	Descent Phase Path Construction	56
140	4.3.3.2.1.4.2	Descent Phase Predictions.....	60
141	4.3.3.2.1.5	Approach Phase Path Construction and Predictions.....	62
142	4.3.3.2.1.6	Missed Approach Phase Prediction	65
143	4.3.3.2.2	Vertical Guidance	65
144	4.3.3.2.2.1	Climb Phase Operation.....	66
145	4.3.3.2.2.2	Cruise Phase Operation.....	66
146	4.3.3.2.2.3	Descent Phase Operation.....	67
147	4.3.3.2.2.4	Selected Altitude Compliance	67
148	4.3.3.2.2.5	Altimeter Barometric Correction for Terminal Area Operations.....	68
149	4.3.3.2.2.6	Altitude Constraints.....	68
150	4.3.3.2.2.7	Speed Restrictions.....	69
151	4.3.3.2.3	Estimated Time of Arrival (ETA)	74
152	4.3.3.2.4	Required Time of Arrival (RTA).....	75
153	4.3.3.2.5	Time of Arrival Control (TOAC).....	75

**ARINC STANDARD 702A
TABLE OF CONTENTS**

154	4.3.3.3	Three-Dimensional RNAV Approach.....	76
155	4.3.4	Performance Calculations Function.....	76
156	4.3.4.1	Performance Modes.....	76
157	4.3.4.1.1	Climb Mode.....	77
158	4.3.4.1.2	Cruise Mode.....	77
159	4.3.4.1.3	Descent Mode.....	77
160	4.3.4.2	Maximum and Optimum Altitudes Calculation.....	77
161	4.3.4.3	Trip Altitude Calculations.....	78
162	4.3.4.4	Alternate Destinations Calculation.....	78
163	4.3.4.5	Step Climb/Descent.....	78
164	4.3.4.6	Cruise Climb.....	78
165	4.3.4.7	Vertical Advisory Calculations.....	78
166	4.3.4.8	Thrust Limit Data Calculations.....	79
167	4.3.4.9	Takeoff Reference Data.....	79
168	4.3.4.10	Approach Reference Data.....	79
169	4.3.4.11	Reserve Fuel Calculation.....	79
170	4.3.4.12	Engine-Out Performance Calculation.....	80
171	4.3.4.13	Other Predictions.....	80
172	4.3.4.13.1	Maximum Range Computation.....	80
173	4.3.4.13.2	Maximum Endurance Computation.....	80
174	4.3.4.13.3	Descent Energy Circles.....	80
175	4.3.5	Printer Functions.....	80
176	4.3.6	AOC Function.....	80
177	4.3.7	ATS Datalink.....	81
178	4.3.7.1	Future Air Navigation System 1/A (FANS 1/A).....	82
179	4.3.7.1.1	Air Traffic Services Facilities Notification (AFN).....	82
180	4.3.7.1.2	Controller/Pilot Data Link Communication (CPDLC).....	83
181	4.3.7.1.3	Automatic Dependent Surveillance - Contract (ADS-C).....	83
182	4.3.7.2	Link 2000+.....	84
183	4.3.7.2.1	Context Management (CM).....	84
184	4.3.7.2.2	Controller Pilot Data Link Communication (CPDLC).....	85
185	4.3.7.3	Baseline 2 (B2).....	85
186	4.3.7.3.1	Context Management (CM).....	86
187	4.3.7.3.2	Controller Pilot Data Link Communication (CPDLC).....	86
188	4.3.7.3.3	Automatic Dependent Surveillance (ADS-C).....	87
189	4.3.8	Airport Surface Guidance.....	88
190	4.3.9	Terrain and Obstacle Data.....	88
191	4.3.10	Electronic Map Interfaces.....	88
192	4.3.10.1	Navigation Display Interface.....	88
193	4.3.10.2	Vertical Situation Display Interface.....	88
194	4.3.11	CMU Interface.....	89
195	4.3.12	Predictive Receiver Autonomous Integrity Monitoring (RAIM).....	89
196	4.3.13	Precision-Like Approach Guidance.....	89
197	4.3.13.1	LP/LPV Approach Guidance.....	89
198	4.3.13.2	FMS Landing System (FLS).....	90
199	4.3.14	Integrity Monitoring and Alerting.....	90
200	4.3.14.1	Sensor Status.....	90
201	4.3.14.2	System Status Alert.....	91
202	4.3.14.3	Self-Test.....	92
203	4.3.14.4	Failure Response.....	92
204	4.4	Training Simulator Support Functions.....	92

**ARINC CHARACTERISTIC 702A
TABLE OF CONTENTS**

205	5.0	STANDARD INTERFACES	93
206	5.1	FMC Digital Data Input Ports	93
207	5.1.1	VOR Input Ports	93
208	5.1.2	DME Input Ports	93
209	5.1.3	ILS/MMR Input Port	93
210	5.1.4	Air Data Input Ports	93
211	5.1.5	IRS/AHRS Input Ports	93
212	5.1.6	GNSS Input Ports	93
213	5.1.7	Flight Control System Input Ports	94
214	5.1.8	MCDU Input Ports.....	94
215	5.1.9	Data Loader Input Ports (ARINC 615).....	94
216	5.1.10	Data Link Input Ports	94
217	5.1.11	Intersystem Data Input Port	94
218	5.1.12	Propulsion/Configuration Data Input Ports	94
219	5.1.13	Electronic Flight Instrument System Input Ports.....	94
220	5.1.14	Printer 95	
221	5.1.15	Digital Clock Input.....	95
222	5.1.16	Maintenance Input	95
223	5.1.17	WBS Input	95
224	5.1.18	Simulator Input	95
225	5.1.19	Pointing Device.....	95
226	5.1.20	ASAS Input.....	95
227	5.1.21	Reserved Ports for Growth Inputs.....	95
228	5.2	FMC Digital Data Outputs.....	95
229	5.2.1	FMC Intersystem Output.....	95
230	5.2.2	General Data Output.....	96
231	5.2.3	Primary Display Data Output	96
232	5.2.4	MCDU Output Ports.....	96
233	5.2.5	Data Loader Output	96
234	5.2.6	Data Link Output Ports	96
235	5.2.7	Autothrottle (Reserved).....	96
236	5.2.8	Printer 96	
237	5.2.9	Onboard Maintenance	96
238	5.2.10	Programmable Data Output	96
239	5.2.11	Simulator	97
240	5.2.12	Aircraft State and Intent Path Output (Trajectory Bus)	97
241	5.2.12.1	Aircraft State Data.....	97
242	5.2.12.1.1	A429 Aircraft State	97
243	5.2.12.1.2	Ethernet Aircraft State	99
244	5.2.12.2	Trajectory Intent Data.....	101
245	5.2.12.2.1	A429 Trajectory Intent File Transfer Format	101
246	5.2.12.2.2	Ethernet Trajectory Intent File Transfer Format	103
247	5.2.13	Reserved Ports for Growth	110
248	5.3	Discrete Inputs and Outputs	110
249	5.4	FMC/FMC Intersystem Communications	110
250	5.5	Ethernet Interface (ARINC 646).....	110
251	6.0	CONTROL DISPLAY UNIT INTERFACE	111
252	6.1	General 111	
253	6.2	Standby Navigation	111
254	6.3	Self-Test 111	
255	6.4	MCDU Annunciators.....	111

**ARINC STANDARD 702A
TABLE OF CONTENTS**

256	6.5	MCDU Alerting	111
257	6.6	MCDU Color and Font Usage.....	112
258	7.0	ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE	113
259	7.1	Introduction	113
260	7.2	FMC Outputs to EFI	113
261	7.3	FMC Inputs from EFI	113
262	7.4	EFI Design Features	113
263	7.4.1	Map 113	
264	7.4.2	Plan 113	
265	7.4.3	HSI Mode	114
266	7.4.4	Map Scales.....	114
267	7.4.5	Map Projection.....	114
268	7.4.6	Option Selection	114
269	7.4.7	Symbol Repertoire	114
270	7.4.8	EFI Data Conditioning.....	115
271	7.4.9	Pointing Device.....	115
272	7.4.10	Surface Map Mode	115
273	7.5	FMC Design Features	115
274	7.5.1	Flight Plans.....	115
275	7.5.2	Map Display Edit Areas	116
276	7.5.3	Pointing Device.....	116
277	7.6	Interface Design	116
278	7.6.1	General.....	116
279	7.6.2	Map Data Updating.....	117
280	7.6.3	Background Data Prioritizing	117
281	7.6.4	Background Data Editing	118
282	7.6.5	Mode Change Response	118
283	7.6.6	Map Translation and Rotation Data	118
284	7.6.7	Resolution	119
285	7.6.8	Interface Data Errors	119
286	7.6.9	FMC-to-EFI Data Transfer Protocol	119
287	7.6.9.1	Data Block Format	119
288	7.6.9.2	Data Type Word Formats	120
289	7.6.10	EFI-to-FMC Data Transfer	120
290	8.0	COMMUNICATIONS MANAGEMENT UNIT INTERFACE	121
291	8.1	General 121	
292	9.0	DATA BASE STORAGE CONSIDERATIONS	122
293	9.1	Introduction	122
294	9.2	Navigation Data Base.....	122
295	9.3	Airline Modifiable Information (AMI) Data Base	123
296	9.4	Performance Data Base	123
297	9.5	Magnetic Variation Data Base	124
298	9.6	Terrain and Obstacle Data	125
299	9.7	Airport Surface Map Data	126
300	9.8	Configuration Data Base	126
301	10.0	BUILT-IN TEST AND MAINTENANCE PROVISIONS	127
302	10.1	General Discussion	127
303	10.2	Fault Detection and Reporting.....	127
304	10.2.1	General.....	127
305	10.2.2	Self-Monitoring	127

**ARINC CHARACTERISTIC 702A
TABLE OF CONTENTS**

306	10.2.3	Debugging Tools	128
307	10.2.4	Failure Rate Monitor	128
308	10.2.5	Fault Messaging	128
309	10.3	Ramp Maintenance	128
310	10.3.1	Return to Service Testing	128
311	10.3.2	Programmable Data Bus Interface.....	129
312	10.3.3	Data Loading	129
313	10.3.4	Cross Loadable Software.....	129
314	10.3.5	Data Loading Fault Recovery	130
315	10.4	Provisions for Automatic Test Equipment	130
316	10.4.1	General.....	130
317	10.4.2	ATE Testing.....	130
318	ATTACHMENTS		
319	ATTACHMENT 1	FLIGHT MANAGEMENT SYSTEM.....	131
320	ATTACHMENT 2	FMC CONNECTOR AND INTERWIRING.....	133
321	ATTACHMENT 3	147	
322	ATTACHMENT 4	DATA INPUT/OUTPUT FMC OUTPUTS	148
323	ATTACHMENT 5	ENVIRONMENTAL TEST CATEGORIES.....	152
324	ATTACHMENT 6	FMC/EFI INTERFACE	153
325	ATTACHMENT 7	FMC/DATALINK INTERFACE	174
326	ATTACHMENT 8	CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES.....	262
327	APPENDICES		
328	APPENDIX A	REFERENCE DOCUMENTS.....	269
329	APPENDIX B	ACRONYMS.....	272
330	APPENDIX C	GLOSSARY	276
331			
332			

1.0 INTRODUCTION AND DESCRIPTION

333 1.0 INTRODUCTION AND DESCRIPTION

334 1.1 Purpose and Scope

335 This document sets forth the characteristics of an advanced Flight Management
336 Computer System (FMS) specifically designed for installation in new generation
337 aircraft. The system is also intended for retrofit in aircraft that presently use ARINC
338 700 series equipment. The advanced FMS is expected to provide expanded
339 functional capability beyond that defined in ARINC Characteristic 702, and support
340 the necessary requirements for operation in the future Communication, Navigation,
341 and Surveillance/Air Traffic Management (CNS/ATM) operational environment. As
342 described in ARINC Report 660B, this includes extensive use of Global Navigation
343 Satellite System (GNSS), Required Navigation Performance (RNP) based
344 navigation, air to ground data link for communications and surveillance, and the
345 associated crew interface control/display capabilities. The functional requirements
346 defined herein also apply to a Flight Management Function (FMF) in an integrated
347 modular avionics (IMA) architecture with software partitions.

348 The ICAO Future Air Navigation System (FANS) Standards and Recommended
349 Practices (SARPs) for CNS/ATM are currently evolving and are expected to
350 continue to evolve. The requirements included in this document are intended to
351 support performance based navigation (PBN) and trajectory-based operations
352 (TBO) and be consistent with:

353 ICAO Doc 9613: Performance-Based Navigation Manual (PBN Manual)

354 RTCA DO-236(): Minimum Aviation System Performance Standards: Required
355 Navigation Performance for Area Navigation (RNP MASP), and

356 RTCA DO-283(): Minimum Operational Performance Standards for Required
357 Navigation Performance for Area Navigation (RNP MOPS).

358 This document does not characterize the requirements for a Control Display Unit
359 (CDU). While the CDU is included in the original version of ARINC Characteristic
360 702, the capabilities of the Multi-Purpose Control Display Unit (MCDU) are
361 separately defined in ARINC Characteristic 739.

362 This document defines the functional and interface characteristics of the FMS and
363 assumes that the appropriate MCDU characteristics are defined separately in
364 ARINC Characteristic 739A or elsewhere.

365 ARINC originated with the airlines and the ARINC documents were created as
366 airline requirements for system implementers. Therefore, the use of the word
367 “should” in this document carries with it the expectation of incorporation. This is
368 especially true in the context of fit, form, interface requirements, and crew indication
369 requirements. In allowing for the various architectures described in this document it
370 is still expected that the functions will operate, at a system level, as described in this
371 document.

372

373

COMMENTARY

374 End users should be aware that there can be possible differences in
375 hardware and/or tailored implementation of certain functions from
376 ARINC 702A standard so that the FMC may meet fit, form, and
377 intended functional requirements for the particular airframe.

378 Differences may be due to the various airplane architectures, system

1.0 INTRODUCTION AND DESCRIPTION

379 limitations, and/or specific end user needs which take precedence
380 over complete compliance with ARINC 702A.

381

382 1.2 Relationship to Other Documents

383 This document is one of a family of ARINC Characteristics for advanced navigation
384 equipment that includes:

- 385 • ARINC Characteristic 756: GNSS Navigation and Landing Unit
- 386 • ARINC Characteristic 760: GNSS Navigation Unit

387 The functional characteristics of these three systems are very similar, and
388 consequently, significant portions of these three equipment characteristics are
389 highly common. Users of these documents should consider this commonality issue
390 when planning future revisions.

391 The vast majority of military and government specifications for equipment design
392 and construction usually employ specification language; that is, terms such as thou
393 shalt and thou shalt not. However, that type of language makes it difficult to
394 describe preferences which have grown out of airline experience which designers
395 might weigh differently. For this reason, this characteristic, like other AEEC
396 documents, represents guidance material which attempts to acquaint the
397 manufacturer with the need for specific design practices rather than to tell them that
398 they must meet certain requirements under all circumstances.

399 A complete list of documents referenced herein can be found in Appendix A.

400 1.3 Functional Overview

401 The FMS provides the following functions: navigation, flight planning, lateral and
402 vertical guidance, performance optimization and prediction, air ground data link, and
403 pilot interfaces via the Electronic Flight Information System (EFIS) and MCDU
404 displays or, in newer architectures, a graphical Cockpit Display System (CDS). The
405 following paragraphs provide a summary description of these characteristics, with
406 references to their functional descriptions in later sections of this characteristic.

407 Navigation (Section 4.3.1) - The navigation function determines the position and
408 velocity of the aircraft using input data from all appropriate sources. The outputs
409 include position in terms of altitude, latitude and longitude, and velocity in terms of
410 ground speed and track angle, wind, true and magnetic headings, drift angle,
411 magnetic variation, and inertial flight path angle.

412 Flight Planning (Section 4.3.2) - This function provides the sequence of waypoints,
413 airways, flight levels, departure procedures, and arrival procedures to fly from the
414 origin to the destination and/or alternates. The flight plan may be entered manually
415 on the MCDU or automatically by uplink via the air-ground data link. A navigation
416 data base in the Flight Management Computer (FMC) contains the necessary data
417 associated with every flight plan element identifier for the entire aircraft flight
418 domain.

419 Lateral and Vertical Guidance (Section 4.3.3) - Lateral guidance is computed with
420 respect to geodesic paths defined by the flight plan, and to transitional paths
421 between the geodesic paths, or to preset headings or courses. Vertical guidance is
422 computed with respect to altitudes assigned to waypoints, or to paths defined by

1.0 INTRODUCTION AND DESCRIPTION

423 stored or computed profiles. Speed control along the desired path is provided during
424 all phases of flight.

425 Trajectory Predictions (Section 4.3.3.2.1) - This function predicts distance, time,
426 speed, altitude, and gross weight at each future waypoint in the flight plan, including
427 computed waypoints such as top-of-climb and top-of-descent.

428 Performance Calculations (Section 4.3.4) - The objective of this function is to
429 optimize the vertical and speed profiles to minimize the cost of the flight or meet
430 some other criterion, subject to a variety of constraints.

431 Air-Ground Data Link - Two-way data communication can be provided to the Airline
432 Operations Facility and to Air Traffic Services (ATS). Airline Operational
433 Communication (AOC) data link (Section 4.3.6) is used for flight plans, weather
434 data, takeoff speeds, preflight initializations, etc., from the airline operations facility
435 directly into the FMC. Air Traffic Control (ATC) data link (Section 4.3.7) is used to
436 communicate predefined ATS controller-to-pilot uplink and pilot-to-controller
437 downlink messages via the MCDU.

438 Pilot Interface via the MCDU (Section 6.0) – In legacy architectures, the MCDU is
439 the pilot interface to the FMS. It transmits button pushes to the FMC and displays
440 data on the MCDU screen in response to transmissions from the FMC. The MCDU
441 may also provide backup functions should both FMCs fail. In newer architectures,
442 the MCDU is replaced by a graphical user interface provided by the Cockpit Display
443 System (CDS). The FMS is a User Application (UA) which requests graphical
444 widgets to be displayed on the display and the CDS provides the FMS with actions
445 performed on those widgets. The CDS interface is documented in ARINC 661.

446 COMMENTARY

447 Within this document, references to crew input from the MCDU and
448 display of FMS information on the MCDU should be treated as
449 generic references which also apply to a CDS architecture.

450 Electronic Flight Instrument System (Section 7.0) - The FMC generates a variety of
451 outputs in support of electronic map displays (EMD): Primary Flight Display (PFD),
452 Navigation Display (ND), and optionally a Vertical Situation Display (VSD). Within
453 this document, the terms Electronic Flight Instrument System (EFIS) and Cockpit
454 Display System (CDS) are used in reference to the display system hardware and
455 associated interfaces; the terms EMD, PFD, ND, and VSD are used generically to
456 refer to the various graphical display areas or windows. Based on the interface, the
457 FMC may provide data for use by an external symbol generator or may provide a
458 series of drawing commands. The EFIS ND interface is detailed in Section 7.0; the
459 CDS interface is in ARINC 661. The requirements within this document are intended
460 to be consistent with RTCA DO-257(): *Minimum Operational Performance*
461 *Standards for the Depiction of Navigational Information on Electronic Maps*.

462 COMMENTARY

463 The airlines wish to avoid the installation of equipment that becomes
464 throw-away when additional related functionality is added. Provisions
465 for growth need to be inherent to the initial configuration of the
466 equipment. The equipment also needs to be designed to support the
467 flexibility that allows the airline to configure the system for the specific
468 capabilities required for different aircraft types and operational needs
469 without incurring unnecessary penalties for unused functionality. The

1.0 INTRODUCTION AND DESCRIPTION

470 growth and flexibility provisions must allow the system to be easily
471 upgraded after initial installation and certification to accommodate the
472 changes in airline and airspace operational requirements.

473 1.4 Flight Management Computer Description

474 The FMC should contain all of the components, electronic circuitry, memory, etc.,
475 incident to the functioning of the system. The unit should also contain, as a
476 minimum, sufficient data storage for all required active engine and airplane
477 performance data, all navigation data required to support the active flight plan and
478 any secondary flight plan which may have been entered into the system. The FMC
479 should be capable of storing all data required by the system. The computer should
480 be designed such that normal and abnormal power switching transients and other
481 primary power interruptions as defined in RTCA DO-160() do not cause essential
482 memory contents to be lost. Provisions should be made in the design of the
483 computer to allow for future growth of the system. Expanding the capabilities of the
484 computer should be possible with a minimum of rework and at a minimum cost to
485 the airline customer.

486 1.5 Interchangeability

487 1.5.1 General

488 One of the primary functions of an ARINC Characteristic is to designate, in addition
489 to certain performance parameters, the interchangeability desired for aircraft
490 equipment produced by various manufacturers.

491 1.5.2 Interchangeability for the ARINC 702A Flight Management Computer System

492 System interchangeability of the FMC with respect to the standard aircraft
493 installation is desired regardless of the manufacturing source. The standards
494 necessary to ensure this level of interchangeability are set forth in Section 2.0 of
495 this Characteristic.

496 1.5.3 Generation Interchangeability Considerations

497 The advanced FMS defined by ARINC 702A represents an evolutionary
498 development beyond the FMS defined by ARINC 702. Consequently, general form
499 factors and interwiring are similar, but strict interchangeability is not the intended
500 goal.

501 The air transport industry desires that future evolutionary equipment improvements
502 and the inclusion of additional functions in new equipment during the next few years
503 do not violate the interwiring and form factor standards set forth in this document.
504 Provisions to ensure forward-looking generation interchangeability (as best can be
505 predicted) are included in this document to guide manufacturers in future
506 developments.

507 1.6 Regulatory Approval

508 The equipment should meet all applicable regulatory requirements. This
509 Characteristic does not and cannot set forth the specific requirements that an
510 equipment must meet to be assured of approval. Such information must be obtained
511 from the appropriate regulatory authority.

1.0 INTRODUCTION AND DESCRIPTION

512 1.7 Integrity and Availability

513 Since this equipment is the primary means of navigation on most aircraft, the utmost
514 attention should be paid to the need for integrity and availability in all phases of
515 system design, production, and installation. This equipment should provide the
516 system performance, design and operational integrity, and availability necessary for
517 CNS/ATM and Required Navigation Performance (RNP) operations. Integrity should
518 consider design assurance for reduced risk of operational excursions beyond RNP
519 containment limits, and functional assurance via system capabilities and features
520 consistent with CNS/ATM and RNP operations. The system production and
521 installation processes and methods should be consistent with the required integrity
522 and availability of the system.

523 1.8 Reliability

524 The anticipated operational use of the system demands the utmost attention to the
525 need for reliability in all phases of system design, production, installation, and
526 operation of the FMC. It is of paramount importance to the airlines to operate a
527 trouble-free unit with minimum impact on scheduling and maintenance. A special
528 emphasis should be given to total system quality, including built in testing, ramp
529 testing, and shop testing to increase the Mean Time Between Unscheduled
530 Removals (MTBUR). MTBUR has a profound effect on airline operations despite a
531 high MTBF.

532 COMMENTARY

533 Airlines have a heightened interest in identifying and correcting the
534 root cause(s) of unnecessary LRU removals, many of which result in
535 a No Fault Found (NFF) disposition. Each NFF occurrence
536 represents an unacceptable additional and excessive cost of
537 ownership to the airline. All efforts in the developmental process to
538 eliminate NFF occurrences will help improve the MTBUR.

539 1.9 Testability and Maintainability

540 The total system quality should include adequate ability for the operator to test and
541 maintain the FMS effectively. The FMS designer should confer with the user to
542 establish goals and guidelines for testability to minimize unnecessary removals. The
543 use of advanced Built-In Test Equipment (BITE), ramp testing equipment, and
544 adequate documentation will help the operators improve MTBUR. For airline
545 operations, MTBUR is at least as important, perhaps more so, than MTBF.
546 Testability should provide for the rapid identification of the root cause(s) of repeat
547 removals and ultimate elimination of unconfirmed faults.

548 For shop maintainability, the design of physical access and functional partitioning of
549 the FMS should be such to minimize repair time. Where possible, excessive unit
550 disassembly should not be required for internal component replacement. Full and
551 complete documentation included in a Component Maintenance Manual will also
552 facilitate effective maintainability.

553 1.10 Flight Simulators

554 Flight simulators are recognized as an important part of the aviation industry.
555 Airlines depend upon simulators for flight crew and maintenance training. FMS
556 equipment should be designed for use in flight simulators. Airlines typically desire
557 simulators to be available as early as possible to allow for crew training prior to

1.0 INTRODUCTION AND DESCRIPTION

558 introduction into revenue service. The guidelines of ARINC Report 610(): Guidance
559 for Use of Avionics Equipment and Software in Simulators apply.
560

2.0 INTERCHANGEABILITY STANDARDS

561 2.0 INTERCHANGEABILITY STANDARDS

562 2.1 Introduction

563 This section sets forth the specific form factor, mounting provisions, interwiring,
564 input and output interfaces, and power supply characteristics desired for the Flight
565 Management Computer (FMC). These standards are necessary to ensure the
566 continued independent design and development of both the equipment and the
567 airframe installations. Manufacturers should recognize the practical advantages of
568 developing equipment in accordance with the form factor, interwiring, and signal
569 standards of this document.

570 2.2 Form Factor, Connectors, and Index Pin Coding

571 The FMC should comply with the dimensional standards in ARINC Specification
572 600: Air Transport Avionics Interfaces, for the 8 Modular Concept Unit (MCU) or 4
573 MCU form factor. The FMC should also comply with ARINC Specification 600 with
574 respect to weight, racking attachments, front and rear projections, and cooling.

575 The FMC should be provided with a low insertion force, ARINC 600 Size 2 service
576 connector. This connector should be located on the center grid of the FMC rear
577 panel, and index code 04 should be used. The top and center inserts of the
578 connector Top Plug (TP) and Middle Plug (MP) should each provide 150 socket-
579 type contacts. The lower insert Bottom Plug (BP) should provide 11 pin-type
580 contacts and spaces for two small diameter coaxial contacts. Attachment 2 to this
581 document shows the connector arrangement. Attachment 3 shows the pin
582 assignments.

583 If functions (not assigned pins on the service connector in Attachment 2-2 to this
584 document) are needed to be brought to the outside world to facilitate testing, they
585 should be assigned pins on an auxiliary connector whose type and location is
586 selected by the equipment manufacturer. The manufacturer should refer to ARINC
587 Specification 600 when choosing the location for this connector and note that, other
588 than to accommodate the needs for equipment identification by the ATE described
589 in this document, he is free to make whatever pin assignments he wishes. The
590 airlines do not want the unassigned (future spare) pins of the service connector
591 used for functions associated solely with ATE use.

592 2.3 Standard Interwiring

593 The standard interwiring for the FMC is set forth in Attachment 2-2. The interwiring
594 for a given installation needs only to ensure interconnection with those sub-systems
595 actually installed and supported on a particular aircraft type. Wiring associated with
596 alternate sub-systems shown in Attachment 2-2 need not be installed. Equipment
597 manufacturers are cautioned not to rely on special wires, cabling, or shielding for
598 their particular units because they will not exist in an ARINC 702A installation.

599 2.4 Power Circuitry

600 2.4.1 Primary Power Input

601 The FMC should be designed to use 115 volt 400Hz single phase power from a
602 system designed for Category (A) utilization equipment per ARINC Specification
603 413A.

604 The primary power inputs to the FMC will be protected by a circuit breaker.
605 Installation designers should note that the FMC circuit breaker may need to be
606 capable of handling the current drain of an ARINC 615 or 615A data loader. When

2.0 INTERCHANGEABILITY STANDARDS

607 such a device is used with the FMC, it may derive its power from the FMC power
608 source.

609 The equipment designer should be aware that severe switching and other transient
610 interruptions to primary power occur during normal aircraft operations. He should
611 ensure that such interruptions do not cause the computer to lose the contents of its
612 memory or impose the need to provide an external battery to maintain operations.
613 No pilot action should be needed to cause the system to return to normal operation
614 following such normal power interruptions.

615 Equipment designers should take precautions to prevent anomalous operation of
616 equipment during and after interruptions or transients in the aircraft power system.
617 The equipment should, as a design goal, continue normal operation while sourcing
618 current to all active guidance and flag outputs during power interruptions of up to
619 200 milliseconds. If the equipment shuts down during a power interruption, normal
620 operation should resume without the need to recycle circuit breakers or clear
621 memories when power is restored.

622 System response and data retention requirements for primary power interruptions
623 longer than 200 milliseconds are discussed in Section 3.3.

624 Note: Airframe installation designers should verify that the aircraft
625 power systems satisfy the primary power interruption criteria
626 of ARINC Specification 413A.

627 **2.4.2 Power Control Circuitry**

628 There should be no master on/off power switching within the FMC system.

629 **2.4.3 The AC Common Cold**

630 The wire connected to the FMC connector pin labeled 115 VAC Cold will be
631 grounded to the same structure that provides the dc chassis ground but at a
632 separate ground stud. Airframe manufacturers are advised to keep AC ground wires
633 as short as practicable in order to minimize noise pick-up and radiation.

634 **2.4.4 The Common Ground**

635 The wire connected to the FMC connector pin labeled Chassis Ground should be
636 employed as the DC ground return to aircraft structure. It is not intended as a
637 common return for circuits carrying heavy ac currents, and equipment
638 manufacturers should design their equipment accordingly.

639 **2.4.5 Batteries**

640 If battery devices are used in equipment designs, they should not degrade the
641 MTBF and MTBUR targets for the equipment and should also have a life
642 expectancy greater than the MTBF target.

643 **COMMENTARY**

644 Airline experience has shown that batteries have proven to be
645 maintenance problems in avionics equipment. Manufacturers may
646 consider the use of batteries to hold-up memory devices through
647 power transients or long term power outages. Batteries might also be
648 utilized to maintain real time clock circuits or for other purposes.
649 However, the airlines encourage the manufacturers to consider other
650 design solutions instead of using batteries for these functions.

2.0 INTERCHANGEABILITY STANDARDS

651 2.5 Standardized Signaling

652 The desire for interchangeability necessitates standardization of the FMC input and
653 output interface parameters.

654 The FMC should be capable of exchanging data in digital form and as discrete
655 inputs and outputs. The characteristics of digital signals and discrete signals are
656 defined herein. These standards should be used as design guidelines to assure the
657 desired interchangeability of equipment.

658 Certain basic standards established herein are applicable to all signals. Unless
659 otherwise specified, the signals should conform with the standards set forth in the
660 subparagraphs below.

661 2.5.1 General Accuracy and Operating Ranges

662 The accuracies specified herein should apply under all combinations of the
663 environmental conditions referenced in Section 2.5 of this document. Accuracy
664 measurements should be made on the assumption that the inputs to the FMC are
665 perfect. Accuracies are specified on the basis of 95% of observations and do not
666 include typical reading inaccuracies of the pilot's instruments.

667 2.5.2 Resolution

668 For the purposes of this Characteristic, the resolution or the function threshold
669 sensitivity is considered to be the maximum cyclic input change (double amplitude)
670 that can occur without detectable change in the output. The specific figures set forth
671 for threshold sensitivity of each function should be made without vibration of any
672 kind being applied and it should be checked approaching the reading with signals
673 from either direction.

674 2.5.3 ARINC 429 Data Bus

675 The FMS equipment utilizes digital signal interfaces defined by ARINC Specification
676 429: Digital Information Transfer System (DITS).

677 ARINC 429 data bus input labels are defined in Attachment 4 of the document.
678 Material in this document is included for reference purpose only.

679 COMMENTARY

680 In the event of conflict between this document and ARINC
681 Specification 429, the equipment designer is encouraged to contact
682 the supplier of equipment sourcing the ARINC 429 data words.

683 ARINC 429 data bus output labels sent by the FMS are defined in Attachment 4 of
684 this document. Material in this document is intended to be used by the FMS
685 equipment designer.

686 2.5.4 Standard "Open"

687 The standard "open" signal is characterized by a resistance of 100,000 ohms or
688 more with respect to signal common.

689 COMMENTARY

690 In many installations, a single switch is used to supply a logic input to
691 several Line Replaceable Units (LRUs). One or more of these LRUs
692 may utilize a pull up resistor in its input circuitry. The result is that an

2.0 INTERCHANGEABILITY STANDARDS

693 open may be accompanied by the presence of +27.5 VDC nominal.
 694 The signal could range from 18.5 to 36 VDC.

2.5.5 Standard “Ground”

696 The standard “ground” signal may be generated by either a solid state or
 697 mechanical type switch. For mechanical switch type circuitry, a resistance of 10
 698 ohms or less to signal common would represent the ground condition.
 699 Semiconductor circuitry would exhibit a voltage of 3.5 VDC or less with respect to
 700 signal common in the ground condition.

2.5.6 Standard “Applied Voltage” Output

702 The standard “applied voltage” is defined as having a nominal value of +27.5 VDC.
 703 This voltage should be considered to be applied when the actual voltage under the
 704 specified load conditions exceeds 18.5 VDC (+36 VDC maximum) and should be
 705 considered to be not applied when the voltage at the output is 3.5 VDC or less when
 706 loaded with no less than 50,000 ohms.

2.5.7 Standard Discrete Input

708 A standard Discrete Input should recognize incoming signals having two possible
 709 states, open and ground. The characteristics of these two states are defined in
 710 Sections 2.5.4 and 2.5.5. The maximum current flow in the ground state should not
 711 exceed 20 milliamperes.

COMMENTARY

713 Some older installations use a number of voltage levels and
 714 resistances for discrete states. In addition, the assignments of valid
 715 and invalid states for the various voltage levels and resistances were
 716 sometimes interchanged, which caused additional complications. A
 717 single definition of discrete levels is being used in an attempt to
 718 standardize conditions for discrete signals. The voltage levels and
 719 resistances used are, in general, acceptable to hardware
 720 manufacturers and airlines. This definition of discrete is also being
 721 used in the other ARINC 700-series characteristics. However, there
 722 are few exceptions for special conditions.

723 The logic sources for the Discrete Inputs to the unit are expected to take the form of
 724 switches mounted on the airframe component (flap, landing gear, etc.) from which
 725 the input is desired. These switches will either connect the Discrete Input pins on
 726 the connector to airframe dc ground or leave an open circuit as necessary to reflect
 727 the physical condition of the related components. The unit will, in each case, be
 728 expected to provide the DC signal to be switched. Typically, this is done through a
 729 pull-up resistor. The equipment input should sense the voltage on each pin to
 730 determine the state (open or closed) of each switch.

731 The selection of the values of voltages and resistances is based on the assumption
 732 that the Discrete Input will utilize a ground-seeking circuit. When the circuit senses a
 733 low resistance or a voltage of less than +3.5 VDC, current flow from the input will
 734 signify a ground state. When a voltage level between +18.5 and +36 VDC is present
 735 or a resistance of 100,000 ohms or greater is connected to the input, little or no
 736 current should flow. The input should be in a quiescent state. The input should also
 737 utilize an internal pull-up to provide for better noise immunity when a true open is
 738 present at the input.

2.0 INTERCHANGEABILITY STANDARDS

739 The probability is quite high that the sensors (switches) will be providing similar
 740 information to a number of users. The probability is also high that unwanted signals
 741 may be impressed on the inputs to the unit from other equipment, especially when
 742 the switches are in the open condition. For this reason, equipment manufacturers
 743 are advised to base their logic sensing on the ground (less than +3.5 VDC) state of
 744 each input. Also, both equipment and airframe suppliers are cautioned concerning
 745 the need for isolation to prevent sneak circuits from contaminating the logic.
 746 Typically, diode isolation is used in the avionics equipment to prevent this from
 747 happening.

748 2.5.8 Standard Discrete Output

749 A standard Discrete Output should exhibit two states, open and ground, as defined
 750 in Sections 2.5.4 and 2.5.5. The open state of each discrete is defined as a voltage
 751 greater than +18.5 VDC (+36 VDC max.), or a resistance of 100,000 ohms or more,
 752 from the assigned equipment connector pin to airframe dc ground. The ground state
 753 is defined as a voltage less than +3.5 VDC (0 VDC min.) to airframe dc ground at
 754 the assigned pin. The maximum current flow through the discrete wire in the ground
 755 state should not exceed 20 mA.

756 COMMENTARY

757 The probability is quite high that the switches will be providing similar
 758 information to a number of users. The probability is also high that
 759 unwanted signals may be impressed on the inputs to the unit
 760 especially when the switches are in the open condition. For this
 761 reason, equipment manufacturers are advised to base their logic
 762 sensing on the standard ground (less than +3.5 VDC) state of each
 763 input. Avionics suppliers are alerted to the need for isolating diodes in
 764 the equipment to prevent sneak circuits from contaminating the logic.

765 2.5.9 Ethernet Interface

766 ARINC Specification 646: Ethernet Local Area Network (ELAN) defines the
 767 characteristics of this interface. In the event of conflict between this document and
 768 ARINC Specification 646, the latter should be assumed to be correct.

769 2.5.10 Standard Annunciators

770 A standard annunciator output should exhibit the same characteristics as the
 771 standard discrete output described in Section 2.5.8, except the annunciator output
 772 should be capable of sinking up to 200 mA when in the ground state.

773 2.6 Environmental Conditions

774 The FMC should meet the requirements of the latest versions of RTCA DO-160()
 775 and EUROCAE ED-14(). Attachment 5 to this document tabulates the relevant
 776 environmental categories.

777 2.7 Cooling

778 The FMC may be designed to utilize, and the airframe installation should provide,
 779 cooling air in the manner described in Section 3.5 of ARINC Specification 600. The
 780 airflow rate provided to the FMC in the aircraft installation should be 44 kg per hour
 781 and the pressure drop of the coolant airflow through the equipment should be 25 ± 5
 782 mm of water at this rate. The unit should be designed to expend the pressure drop
 783 in a manner to maximize the cooling effect within the equipment. Adherence to the
 784 pressure drop standard is needed to allow interchangeability of equipment.

2.0 INTERCHANGEABILITY STANDARDS

785 In addition to the above, individual aircraft installations may require operation with
786 loss of cooling air to meet Extended-Range Twin-Engine Operations (ETOPS)
787 operating requirements.

788 **COMMENTARY**

789 Current ETOPS rules can require operation up to 180 minutes
790 without cooling air.

791 Equipment failures in aircraft due to inadequate thermal management
792 have plagued the airlines for many years. Section 3.5 of ARINC
793 Specification 600 provides design guidance for airframe equipment
794 suppliers to prevent such problems in the future. Airlines regard this
795 material as required reading for all potential suppliers of unit and
796 aircraft installations.

797 **2.8 Weights**

798 System manufacturers should take note of the guidance information on weights
799 contained in ARINC Specification 600.

800 **2.9 Grounding and Bonding**

801 The attention of equipment and airframe manufacturers is drawn to the guidance
802 material in Section 3.2.4 of ARINC Specification 600 and Appendix 2 of ARINC
803 Specification 404A on the subject of equipment and radio rack grounding and
804 bonding.

805 **COMMENTARY**

806 A perennial problem for the airlines is the location and repair of
807 airframe ground connections whose resistance has risen as the
808 airframe aged. A high resistance ground usually manifests itself as a
809 system problem that resists all usual approaches to rectification, and
810 invariably consumes a wholly unreasonable amount of time and effort
811 on the part of maintenance personnel to fix. Airframe manufacturers
812 are urged, therefore, to pay close attention to assuring the longevity
813 of ground connections.

3.0 SYSTEM DESIGN CONSIDERATIONS

814 3.0 SYSTEM DESIGN CONSIDERATIONS

815 3.1 System Configurations

816 Different configurations of the ARINC 702A Flight Management Computer System,
817 illustrated in ATTACHMENT 1 to this document, are described in this section. The
818 FMC is expected to be capable of operating interchangeably in all configurations. In
819 an IMA architecture, the FMF is analogous to the FMC for the purpose of these
820 system configurations.

821 3.1.1 Single System Configuration

822 In this configuration, the system accepts inputs from one, two, or three Inertial
823 Reference System (IRS), Air Data/Inertial Reference System (ADIRS), or Altitude
824 Heading Reference System (AHRS); one or two GNSS Sensors; two each Air Data
825 System, VHF Omni-Range Navigation (VOR), and Distance Measuring Equipment
826 (DME); and one Instrument Landing System (ILS)/Microwave Landing System
827 (MLS) to provide the various navigation and guidance functions. An ARINC 615 and
828 ARINC 615A (growth) data loader input is provided for both software and navigation
829 data base loading. Also, an interface is provided for an ACARS Management Unit
830 (MU) or an ARINC 758 Communications Management Unit (CMU) Mark 2.

831 Inputs of fuel quantity, fuel flow, and engine/airplane configuration parameters and
832 inputs from the flight control computer (and for some installations, the thrust control
833 computer) combined with the air data inputs are used to provide the performance
834 and prediction functions. Initial condition inputs may be inserted manually using the
835 MCDU, automatically from airplane sensor systems or loaded using the data link
836 function.

837 The system should be capable of driving two flight control computers and two
838 communication management units, and independently driving two navigation
839 displays.

840 3.1.2 Single System/Dual MCDU Configuration

841 In this configuration, the interface is the same as for the single system, with the
842 addition of a second MCDU. Both MCDUs have the capability of data entry and
843 display independently.

844 3.1.3 Dual System Configuration

845 A typical Flight Management System installation is dual, consisting of two MCDUs
846 and two FMCs. The FMCs are linked together via the intersystem bus and both the
847 MCDUs are connected to both FMCs. MCDU button pushes are processed for
848 mode control and display changes. The left and right MCDUs may be operated
849 independently; they can display different data pages and the crew can insert data
850 using either of them to affect the FM operation. The FMCs transmit certain data to
851 each other for comparison and validation. For example, if the computed position
852 between the FMCs differs by more than a set threshold, a message is issued to
853 warn the crew.

854

855 Please refer to Section 3.5 for Dual System Design Considerations.

3.0 SYSTEM DESIGN CONSIDERATIONS**856 3.1.4 Other Configurations**

857 Some installations have provided for a third MCDU since one of the MCDUs is
858 primarily used to manage the data link activity. For this configuration, the third
859 MCDU may be used as a repeater that can be switched in or out as necessary.

860 Additionally, some installations have provided for a third FMC. This unit is usually
861 not synchronized with the other two FMCs unless it is switched in as a replacement
862 because of a unit failure. At this point the unit is fully synchronized by the remaining
863 FMC and used in the dual configuration.

864 3.2 Certification Design Considerations**865 3.2.1 Partitioning Considerations**

866 Manufacturers should carefully consider the internal structure of software in
867 partitioning sub-functions within an overall function. In an integrated architecture,
868 the FMF may be a partition within a system which provides all CNS/ATM airborne
869 functions. The flight management function itself may consist of several sub-
870 functions such as Navigation, Flight Planning, Crew Interface, I/O, etc., which may
871 be separate partitions. As the objectives of software partitioning are efficient design
872 and effective functional allocation, as well as reduced software change costs and
873 lead times, manufacturers must ensure that the software structure eliminates the
874 need to revalidate software partitions and modules that have not been affected by a
875 particular change.

876 In some configurations, the system may be a mixed criticality unit. In other words,
877 this unit may house software of more than one DO-178B/C level. In these
878 configurations, manufacturers must ensure that partitioning is robust enough to
879 accommodate changes in any lower level software (i.e., less critical software)
880 without mandating the rigors of the more critical software validation, certification,
881 and maintenance.

882 3.2.2 Operational Functional Independence

883 While the system makes extensive use of shared resources as a multi-function
884 system (e.g., power supplies, processors), manufacturers may provide for some
885 system functions to be retained during failure conditions.

886 COMMENTARY

887 Airlines strongly desire to continue to operate the system even if one
888 or more functions or external interfaces have failed, as long as the
889 aircraft operation is not predicated on the use of the failed sensor or
890 function(s). Therefore, a failure condition unique to one function or
891 sensor should not adversely impact normal operation of any other
892 system functions.

893 3.2.3 Unit Identification Considerations**894 COMMENTARY**

895 Avionics and airframe manufacturers are strongly encouraged to
896 implement an FMS unit identification methodology that does not
897 correlate the software version with the basic face plate part number
898 of the unit. The objective is that a software revision should not result
899 in the re-identification – part number roll – of the unit. A further
900 objective is that a common FMS platform (i.e., a single face plate part

3.0 SYSTEM DESIGN CONSIDERATIONS

901 number) could be used across multiple fleets and airframe
902 manufacturers without re-identification of the unit, even if fleet
903 specific software is required for each fleet type.

904 With this approach an individual manufacturer's part numbers are
905 assigned and maintained for (1) the FMC hardware, (2) the FMC
906 software, and (3) the overall unit (i.e., face plate part number). In this
907 case, the face plate part number is referred to as the generic or
908 system part number and is not affected by normal revisions to the
909 FMS software (e.g., all software or data that can be loaded into the
910 unit via a data loader will not require a re-identification of the unit).

911 For this scenario, the operator may stock a given FMC under its
912 system part number. This unit could be effective across multiple fleet
913 types, each with fleet specific software requirements. When an FMC
914 is replaced on an aircraft, the software configuration can be verified
915 from the MCDU. If necessary, the FMC may be loaded with the
916 applicable certified software for that fleet via data loader or system
917 crossload.

918 This scheme allows the operator to minimize sparing when a given
919 FMC is used on multiple fleet types, even when unique software is
920 required for each fleet. It will also enable new FMC software loads on
921 the aircraft without requiring a revision to the FMC ID plates or the
922 aircraft Illustrated Parts Catalog (IPC).

923 3.3 System Response to Power Interrupts

924 An appropriate period of time, usually between 5 and 10 seconds, should be
925 selected to differentiate between inadvertent power loss and normal equipment turn
926 on. The reason for this distinction is to provide a basis for when the system should
927 be reinitialized.

928 For power outages greater than this time period, the system should automatically
929 perform a power-up test cycle. Failure to complete this test cycle successfully
930 should cause appropriate flight deck annunciation. The system should also reset
931 any flight dependent data such as initial position, flight plan, performance
932 initialization, etc., and prompt the crew for entry of this data. Configuration related
933 data from program strapping, configuration files, or Airplane Personality Module
934 (APM) should be read.

935 For power outages less than this time period the system should resume normal
936 functions as quickly as possible. The power up test cycle should not be performed
937 and initialization, configuration, and flight plan data should not be reset and the crew
938 should not be prompted for data entry. The crew may be prompted to select the
939 appropriate fly-to waypoint since flight plan points may have been passed during the
940 power outage.

941 COMMENTARY

942 Some systems may also make a distinction of being on the ground or
943 in the air. Typically, in-air power ups will be treated as inadvertent
944 power outages regardless of the power outage time period. The
945 system should be designed to protect data from a power interrupt for
946 a period of time consistent with its intended use. Since some
947 methods of protecting data do not ensure data validity indefinitely,

3.0 SYSTEM DESIGN CONSIDERATIONS

948 data integrity should be checked before it is used after a power
949 outage, especially if the system uses in-air status for determining
950 normal power turn on.

951 3.4 FMC Performance

952 3.4.1 Accuracy, Integrity, and Continuity

953 Accuracy, integrity, and continuity requirements for the Lateral Guidance function
954 are defined by the DO-283(). DO-283() also addresses accuracy requirements for
955 the Vertical Guidance and Trajectory Predictions functions.

956 The system design should comply with the aeronautical data quality and integrity
957 requirements set forth in RTCA DO-200A() and RTCA DO-201A().

958 The system should ensure data integrity in all operations such as:

- 959 • Dataload of program and databases into system memory
- 960 • Reading of program and databases from memory
- 961 • Input of sensor information into the system
- 962 • Entry and edit of information in the flight plan
- 963 • Navigation, performance, and guidance computations
- 964 • Output of information to the various external systems and displays

965 3.4.2 Response Time

966 Specification of precise response time standards is dependent on the detailed
967 system operational design. This section provides general guidelines that should be
968 considered by system designers in determining computer processing requirements
969 and software architecture.

970 Unless explicitly stated otherwise, flight plan response times throughout this
971 document are for modifications to the active flight plan. The response times listed
972 below are from the completion of crew action until the output of data on the display.

973

Task Description	Max. Response Time
Direct to a Waypoint - Display of direct-to lateral path on ND	2 seconds
Lateral Guidance Output following flight plan change	3 seconds
Revise Speed or Altitude Constraint in climb or cruise – Time to display target altitude and target speed	3 seconds
Revise Speed or Altitude Constraint in descent (no RTA) - Time to display target altitude, target speed, and vertical deviation	5 seconds
Revise RTA target speed	30 seconds (15 seconds typical)
Full Flight Plan Prediction – 4D Trajectory (Note 1)	30 seconds (15 seconds typical)
Background data update in response to a Mode, Scale, or Option change on the Navigation Display	1 second
Software and Data Base Loading (Note 2)	Goal: Less than 15 minutes
ATS Uplink Messages	Note 3
ATS Downlink Messages	Note 3

3.0 SYSTEM DESIGN CONSIDERATIONS**Figure 3.4.2-1 Response Time Requirements**

974

975

976

NOTES

977

978

979

980

981

982

983

984

985

986

987

1. 4D Trajectory includes predictions of distance, altitude, airspeed, time, and fuel. The response time depends on many factors such as the number of flight plan waypoints.
2. The response time depends on file size, media, and/or data loader interface. Refer to Section 10.3.3 for additional data loader requirements.
3. The International Civil Aviation Organization (ICAO) CNS/ATM-1 SARPS allocate part of the total system end to end response time to the avionics. Further allocation to individual avionics subsystems (e.g., FMS, CMU, EFIS) is system architecture dependent and beyond the scope of this document.

988

3.5 Dual System Design Considerations

989

990

991

992

993

994

995

Different approaches may be followed in defining the functional architecture of the dual system installation. Design considerations should include operational independence of the two MCDUs, redundancy management, system integrity, functional availability, and failure response mechanisms. The dual FMCs should exchange information so that in the event of a failure or loss of power in one FMC, the second FMC is available for engagement without additional crew input and without significant discontinuity in the outputs.

996

997

998

999

1000

1001

1002

In a dual synchronous configuration, one of the FMCs is designated as master and the other as slave. The master designation may be based on the FMC operational status, autopilot or flight director engagement logic, and for some installations, a source select switch. The master FMC performs tasks such as directing the slave to tune radios, determining the order of MCDU button push processing, initiating flight plan leg sequencing, and other system events. Otherwise, the FMCs operate independently.

1003

1004

1005

1006

In another possible dual configuration, a master FMC may be designated that directs all FM operations and synchronizes its data with the spare FMC such that the spare FMC can resume FM operations should the master fail or the spare be selected as the master. Other dual system configurations may exist as well.

1007

1008

4.0 FLIGHT MANAGEMENT FUNCTIONS1009 **4.0 FLIGHT MANAGEMENT FUNCTIONS**1010 **4.1 Introduction**

1011 This section describes the characteristics of the flight management functions.

1012 **4.2 Functional Initialization and Activation**1013 **4.2.1 Navigation Sensor Initialization**

1014 The system should provide for the initialization of various navigation sensors.

1015 **4.2.1.1 IRS Initialization**

1016 The system should be capable of initializing up to three ARINC 704 Inertial
1017 Reference Systems or ARINC 738 ADIRS when called upon to do so by flight crew
1018 action at the MCDU. In response to this initialize command, the system should
1019 output on its general data buses a burst of not more than four or less than two initial
1020 position latitude/longitude pairs. This data should consist of BCD-encoded set
1021 latitude and set longitude words having the labels and data standards defined for
1022 these quantities in ARINC Specification 429. Position data can be entered as a
1023 latitude/longitude or selected from the navigation data base as an airport and
1024 optionally gate, or input from the Global Navigation Satellite System Unit (GNSSU).

1025 **4.2.1.2 IRS Heading Set**

1026 The system should also be optionally capable of setting the IRS magnetic heading
1027 output to the value entered by the crew at the MCDU. The system should respond
1028 to the set heading command by transmitting a burst of not more than four or less
1029 than two BCD-encoded set heading words. ARINC Specification 429 defines the
1030 applicable label and data standards. Consult ARINC Specification 704: Inertial
1031 Reference System, for further information on initialization and heading set.

1032 **4.2.1.3 GNSS Initialization**

1033 The system should be optionally capable of initializing up to two ARINC 743A
1034 GNSS Sensors when called upon to do so by flight crew action at the MCDU. In
1035 response to this initialize command, the navigation system should output on its
1036 general data buses, current time and date and a burst of not more than four or less
1037 than two initial position of a latitude/longitude pair. This data should consist of BNR
1038 encoded current time in Universal Time Coordinated (UTC), and BCD encoded
1039 current date, set latitude, and set longitude words.

1040 **COMMENTARY**

1041 GNSS sensors may be indirectly connected to the navigation system
1042 through the IRS or ADIRS.

1043 **4.2.2 Flight Plan Initialization and Activation**

1044 There are various methods for constructing a flight plan such as:

- 1045 • Pre-defined company routes
- 1046 • Entry using FROM/TO format
- 1047 • Menu selection of procedures and/or airways
- 1048 • Individual waypoint entry
- 1049 • Flight Plan Copy
- 1050 • AOC/ATC Uplink

4.0 FLIGHT MANAGEMENT FUNCTIONS

1051 Refer to Section 4.3.2.4 for additional details regarding these methods.

1052 This initialization should be performed for every desired flight plan type. Once a
1053 flight plan has been constructed facilities should be provided to allow the crew to
1054 select a flight plan as the active flight plan or route.

1055 4.2.3 Performance and Predictions Initialization

1056 To initialize performance and trajectory prediction computations, gross weight (or
1057 zero fuel weight and block fuel), cost index, and cruise altitude are required as a
1058 minimum. Other vertical flight planning parameters may also be initialized as
1059 desired. These are discussed in Section 0.

1060 The trajectory prediction function also requires a specified flight plan or routing;
1061 most of the performance functions do not.

1062 4.2.4 Lateral and Vertical Guidance Activation

1063 Lateral Guidance computations are activated by position initialization and the
1064 presence of an active route. Vertical Guidance computations are activated by crew
1065 entry of gross weight, cost index, and cruise altitude. Coupled guidance can be
1066 selected using the AFCS Control Panel. In most systems, lateral and vertical
1067 guidance are independent selections on the AFCS Control Panel. Of those systems
1068 with independent selections, lateral guidance may or may not be a prerequisite for
1069 vertical guidance. Both methods are acceptable. In some systems, vertical guidance
1070 managed speed control (i.e. control to the FMF vertical guidance speed target) can
1071 be selected independent of vertical guidance level change control. On other
1072 systems, vertical guidance managed speed control requires managed level change
1073 control. Both methods are acceptable.

1074 4.2.5 Use of Data Link for System Initialization

1075 The data link function can also be used to provide initialization data as described in
1076 Sections 4.2.2 and 4.2.3.

1077 4.3 Functional Description

1078 4.3.1 Navigation

1079 The navigation function furnishes continuous, real-time, three dimensional solutions
1080 to the crew and provides the following navigational outputs:

- 1081 • Estimated Aircraft Position (latitude, longitude, altitude)
- 1082 • Aircraft Velocity
- 1083 • Drift Angle (optional)
- 1084 • Track Angle
- 1085 • Magnetic Variation (optional)
- 1086 • Wind Velocity and Direction
- 1087 • Time
- 1088 • Required Navigation Performance (RNP)
- 1089 • Actual Navigation Performance (ANP) or Estimate of Position Uncertainty
1090 (EPU)

4.0 FLIGHT MANAGEMENT FUNCTIONS

1091

COMMENTARY

1092

For the purpose of this document, ANP and EPU are intended to mean the same thing. In system architectures utilizing IRS sensors, drift angle and magnetic variation may be provided directly by the IRS

1093

1094

1095

and are not required to be computed by the FMS.

4.0 FLIGHT MANAGEMENT FUNCTIONS

1096 For vertical aspects, the navigation function provides altitude, vertical speed and
 1097 flight path angle. Unless explicitly stated otherwise, altitude computations operate
 1098 upon inputs of smoothed inertial altitude from the Inertial Reference Units (IRUs),
 1099 Air Data/Inertial Reference Units (ADIRUs), or Attitude and Heading Reference
 1100 System AHRS, corrected by barometric (corrected or uncorrected) pressure altitude
 1101 from the air data system. Flight path angle is derived from vertical speed and
 1102 computed ground speed.

1103 4.3.1.1 Multi-Sensor Navigation

1104 The navigational output data is computed using the following:

- 1105 • Attitude and Heading
 - 1106 ○ IRU or
 - 1107 ○ ADIRU or
 - 1108 ○ AHRS
- 1109 • GNSS Receiver
- 1110 • DME Transponder
- 1111 • VOR/LOC Receiver
- 1112 • ILS/MLS Receiver(s)
- 1113 • Air Data Computer

1114 The navigation function automatically selects the combination of available sensors
 1115 that provides the best solution for estimating the aircraft position and velocity. Using
 1116 the sensor accuracy characteristics, sensor raw data, and information about the
 1117 current conditions, the best combination of position sensors (GNSS, IRU, DME,
 1118 VOR, etc.) is selected to minimize the position determination error.

1119 As a minimum, the navigation function must provide for GNSS data integrated with
 1120 a heading/attitude sensor and air data system as some aircraft installations may not
 1121 include other navigation radios. Adequate navigation availability must be a
 1122 consideration in any implementation.

1123

1124 4.3.1.2 Navigation Modes

1125 Available navigation sensor data is validated before it is used for updates to the
 1126 aircraft position. On aircraft with IRUs installed, the primary mode of operation
 1127 utilizes IRS heading, attitude, position, and velocity, with IRS position and velocity
 1128 combined with GNSS or VHF radio data (e.g. DME, Tactical Air Navigation System
 1129 (TACAN), VOR, and LOC). On aircraft without IRUs the primary mode of operation
 1130 is position and velocity from available sensors with heading and attitude being
 1131 provided from an AHRS. The filtering algorithm should give appropriate weighting
 1132 based on the sensor accuracy and should provide for sensor error modeling such
 1133 that the navigation solution accuracy can be maintained through short term
 1134 unavailability of various sensors. The navigation function should behave smoothly
 1135 regardless of sensor availability or sensor transitions.

1136

COMMENTARY

1137 With the transition to RNP-based navigation, standardized navigation
 1138 sensor selection logic is not required; however, in some

4.0 FLIGHT MANAGEMENT FUNCTIONS

1139 implementations, a navigation mode sensor hierarchy such as the
1140 following may be utilized:

- 1141 • LOC (approach only)
- 1142 • GNSS
- 1143 • DME/DME
- 1144 • DME/VOR

1145 It may be desirable for non-IRU aircraft to correct heading/attitude sensor data
1146 based on the other available sensors to provide for a more accurate coasting mode
1147 of operation.

4.3.1.3 RNP-Based Navigation

1149 The navigation function should satisfy the accuracy, integrity, and availability criteria
1150 set forth for aircraft systems intended to operate in RNP airspace. The systems
1151 criteria are specified in DO-236() and DO-283().

1152 The capabilities of the system should encompass position estimation, path
1153 definition, and path control and tracking, as well as computing position uncertainty.
1154 These capabilities, in addition to a means to evaluate and mitigate flight technical
1155 error, should form the basis for evaluating and determining total aircraft systems
1156 performance for RNP operations. The system should provide design, function, and
1157 operational integrity to ensure acceptable, repeatable, and error-free performance.
1158 The system should provide for clear and unambiguous indications of the navigation
1159 situation, including alerting to the flight crew when the navigation system does not
1160 comply with the requirements of the RNP airspace.

COMMENTARY

1162 RNP is the required navigation performance necessary for operation
1163 within a defined airspace. RNP is specified in terms of accuracy,
1164 containment integrity, containment continuity, and availability of
1165 navigation signals and equipment for a particular airspace, route or
1166 operation.

1167 The intent of the material in this section is to provide additional insight
1168 into RNP criteria, especially system and integration considerations.

4.3.1.3.1 RNP Determination

1170 The system should provide the appropriate RNP selection and entry capabilities to
1171 support determination of the applicable RNP for a flight plan path terminator (leg),
1172 procedure, or environment based upon the following, in order of priority:

- 1173 • Manual RNP entry by the crew
- 1174 • Leg-Based RNP value from the navigation data base or ATS datalink
- 1175 • The default RNP value

COMMENTARY

1177 RNP flight plans will consist of a limited subset of the path
1178 terminators defined in Section 4.3.2.2. These RNP routes and
1179 procedures will contain embedded information which establishes the
1180 RNP values which apply to the active or next path terminator; in the
1181 absence of the embedded RNP information, RNP may be determined

4.0 FLIGHT MANAGEMENT FUNCTIONS

1182 or designated by default according to the airspace or environment.
 1183 When the system is operated using the default RNP values, the
 1184 system will require navigation environment (i.e. oceanic, enroute,
 1185 terminal, approach) logic to ensure the proper transition from one
 1186 RNP default value to another.

1187 The system should output the current RNP and ANP values on the general-purpose
 1188 output busses.

1189

4.3.1.3.1.1 Manually Entered RNP Values

1191 The system should support manual entry within a range of possible RNP values
 1192 appropriate for the PBN operation to be flown.

1193 A manually entered RNP value should supersede any pre-programmed RNP value
 1194 associated with a route, procedure or leg, or any default value. The manually
 1195 entered RNP value should be clearly distinguishable as a manually entered value.
 1196 In the event of a manually entered value larger than the value being overridden, an
 1197 advisory alert or annunciation, as appropriate, should be provided to the crew.
 1198 When a manual entry is deleted, the system should return to the appropriate RNP
 1199 value based upon its priority. Unless deleted by the crew, the manual entry should
 1200 remain the active RNP value.

1201

COMMENTARY

1202 The annunciation and alerting requirement for manually entered RNP
 1203 values which exceed the active RNP value may be applied in various
 1204 ways. One instance is upon entry of the value; this assures pilot
 1205 awareness of his action relative to overriding limits applicable to the
 1206 route, procedure, leg, or airspace, and which form the basis for
 1207 separation. However, conditions such as NOTAMs or diversions due
 1208 to weather may be among the reasons why a manual entry is made.
 1209 Once accepted, the system should also actively monitor the manual
 1210 entry relative to the RNP for the procedure, route, leg or default, in
 1211 the event they change to a smaller value. Advance annunciation or
 1212 alerting would also be advisable in this case.

4.3.1.3.1.2 Preplanned RNP Values

1214 When an RNP approach procedure offers multiple lines of minima, the system
 1215 should allow the flight crew to specify or pre-select the desired RNP value for the
 1216 final approach segment.

1217

COMMENTARY

1218 Some RNP Authorization Required (AR) approaches are designed with multiple
 1219 lines of minima corresponding to the respective RNP requirement. For these
 1220 approaches, ARINC 424 specifies that the least restrictive "level of service" be
 1221 coded in the primary record of the approach procedure. Additional lines of minima
 1222 are contained in the approach continuation records. For RNP approaches designed
 1223 with multiple RNP values associated with lines of minima, the flight crew may desire
 1224 a more restrictive RNP value than the one coded in the NDB. The system should
 1225 provide a means for the flight crew to specify or pre-select the RNP value to use on
 1226 the final approach segment prior to commencing the procedure.

1227

4.0 FLIGHT MANAGEMENT FUNCTIONS

1228 **4.3.1.3.1.3 Leg-Based RNP Values**

1229 The system should support the definition of an RNP on a leg-by-leg basis. The Leg-
1230 Based RNP value should be initialized to the navigation database value associated
1231 with the leg upon insertion of the navigation procedure into the flight plan. Uplink of
1232 a Leg-Based RNP Value via ATS datalink should be supported as part of dynamic
1233 RNP operations.

1234

4.0 FLIGHT MANAGEMENT FUNCTIONS

1235

COMMENTARY

1236

1237

1238

1239

1240

1241

1242

The system designer may need to consider that although an RNP value may be specified for individual leg(s) of a procedure (SID, STAR, Airway, Approach, Transition, etc.), one is not required. The procedure designer may develop procedures where the RNP value is designated leg by leg, or possibly for only selected flight legs. In this case, where nothing is specified, the system default value would apply.

1243

1244

1245

1246

1247

1248

1249

1250

1251

1252

1253

On some routes and terminal procedures, restrictions along the route (e.g., terrain, airspace, environmental) may require that RNP values be placed on individual legs. These values may be other than the default values (for the respective navigation environment), and the values may decrease as the aircraft proceeds along the route. This RNP structure is referred to as the “Scalable RNP” element of Advanced RNP. It is assumed that published procedures which employ the Scalable RNP element will retrieve the respective RNP value for each leg from the NDB. In addition to the values coded in the NDB, RNP values may be transmitted via ATS datalink for dynamic operations.

1254

1255

1256

1257

1258

When the RNP value is provided on downpath legs, the system should provide an indication to the flight crew when the RNP performance cannot be met at the next waypoint. The indication should be provided sufficiently early such that the flight crew can take action to resolve the situation.

1259

1260

4.3.1.3.1.4 Stored Default Values

1261

1262

1263

1264

The system should provide the capability for stored default RNP values for the various navigation environments (e.g., oceanic, enroute, terminal, approach). These values may be established as pre-programmed values and/or loadable into the system.

1265

1266

1267

The stored default RNP value for each respective navigation environment should correlate to one of the Navigation Specification values as defined in ICAO Doc 9613: *Performance-Based Navigation Manual*.

1268

COMMENTARY

1269

1270

1271

1272

1273

1274

The system design may establish the stored defaults with pre-programmed default values which can be overridden by loadable values via a separately loadable data file. As an alternative, the default values may be established by the loadable data file only. The approach taken will be influenced by the system built-in test design for faults and response, as well as the system design integrity.

1275

4.3.1.3.2 Determination of Navigation System Performance

1276

1277

1278

1279

Navigation system performance should be evaluated considering position estimation error, path definition error, and flight technical error, which are the key elements of total system error. The total system error components in the cross-track and along track directions should be less than the RNP value 95% of the flying time.

4.0 FLIGHT MANAGEMENT FUNCTIONS

1280

COMMENTARY

1281

1282

1283

1284

1285

1286

1287

1288

1289

1290

1291

1292

1293

1294

The complete set of criteria for evaluating navigation system performance should be as set forth in DO-283(). It should be noted that while all system integrators will need to evaluate their systems using the same standards and criteria, the systems implementations will vary and will dictate the acceptable operating modes and systems configurations. In one method, the system operation will be predicated on a design which relies upon comparisons of the systems' estimate of position uncertainty versus RNP, while at the same time evaluating integrity. However, this may carry with it restrictions on the mode of system operation (e.g. flight director mode or coupled with autopilot for RNP 1) necessary to achieve and assure consistent performance. In another method, the system operation will be predicated upon a real-time evaluation of all factors in total system error such that mode limitations or restrictions may not apply.

1295

4.3.1.3.3 Navigation Alerting and Display

1296

1297

The system should provide for clear and unambiguous indications of the state of the aircraft navigation system, including situational awareness information and alerts.

1298

COMMENTARY

1299

1300

1301

1302

1303

1304

1305

1306

1307

1308

1309

1310

The system should provide information which allows the determination that the equipment is functioning properly. In addition, indications should be provided which allow the operator to determine the navigation sensors in use and the actual level of navigation performance. The system should also provide annunciations and alerting of unacceptable degradation in navigation performance, including alerting to the flight crew when the navigation system does not comply with the requirements of the RNP airspace, routes, and procedures. Some solutions for this could include indications and alerts when the system estimate of position uncertainty exceeds the RNP value. In others, the estimate of position uncertainty and flight technical error may have correlated indications and alerts.

1311

1312

1313

Additional display and alerting requirements relative to manually entered RNP's and determination of navigation system performance are described in Sections 4.3.1.3.1.1 and 4.3.1.3.2.

1314

4.3.1.4 Navaid Data

1315

1316

1317

1318

1319

1320

In support of the navigation function, the system must contain an extensive navigation data base. This database typically includes the enroute, terminal, and approach procedures (including RNP criteria), the navigation aid ground station information, and the procedure recommended navaid information required for flight in the area in which the aircraft operates. See Section 9.2 for additional details regarding the navigation database.

1321

4.3.1.5 Crew Controlled Navigation Options

1322

1323

1324

1325

Some sensor inputs to the navigation function should be capable of being blocked by pilot action. Localizer updates should always occur when in approach with an ILS approach selected as part of the flight plan. DME, VOR, and GNSS updating may be stopped by manual selection on the MCDU. Additionally, DME and VOR nav aids

4.0 FLIGHT MANAGEMENT FUNCTIONS

1326 may be individually blocked from the navigation solution by entering their identifiers
1327 on the MCDU or by data link. This manual blockage of individual nav aids should be
1328 cleared at flight completion.

1329 Capability may also be provided for navigation override where the operator can
1330 force the navigation position to coincide with a selected navigation sensor or
1331 reference position (e.g. takeoff runway threshold or intersection point). This position
1332 shift action aligns the system position to the selected sensor. Override of the
1333 navigation position to a manual reference point (i.e. overfly fix) is inconsistent with
1334 RNP operation.

1335

4.0 FLIGHT MANAGEMENT FUNCTIONS

1336 These options are intended as backup options for use in the event that a system
1337 generated message, such as verify position, alerts the crew to a problem in the
1338 navigation that the system cannot correct itself.

1339 Facilities should be provided to accommodate manual tuning by the crew of the
1340 DME/VOR radios. If a receiver is being manually tuned, the navigation function
1341 should continue to auto tune any available channels with station selection as
1342 specified for auto tuning. If insufficient channels remain for satisfactory auto-tuning,
1343 then the navigation function may utilize the manually tuned stations if appropriate.

1344 4.3.1.6 VHF Radio Tuning

1345 4.3.1.6.1 Automatic Station Selection

1346 When the navigation VHF radio receivers are available for automatic tuning, the
1347 navigation function should select and tune appropriate ground radio navigation
1348 facilities and use their position fixing data to refine the current navigation position.
1349 The nav aids considered to be available for selection should be those contained
1350 within a usable distance from the estimated current aircraft position. This group of
1351 nav aids, combined with any additional nav aids defined by crew entry, should make
1352 up the set of nav aids from which the best navigation aids can be drawn.

1353 With scanning DME installations, up to five frequencies can be allocated to tune
1354 each interrogator and, depending upon the aircraft, may be designated for multiple
1355 DME range measurements, VOR/DME position fixing, ILS/DME or procedure-
1356 specified or pilot-selected nav aids. If a procedure being flown has a specified
1357 nav aid associated with it, then that nav aid must be tuned and used for navigation
1358 purposes.

1359 Station selection criteria should be designed to limit station switching activity to a
1360 minimum.

1361 4.3.1.6.2 Nav aid Reasonableness Determination

1362 DME range measurements received by the navigation function should be compared
1363 with that of the expected radio range measurement as a reasonableness test. When
1364 the comparison is outside of a reasonable tolerance, the data should be rejected
1365 and should not be used in the position computations.

1366 4.3.1.7 Real Time Clock

1367 The system should receive real time (UTC) clock data from the GNSS. For back up
1368 purposes, the system should utilize a GNSS-updated (or manually synchronized)
1369 on-board clock (See Section 5.1.15), or provide an internal UTC time clock
1370 capability which is synchronized with the external input or may be manually
1371 initialized. In the event of loss of the external input, the internal time clock should
1372 maintain UTC within a ± 1 second accuracy over the duration of the flight.

1373 4.3.2 Flight Planning

1374 The flight planning facilities provide for the assembly, modification, and selection of
1375 active and secondary flight plans. Data can be extracted from the navigation data
1376 base that contains airline-unique company flight plans, navigational aids, airways,
1377 waypoints, published departure and arrival procedures, approaches along with
1378 associated missed approach procedures, etc. The selection of flight planning data is
1379 done through the MCDU, through the data link function or optionally via a graphical
1380 user interface. Flight plan capacity should be a minimum of 150 waypoints in each

4.0 FLIGHT MANAGEMENT FUNCTIONS

1381 flight plan. For longer range aircraft, a minimum of 200 waypoints in each flight plan
1382 is highly encouraged.

1383

COMMENTARY

1384 Various system implementations use different flight plan designations
1385 such as active, modified, temporary, primary, and secondary. Within
1386 this document, the following designations are used: Active, Modified,
1387 and Secondary. With respect to a flight plan, the terms Primary and
1388 Alternate are also used and refer to the series of waypoints in an
1389 active, modified, or secondary flight plan associated with the route to
1390 the primary and alternate destination respectively.

1391

1392

1393 4.3.2.1 Flight Plan States

1394 Once a route is entered or selected as the active flight plan, it becomes the basis
1395 from which all guidance and advisory data is referenced. The secondary flight plan
1396 can have the same terminus or can be completely different with no shared
1397 waypoints.

1398 It should be possible to make modifications to the active flight plan and review the
1399 impact of those modifications without affecting the active flight plan. For crew review
1400 and evaluation, the ND should show the modified flight plan together with the
1401 unmodified active flight plan, with unique symbology to differentiate between them.
1402 Trajectory predictions should be available on the MCDU for the modified flight plan.
1403 During this modification process, all guidance and advisory data is still referenced to
1404 the unmodified active flight plan.

1405 This modification process should use a separate modified flight plan. When all the
1406 desired changes have been made, the crew must invoke the modified flight plan to
1407 replace the active flight plan. This action will replace the active flight plan and
1408 terminate the existence of the modified flight plan. All guidance and advisory data
1409 will immediately be referenced to the newly invoked flight plan.

1410 Facilities should be provided to access the independent secondary flight plan and to
1411 copy this flight plan into the active flight plan when requested by the crew.

1412 4.3.2.2 Navigation Data Base

1413 The Navigation Data Base (NDB) contains enroute, terminal, and airline custom
1414 defined data needed to support the flight management functions. It should be
1415 packed in a format to efficiently use available memory and to provide rapid access
1416 to the data. The format of the source data for the navigation data base is defined in
1417 ARINC 424. The supplier of the data, packing format, and maintenance of the data
1418 is to be specified by the supplier.

1419 Section 9.2 of this document provides a more complete description of the content of
1420 the navigation data base.

1421 Each navigation data base is valid for a specific effectivity period and is updated
1422 typically on a 28-day cycle. The effectivity dates for a set of data are displayed for
1423 reference on the system's configuration definition page. The navigation data base
1424 effectivity period should be compared automatically with the current date and
1425 discrepancies annunciated.

4.0 FLIGHT MANAGEMENT FUNCTIONS

1426 The system should be capable of defining a flight path based on standard ARINC
1427 424 path terminators as shown below:

1428	AF		DME Arc to a Fix
1429	CA		Course to an Altitude
1430	CD		Course to a Distance
1431	CF	*	Course to a Fix
1432	CI		Course to an Intercept
1433	CR		Course to Intercept a Radial
1434	DF	*	Direct to a Fix
1435	FA	*	Course from Fix to Altitude
1436	FC		Course from Fix to Distance
1437	FD		Course from Fix to DME Distance
1438	FM		Course from Fix to Manual Term
1439	HA	*	Hold to an Altitude
1440	HF	*	Hold, Terminate at Fix after 1 Circuit
1441	HM	*	Hold, Manual Termination
1442	IF	*	Initial Fix
1443	PI		Procedure Turn
1444	RF	*	Constant Radius to a Fix
1445	TF	*	Track to Fix
1446	VA		Heading to Altitude
1447	VD		Heading to Distance
1448	VI		Heading to Intercept next leg
1449	VM		Heading to Manual Termination
1450	VR		Heading to Intercept Radial

1451 **COMMENTARY**

1452 Even though it is expected that in the future only a limited set of these
1453 terminator types will be used, as defined (*) above and as specified in
1454 DO-236() and DO-283(), the advanced system should continue to
1455 support this list as long as procedures exist that use these terminator
1456 types.

1457 **4.3.2.3 Supplemental and Temporary NDB Creation and Management**

1458 Besides waypoints and nav aids contained in the data base, new waypoints that can
1459 be used in flight plan construction may be created in a number of ways.

1460 The system should support creation of new waypoints in the following ways:

- 1461 • Point Bearing/Distance (PBD)
- 1462 • Point Bearing/Point Bearing (PB/PB)
- 1463 • Along Track Fix
- 1464 • Latitude/Longitude
- 1465 • Dir-To Abeam Waypoint(s)

4.0 FLIGHT MANAGEMENT FUNCTIONS

1466 The system may support creation of new waypoints in the following ways:

- 1467 • Latitude/Longitude Crossing
- 1468 • Unnamed Airway Intersection
- 1469 • Fix Intersection
- 1470 • Runway Extension
- 1471 • FIR/SUA Intersection

1472 These waypoints should be stored in the temporary navigation database.

1473

1474 Optional capability may be provided to allow waypoints, nav aids, and airports to be
 1475 directly created by the crew (or data link function) using a supplemental navigation
 1476 data base facility. The supplemental NDB is retained indefinitely (until deleted). The
 1477 temporary data base is retained until flight complete (deleted automatically after
 1478 touchdown). A supplemental and temporary navigation data base summary facility
 1479 is provided for the crew to inspect, review, and select the current contents of these
 1480 data bases.

1481 **4.3.2.3.1 PBD Waypoints**

1482 Waypoints can be created as bearing/distance off existing named waypoints,
 1483 nav aids or airports.

1484 **4.3.2.3.2 PB/PB Waypoints**

1485 Waypoints can be created as the intersections of bearings from two defined
 1486 waypoints.

1487 **4.3.2.3.3 Along Track Fix Waypoints**

1488 Waypoints can be created by an Along Track Distance from an existing flight plan
 1489 waypoint. The waypoint that is created is located at the distance entered and along
 1490 the current flight plan path from the waypoint used as the fix. A positive distance
 1491 results in a waypoint after the fix point in the flight plan while a negative distance
 1492 results in a waypoint before the fix point.

1493 **4.3.2.3.4 Lat/Long Waypoints**

1494 Waypoints can be created by entering in the latitude/longitude coordinates of the
 1495 desired waypoint.

1496 **4.3.2.3.5 Lat/Long Crossing Waypoints**

1497 Waypoints can be created by specifying a latitude or longitude. In this case, a
 1498 waypoint will be created where the active flight plan crosses that latitude or
 1499 longitude. Latitude or longitude increments can optionally be specified in which case
 1500 several waypoints are created that correspond to where the flight plan crosses the
 1501 specified increments of latitude or longitude.

1502 **4.3.2.3.6 Unnamed Airway Intersection**

1503 Waypoints can be created as the intersection of two airways. Waypoints will be
 1504 created at all points where the airways cross.

4.0 FLIGHT MANAGEMENT FUNCTIONS

1505 **4.3.2.3.7 Fix Intersection Waypoints**

1506 Waypoints can be created by using a Fix Reference MCDU page. Reference
 1507 information includes creation of abeam waypoints and creation of waypoints where
 1508 the intersections of a specified radial or distance from a specified fix intersects the
 1509 current flight plan is computed.

1510 **4.3.2.3.8 Runway Extension Waypoints**

1511 Runway extension waypoints may be created by selecting a distance from a given
 1512 destination runway. The new waypoint will be located that distance from the runway
 1513 threshold along the reciprocal of the runway heading.

1514 **4.3.2.3.9 Dir-To Abeam Waypoints**

1515 If a direct-to is performed, facilities should be provided to retain intervening
 1516 waypoint information (e.g. speed/altitude constraints, waypoint wind data, etc.). If
 1517 the abeam facility is selected, then temporary waypoints will be created at their
 1518 abeam point on the direct to path. Any waypoint information associated with the
 1519 original waypoint will be transferred to the new waypoints.

1520 **COMMENTARY**

1521 Care should be exercised in the implementation of the abeam
 1522 waypoint function since other effects such as inappropriate course
 1523 changes in the direct-to path and inclusion of abeam points in some
 1524 data link waypoint lists may be undesirable.

1525 **4.3.2.3.10 FIR/SUA Intersection Waypoints**

1526 The system may define waypoints at the intersection of Flight Information Region
 1527 (FIR) boundaries and Special Use Areas (SUA) stored in the navigation data base
 1528 in constructing flight plans.

1529 **4.3.2.3.11 Suggested Waypoint Naming Convention**

1530 Flight plan waypoints created using the above capabilities should be given flight
 1531 plan identifiers in accordance with the following conventions:

1532	Place/Bearing/Distance	wptnn
1533	Place-Bearing/Place-Bearing	wptnn
1534	Along Track Waypoint	wptnn
1535	Latitude/Longitude	wxyzzz or xxwzzzy
1536	Crossing Fix	wxx or yzzz
1537	Airway Intercept	Xawy
1538	Dir-To Abeam Waypoint	wptnn
1539	Radial or abeam intercept	wptnn
1540	Runway extension	RXrwyhdg
1541	FIR/SUA intersection	FIRnn or SUAnn

1542 Upper case indicates actual characters used, and lower case indicates variable
 1543 content as follows:

1544	nn	FMS-determined sequence number
1545	awy	Full identifier of airway following the intersection

4.0 FLIGHT MANAGEMENT FUNCTIONS

1546	wpt	First 3 characters of the base waypoint identifier
1547	w	N or S as appropriate
1548	y	E or W as appropriate
1549	xx	degrees of latitude
1550	zzz	degrees of longitude
1551	rwyhdg	two-digit nominal runway heading

1552

1553 COMMENTARY

1554 To minimize the need for the crew to resolve duplicate waypoints, the
 1555 system designer should choose naming conventions or methods that
 1556 are unlikely to match waypoints in the Navigation Database.

1557 4.3.2.4 Lateral Flight Planning**1558 4.3.2.4.1 Flight Plan Construction**

1559 Flight plans can be constructed in a variety of ways:

- 1560 • Terminal Area procedures
- 1561 • Airways
- 1562 • Pre-stored company routes
- 1563 • Waypoints
- 1564 • Navaids
- 1565 • Runways
- 1566 • Supplemental/Temporary waypoints
- 1567 • Combinations thereof

1568 These selections may be strung together by menu selection from the NDB or by
 1569 specific edit actions. Flight plans can also be constructed and edited through the
 1570 data link function.

1571 4.3.2.4.2 Terminal Area Procedures

1572 The following navigation database procedure types should be supported:

- 1573 • Standard Instrument Departure (SID)
- 1574 • Engine-Out SID
- 1575 • Standard Terminal Arrival Route (STAR)
- 1576 • RNAV/RNP Approach including LP/LPV (SBAS)
- 1577 • GPS (GNSS) Approach
- 1578 • ILS/LOC Approach
- 1579 • MLS Approach
- 1580 • GLS (GBAS) Approach

1581 The following navigation database approach procedure types may be supported
 1582 based on individual system or customer requirements:

- 1583 • RNP Authorization Required (RNP-AR)

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 1584 • VOR
- 1585 • Non-Directional Beacon
- 1586 • Localizer Directional Aid (LDA)
- 1587 • Instrument Guidance System (IGS)
- 1588 • RNAV Visual Flight Procedure (RVFP) / Visual Guidance Approach (VGA)
- 1589 • Circling Approach
- 1590 • Visual Prescribed Track (VPT)

1591

1592 The following navigation database SID procedure types may be supported based on
1593 individual system or customer requirements:

- 1594 • RNP Authorization Required (RNP-AR)

1595

1596 **4.3.2.4.3 Flight Plan Editing**

1597 The flight planning function offers various ways to modify the flight plan at the
1598 crew's discretion. These are described in the following sections.

1599 **4.3.2.4.3.1 Direct/Intercept Option**

1600 The direct/intercept feature allows the crew to select any fixed waypoint as the
1601 active waypoint and for the intercept option, to select the desired course into this
1602 waypoint. If the direct-to option is selected, the waypoint becomes the active
1603 waypoint and the flight plan that results goes direct from the current aircraft position
1604 to that waypoint. Any waypoints in the flight plan before that waypoint are deleted
1605 from the flight plan. Whenever the intercept option is selected on a given fixed
1606 waypoint, either the direct-to course or an entered course can be selected as the
1607 course to that waypoint.

1608 **4.3.2.4.3.2 Entry of Waypoints**

1609 Waypoints may be entered at any point in the flight plan provided it results in a valid
1610 leg combination. Refer to ARINC 424 for valid leg combinations. These waypoints
1611 may be from the navigation data base, supplemental data base, or temporary data
1612 base. It is possible that more than one waypoint uses the same identifier. Therefore,
1613 facilities must be provided to display a sorted list (based on distance from the
1614 aircraft) of the coordinates for all selections and allow the crew to make the choice.

1615 **4.3.2.4.3.3 Flight Plan Linking**

1616 Facilities should be provided to select portions of the flight plan and re-link that
1617 portion with another portion of the flight plan.

1618 **4.3.2.4.3.4 Flight Plan Delete**

1619 Facilities should be provided to allow the use of a delete function to remove
1620 unwanted portions of a flight plan.

1621 **4.3.2.4.3.5 Procedure Selection**

1622 Selecting procedures from the data base will replace a previous procedure
1623 selection, retaining the active waypoint if it was part of the previous procedure

4.0 FLIGHT MANAGEMENT FUNCTIONS

1624 selection and optionally retaining constraints previously sent by the ATC on
1625 waypoints part of the selected procedure.

1626

1627 4.3.2.4.3.6 Holding Patterns (HM Leg)

1628 Holding patterns can be defined by data base procedure or manually specified at
1629 the current position or at a selected waypoint. All parameters for holding patterns
1630 are editable including inbound course, turn direction, and leg time/length.
1631 flyover/flyby, hold speed,

1632 4.3.2.4.3.7 Flight Plan Editing using Data Link

1633 Facilities should be provided to perform flight plan construction and editing using
1634 both AOC and ATC data link. If a flight plan data link is received, then a message is
1635 issued to the crew of the pending request. Facilities to review and to accept or reject
1636 the data link action must be provided.

1637 4.3.2.4.3.8 Flight Plan Editing using a Pointing Device

1638 [Deleted by Supplement 5]

1639 4.3.2.4.4 Flight Planning Support for ATM

1640 [Deleted by Supplement 5]

4.0 FLIGHT MANAGEMENT FUNCTIONS

1641 **4.3.2.4.5 Missed Approach Procedures**

1642 The flight planning function also allows missed approach procedures to be included
 1643 in the flight plan. These missed approach procedures can either come from the
 1644 navigation data base where the missed approach is part of a published procedure,
 1645 in which case they will be automatically included in the flight plan. Additional
 1646 waypoints can be added beyond the MAP to be flown in the event of a missed
 1647 approach. Automatic guidance will be available upon activation of the missed
 1648 approach.

1649 **4.3.2.4.6 Lateral Offset Construction**

1650 The flight planning function should support the creation of a parallel offset path via
 1651 specification of a direction (left or right of path) and distance. For the offset distance,
 1652 the system should support a maximum value of at least 20 NM with a resolution of
 1653 0.1 NM for at least the first 10 NM. Multiple pre-planned parallel offsets may be
 1654 supported but are not required.

1655 **COMMENTARY**

1656 DO-236() and DO-283() require the system to support a resolution of
 1657 0.1 NM. The above requirement ensures that the manual entry of a
 1658 parallel offset will support the 0.1 NM resolution. However, it should
 1659 be noted that at the time of publication of this characteristic, some
 1660 datalink systems industry standards do not currently support such
 1661 resolution. For instance, DO-258A, which specifies the FANS 1/A+
 1662 Interoperability Requirements, currently supports only a 1 NM
 1663 resolution.

1664 The system should allow initiation of the parallel offset at the current aircraft position
 1665 or at a specified downpath waypoint.

1666 The system should allow termination of the parallel offset: immediately when
 1667 commanded by the crew, at a specified downpath waypoint, or automatically:

- 1668 • at the first fix of an instrument approach procedure (IAF, IF or FAF); or
- 1669 • when a leg type other than TF, CF, DF, RF is encountered; or
- 1670 • when the offset path is not flyable (i.e. when a combination of ground speed,
 1671 track change geometry and waypoint proximity forces course reversals); or
- 1672 • when reaching a lateral discontinuity

1673 When transitioning to and from the offset path, a 30-degree intercept angle should
 1674 be used by default. Entry or selection of another intercept angle may be optionally
 1675 provided.

1676 The system should provide the capability to offset predefined curved paths such as
 1677 Fixed Radius Transitions (FRT) and optionally, RF legs.

1678 When executing a parallel offset, all performance requirements and constraints of
 1679 the original path should be applicable to the offset path. Guidance parameters (e.g.
 1680 cross-track deviation, distance-to-go) should be referenced to the offset path and
 1681 offset waypoints. The system should provide a means for display of both the parallel
 1682 offset path and the original path. Display of the transition paths between the original
 1683 path and the parallel path is highly recommended.

1684 Refer to DO-236() and DO-283() for additional lateral offset requirements.

4.0 FLIGHT MANAGEMENT FUNCTIONS

1685

1686 **4.3.2.4.7 Magnetic Variation**

1687 The system should have the capability of assigning a magnetic variation (MagVar)
 1688 at any fix/location when operations are conducted relative to Magnetic North. The
 1689 MagVar value may be retrieved from the NDB, or in the absence of an NDB-
 1690 specified value, computed using an internal magnetic reference.

1691

1692

COMMENTARY

1693 DO-283() provides requirements for the treatment of MagVar on
 1694 terminal procedures, airports, leg types, en route areas and an
 1695 internal set of magnetic variation tables.

1696 ARINC 424 specifies NDB requirements for MagVar on certain leg
 1697 types. Additionally, ARINC 424-19 introduced the concept of a
 1698 Procedure Design MagVar (PDMV) which attempts to relieve the
 1699 confusion on which MagVar value to use (when the various options
 1700 conflict) by coding an appropriate MagVar value on the respective
 1701 instrument procedure or individual procedure legs.

1702

1703 The system should incorporate a hierarchy to determine the use of MagVar
 1704 sources in the following order (note that 1, 2 and 3 will be coded in the NDB):

- 1705 1. If the leg is part of a navigation database terminal area
 1706 procedure, the MagVar to be used is the PDMV for the
 1707 procedure or individual procedure legs, when available.
- 1708 2. If the leg is part of a navigation database terminal area
 1709 procedure and the PDMV is not specified and a
 1710 recommended VHF navaid magnetic declination exists for
 1711 the leg, the MagVar to be used is the recommended VHF
 1712 navaid magnetic declination of the leg.
- 1713 3. If the leg is part of a navigation database terminal area
 1714 procedure and the PDMV is not specified and a
 1715 recommended VHF navaid magnetic declination does not
 1716 exist for the leg, the MagVar to be used is the MagVar of
 1717 record for the airport.
- 1718 4. If the leg is not part of a procedure and the terminating fix
 1719 is a VOR, the MagVar to be used is the station declination
 1720 of the VOR.
- 1721 5. If the leg is not part of a procedure and the terminating fix
 1722 is not a navaid, the MagVar to be used is defined by the
 1723 system using an internal model (See Section 9.5).

1724

1725 The system should have a means to accept an input or entry from the crew of the
 1726 selected heading reference (Magnetic or True). For a given leg, when a heading
 1727

1728

1729

1730

4.0 FLIGHT MANAGEMENT FUNCTIONS

1731 reference has not been assigned in the navigation database, the leg bearing should
 1732 be displayed in the selected heading reference; when a heading reference has been
 1733 assigned, the leg bearing should be displayed in the assigned reference. The
 1734 system should provide an indication to the crew when the selected heading
 1735 reference differs from the (assigned) reference of the active leg.

COMMENTARY

1736
 1737 Considerations to provide the crew with a timely reminder in advance
 1738 of a potential heading discrepancy are encouraged. Considerations
 1739 which allow the crew to specify the reference of bearing entries are
 1740 also encouraged.

1741 Refer to DO-283() for additional requirements and considerations.

4.3.2.5 Vertical Flight Planning

1742
 1743 Vertical flight planning consists of entry and deletion of altitude and speed
 1744 constraints at waypoints (Section 4.3.2.5.2 and 4.3.2.5.3) as well as other
 1745 parameters (listed below) which are used by the Vertical Guidance, Trajectory
 1746 Predictions, and Performance Calculations functions.

1747 The system should provide for entry and modification of the following performance
 1748 parameters:

- Zero Fuel Weight (or Gross Weight)
- Block Fuel
- Cost Index
- Cruise Altitude
- Climb Mode (Section 4.3.4.1.1)
- Cruise Mode (Section 4.3.4.1.2)
- Descent Mode (Section 4.3.4.1.3)
- Hold Pattern Speed
- Airport Speed Limit
- Thrust Reduction Altitude/Height
- Climb Acceleration Altitude/Height
- RTA Waypoint, Time, and Tolerance (Section 4.3.3.2.4 & 4.3.3.2.5)
- Climb and Descent Winds and Temperatures (Section 4.3.2.5.1)
- Cruise Wind at Waypoint (Section 4.3.2.5.1)
- Transition Altitude/Level
- Destination QNH
- Takeoff Derate(s)
- Climb Derate

1768 All of these parameters should be considered in the trajectory predictions and
 1769 performance function computations.

1770 The system may provide for entry and modification of the following parameters:

- Maneuver Margin

1771

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 1772 • Min Cruise Time
- 1773 • Min Rate of Climb (All-Engine - Max Climb thrust rating)
- 1774 • Min Rate of Climb (All-Engine - Max Cruise thrust rating)
- 1775 • Min Rate of Climb (Engine-Out – Max Continuous thrust rating)
- 1776 • Drag Factor and Fuel Flow Factor
- 1777 • Anti-Ice Bands
- 1778 • Tropopause Altitude
- 1779 • Minimum Step Climb Size
- 1780 • Preplanned Cruise Altitude Step(s)
- 1781 • Optimal Cruise Altitude Step(s)
- 1782 • Cruise-Climb Block Altitude (Drift-Up Cruise)
- 1783 • Preplanned Cruise Speed Changes
- 1784 • Multiple Cruise Winds at Waypoints (Section 4.3.2.5.1)
- 1785 • Cruise Temperature at Waypoints (Section 4.3.2.5.1)

1786 When supported, these parameters should be considered in the trajectory
1787 predictions and performance function computations.

1788 4.3.2.5.1 Wind, Temperature, and Atmospheric Model

1789 Wind and temperature may be entered via the MCDU or data link. The wind model
1790 for the climb phase should be a set of wind magnitudes and bearings that are
1791 entered for different altitudes. The value at any altitude is then computed from these
1792 values and merged with the current sensed wind.

1793 The temperature model for the climb phase should be temperature values entered
1794 for different altitudes. The value at any altitude is then computed from these values
1795 and merged with the current sensed temperature.

1796 Wind models for use in the cruise phase should allow for the entry of one or more
1797 winds (altitude, magnitude, and bearing) at a waypoint. Systems should merge
1798 these entries with current winds obtained from sensor data in a method which gives
1799 a heavier weighting to sensed winds close to the aircraft.

1800 Temperature models for use in the cruise phase may allow for entry of a
1801 temperature and altitude at a waypoint or an ISA deviation at a waypoint. As a
1802 minimum, the system should allow for entry of a single cruise temperature or ISA
1803 deviation value that applies throughout cruise. Systems should merge these entries
1804 with current temperature (ISA deviation) obtained from sensor data in a method
1805 which gives a heavier weighting to sensed values close to the aircraft.

1806 The wind model used for the descent phase should be a set of wind magnitudes
1807 and bearings entered for different altitudes. The value at any altitude should then be
1808 computed from these values, and merged with the current sensed wind.

1809 The temperature model for the descent phase should be temperature values
1810 entered for different altitudes. The value at any altitude is then computed from these
1811 values and merged with the current sensed temperature.

1812 Temperature should be based on the International Standard Atmosphere (ISA) with
1813 an offset (Δ ISA) obtained from pilot entries or the actual sensed temperature.

4.0 FLIGHT MANAGEMENT FUNCTIONS

1814 Likewise, the tropopause altitude (altitude at which constant temperature begins)
1815 may be crew enterable (with 36,089 ft. as default).

1816

1817 **4.3.2.5.2 Waypoint Altitude Constraints**

1818 The system should allow insertion of AT, AT or ABOVE, AT or BELOW, and
1819 WINDOW (i.e. both an AT or ABOVE and AT or BELOW) altitude constraints at
1820 waypoints in the flight plan. Waypoint altitude constraints may be inserted directly
1821 via crew entry or indirectly via selection of a procedure in the navigation database.
1822 The system should allow for entry and modification of WINDOW altitude constraints.

1823

1824 **COMMENTARY**

1825 Historically, crew entry and modification of WINDOW altitude
1826 constraints was not possible on some systems. On such systems,
1827 WINDOW constraints could only be inserted via selection of a
1828 navigation database procedure. Per DO-283(), the system is required
1829 to support crew entry of each type of altitude constraint.

1830

1831 The system should avoid automatic deletion of altitude constraints above cruise
1832 altitude.

1833

1834 **COMMENTARY**

1835 Upon cruise altitude modification or procedure insertion, some
1836 systems will automatically delete altitude constraints that are above
1837 cruise altitude. This design has led to airline and ATC complaints as it
1838 is susceptible to order of operation and situational awareness issues.
1839 System designs where altitude constraints are retained and ignored
1840 and/or where altitude constraints are retained and the cruise altitude
1841 modified are preferable.

1842

1843 The system should designate altitude constraints as either CLIMB constraints or
1844 DESCENT constraints. The system should designate an altitude constraint on a
1845 waypoint in the departure or missed approach procedure as a CLIMB constraint.
1846 The system should designate an altitude constraint on a waypoint in the arrival or
1847 approach procedure as a DESCENT constraint. The system may incorporate
1848 additional rules to designate an altitude constraint as either a CLIMB or DESCENT
1849 constraint when the constraint is on a waypoint which is not part of a procedure
1850 listed above.

1851

1852 The system should apply CLIMB constraints to the takeoff and climb phases of flight
1853 in accordance with Table 4-1 below. The system should apply DESCENT
1854 constraints to the descent and approach phases of flight in accordance with Table
1855 4-1 below.

1856

4.0 FLIGHT MANAGEMENT FUNCTIONS

Altitude Constraint Type	Altitude Constraint Phase/Applicability	
	CLIMB	DESCENT
AT or BELOW	Do not exceed PRIOR to and AT	Do not exceed AT and AFTER
AT or ABOVE	Do not go below AT and AFTER	Do not go below PRIOR to and AT
AT	Do not exceed PRIOR to, cross AT, do not go below AFTER	Do not go below PRIOR to, cross AT, do not exceed AFTER
WINDOW	Do not exceed upper bound PRIOR to and AT Do not go below lower bound AT and AFTER	Do not exceed upper bound AT and AFTER Do not go below lower bound PRIOR to and AT

Table 4-1 Altitude Constraint Applicability

COMMENTARY

PRIOR to, AFTER, and AT in Table 4-1 refer to sequence of the waypoint with the altitude constraint.

The descent path is typically constructed using a series of straight line segments. For waypoints with a descent AT constraint, the descent path will typically cross at the specified altitude. When flown using the Vertical Guidance function, some systems may cross above or below the altitude constraint value due to a vertical fly-by transition. DO-283() defines the acceptable altitude deviation for a vertical fly-by transition.

Upon procedure selection, most systems combine common waypoints between departure, arrival, and/or approach segments. In rare situations, the altitude constraint coded in one procedure differs from the altitude constraint coded in the other procedure (e.g. STAR and APPROACH). When this occurs, systems may use different logic to meld the altitude constraints; however, the system should ensure the altitude constraint on the common waypoint always originates from one of the currently selected navigation procedures (provided the crew did not modify the altitude constraint).

The system should provide a means to initiate a vertical direct-to, without affecting the lateral path definition, to a vertically constrained fix in descent, by deleting any altitude constraints prior to the vertical direct-to fix. The system should inhibit deletion of altitude constraints on waypoints which are part of the final approach (i.e. FAF, MAP/RW, and step-down fixes) via a vertical direct-to.

COMMENTARY

This allows the aircraft to proceed from present altitude direct-to a specified altitude in the flight plan. When in climb, systems may or

4.0 FLIGHT MANAGEMENT FUNCTIONS

1889 may not provide a means to delete all altitude constraints between
 1890 the aircraft and a vertically constrained fix.

1891 **4.3.2.5.3 Waypoint Speed Constraints**

1892 The system should allow insertion of AT, AT or ABOVE, and AT or BELOW speed
 1893 constraints at waypoints in the flight plan. Waypoint speed constraints may be
 1894 inserted directly via crew entry or indirectly via selection of a procedure in the
 1895 navigation database.

1896 The system should designate speed constraints as either CLIMB constraints or
 1897 DESCENT constraints. The system should designate a speed constraint on a
 1898 waypoint in the departure or missed approach procedure as a CLIMB constraint.
 1899 The system should designate a speed constraint on a waypoint in the arrival or
 1900 approach procedure as a DESCENT constraint. The system may incorporate
 1901 additional rules to designate a speed constraint as either a CLIMB or DESCENT
 1902 constraint when the constraint is on a waypoint which is not part of a procedure
 1903 listed above.

1904
 1905 The system should apply CLIMB constraints to the takeoff and climb phases of flight
 1906 in accordance with Table 4-2 below. The system should apply DESCENT
 1907 constraints to the descent and approach phases of flight in accordance with Table
 1908 4-2 below.

1909

Speed Constraint Type	Speed Constraint Phase/Applicability	
	CLIMB	DESCENT
AT or BELOW	Do not exceed PRIOR to and AT	Do not exceed AT and AFTER
AT or ABOVE	Do not go below AT and AFTER	Do not go below PRIOR to and AT
AT	Do not exceed PRIOR to, cross AT, do not go below AFTER	Do not go below PRIOR to, cross AT, do not exceed AFTER

1910

1911

Table 4-2 Speed Constraint Applicability

1912

1913

COMMENTARY

1914

PRIOR to, AFTER, and AT in Table 4-2 refer to sequence of the
 1915 waypoint with the altitude constraint.

1916

1917

In accordance with Table 4-2, the system should apply ABOVE climb speed
 1918 constraints after sequence of the speed constraint waypoint until transition to the
 1919 climb MACH or transition to cruise flight phase. The system should apply ABOVE
 1920 descent speed constraints upon transition to the descent CAS (from the cruise flight
 1921 phase or descent MACH) until sequence of the speed constraint waypoint.

1922

4.0 FLIGHT MANAGEMENT FUNCTIONS

1923 BELOW constraints may be applied in cruise flight phase in accordance with Table
 1924 4-2. This is recommended for missed approach and low(er) cruise altitude scenarios
 1925 where procedural waypoint speed constraints may operationally be encountered
 1926 while in cruise.

1927

1928 Upon procedure selection, most systems combine common waypoints between
 1929 departure, arrival, and/or approach segments. In rare situations, the speed
 1930 constraint coded in one procedure differs from the speed constraint coded in the
 1931 other procedure (e.g. STAR and APPROACH). When this occurs, systems may use
 1932 different logic to select or meld the speed constraints; however, the system should
 1933 ensure the speed constraint on the common waypoint always originates from one of
 1934 the currently selected navigation procedures (provided the crew did not modify the
 1935 speed constraint).

1936 4.3.2.5.4 Temperature Compensation

1937 For Baro-VNAV approach operations, unless compensated for temperature, the
 1938 system can only be used within the temperature limitations (if any) published on
 1939 approach procedure charts. To enable baro-VNAV approach operations outside
 1940 published temperature limits or operations in non-ISA temperature environments,
 1941 the preferred method is for the system to correct for the effects of temperature on
 1942 the barometric altitude upon crew entry of a destination temperature. Systems
 1943 providing automatic temperature compensation to the baro-VNAV guidance must
 1944 comply with DO-236() Appendix H and DO-283() Appendix H.

1945

1946

COMMENTARY

1947 The barometric altimeter indication is influenced by temperature
 1948 variations. During cold temperature operations (below ISA), the
 1949 airplane's true altitude is lower than the indicated altitude. Similarly,
 1950 during hot temperature operations (above ISA), the airplane's true
 1951 altitude is higher than the indicated altitude. This results in an aircraft
 1952 flying a vertical path angle shallower than (or steeper than for hot
 1953 temperature) the designed vertical path angle (or gradient) without an
 1954 indication in the flight deck.

1955

1956 Temperature compensation corrects altitude constraints and vertical
 1957 angles to those intended by the procedure designer. When the aircraft
 1958 flies the compensated altitudes, the aircraft is actually flying the
 1959 intended descent/approach path. However, the indicated altitude will
 1960 be different than the charted value.

1961

4.0 FLIGHT MANAGEMENT FUNCTIONS

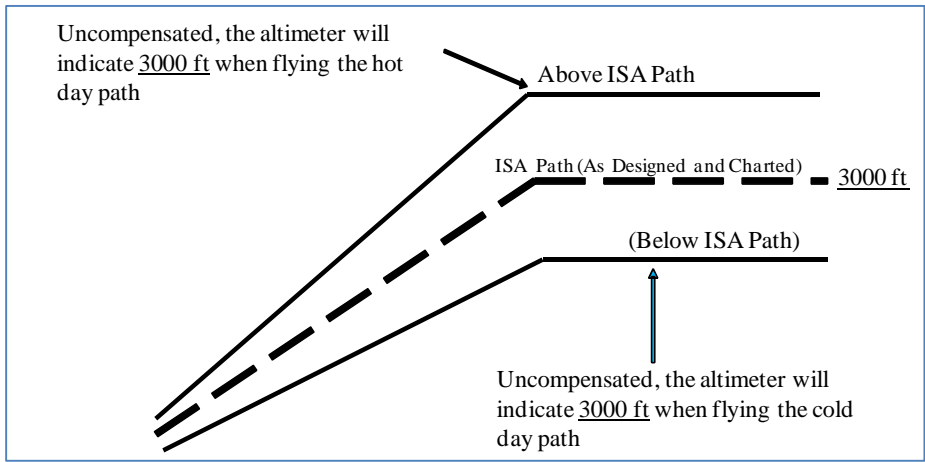


Figure 4.3.2-1 Temperature Effects on Altimetry

1962
 1963
 1964
 1965
 1966
 1967
 1968
 1969
 1970
 1971
 1972
 1973
 1974
 1975
 1976
 1977
 1978
 1979
 1980
 1981
 1982
 1983
 1984
 1985
 1986
 1987
 1988
 1989
 1990
 1991
 1992
 1993
 1994

The system should use a flight crew-entered temperature and standard temperature lapse rate to compute altitude and flight path angle corrections accounting for the bias in the barometric altimetry system indications caused by deviations from ISA at the aerodrome’s field elevation. The temperature compensation method used should be within 10% of the “accurate method” as described in DO-283(). These corrections should be applied, at a minimum, to the altitudes and flight path angles contained in any approach procedure selected from the navigation database from the initial approach fix (IAF) through the missed approach procedure up to and including the missed approach holding point (MAHP), and including altitude-terminated legs in the missed approach segment. For all approach types (including SBAS, GLS, ILS, MLS) temperature compensation should be applied to all segments where vertical guidance is dependent on barometric altimetry, including the FAF altitude.

When temperature compensation has been applied, altitudes that are manually entered into a procedure by the flight crew should not be temperature compensated. The system should clearly differentiate the display of temperature compensated altitudes from uncompensated altitudes.

Since the MDA/DA is not an assigned altitude, this procedural altitude is eligible for temperature compensation. When the system loads the uncompensated MDA/DA from the database or the flight crew enters it, the system should provide a means to determine and display the temperature compensated MDA/DA.

When temperature compensation adjusts the vertical path, the system should ensure that the path construction precludes the insertion of a climb segment in the descent path. This will typically apply when transitioning from a path segment based upon uncompensated fix altitudes to a path segment whose altitudes have been compensated for temperature. When temperature compensation results in an altitude conflict, the system should provide an annunciation suitable to prompt flight crew action.

4.0 FLIGHT MANAGEMENT FUNCTIONS

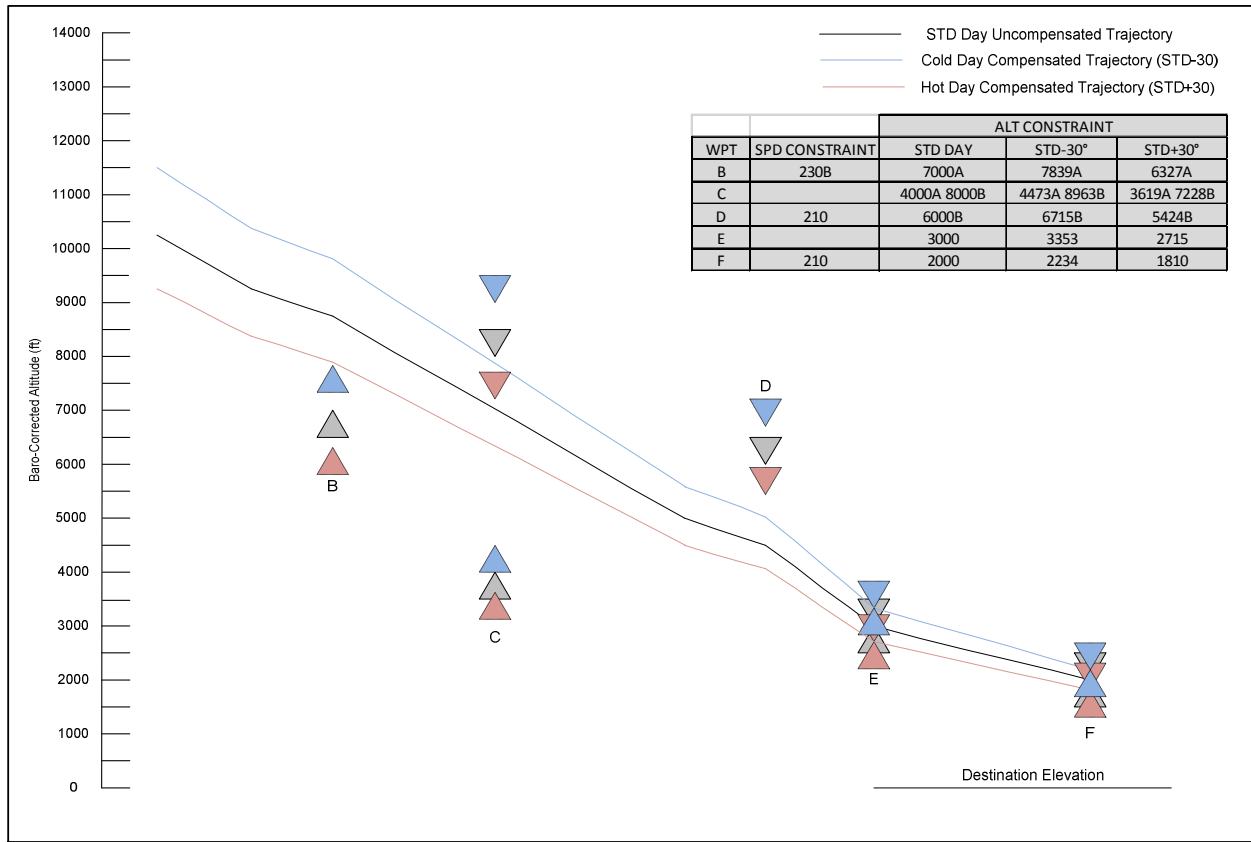


Figure 4.3.2-2: Temperature-Compensated Trajectory

When an interface has not provisioned for output of both a compensated and uncompensated altitude constraint value, the compensated altitude constraint value should be output.

COMMENTARY

The ACARS, Intent Bus, ADS-C EPP, and EFIS interfaces are all examples of interfaces that output altitude constraint information.

4.3.3 Lateral and Vertical Guidance

The system should provide fully automatic, performance optimized, guidance along two, three, or four-dimensional paths, defined by the sequence of waypoints specified in the active flight plan. Lateral guidance requires an active flight plan. Vertical guidance requires, as a minimum, an input of gross weight, cost index, and cruise altitude. ATC constraints may be entered along the flight plan which in turn will constrain the lateral and vertical flight paths. Guidance commands should be generated and available to drive the Flight Control Computers.

The integrated FMS should provide facilities for the crew to easily override the current guidance commands (without amending the flight plan) for rapid response to tactical situations. Some of the intervention overrides are:

- Altitude target

1995
1996
1997
1998
1999
2000
2001
2002
2003
2004
2005
2006
2007
2008
2009
2010
2011
2012
2013
2014
2015
2016

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 2017 • Speed target
- 2018 • Course/Heading target
- 2019 • Vertical Speed target

2020 This temporary override should replace the applicable guidance output until the
 2021 override is terminated at which point the internally generated guidance commands
 2022 should resume.

COMMENTARY

2024 Different autoflight system implementations may allocate these
 2025 intervention modes to the FMF, while others may accomplish these
 2026 modes through a combination of FMF and AFCS functions.

4.3.3.1 Lateral Guidance and Path Construction

2028 The lateral guidance of the aircraft is performed using the position data derived by
 2029 the navigation function and a lateral reference path. For the active plan, the lateral
 2030 guidance function generates a roll command based on the above data to guide the
 2031 aircraft to geodesic leg segments between entered waypoints and to transitional
 2032 paths at the leg intersections. Special procedural paths such as holding patterns
 2033 (HM), procedure holds (HF), procedure turns (PI), and lateral offset paths are
 2034 automatically flown along with the transitional paths into and out of these
 2035 procedures.

2036 The aircraft’s progress along each path segment is continually monitored to
 2037 determine when a path transition must be initiated. Direct-to guidance is also
 2038 available from the aircraft’s present position to any waypoint or to intercept a course
 2039 to a waypoint to accommodate modified ATC clearances.

2040 The FMS should support lateral guidance along a geodesic track between two
 2041 points without any geographical area restriction, including polar areas - north of 85N
 2042 and south of 85S.

COMMENTARY

2044 Flying a specified course/heading, holding pattern, parallel offset or desired track
 2045 change larger than 45 degrees is assumed not to be required in polar areas.

4.3.3.1.1 Lateral Reference Path Construction

2047 The lateral function computes independent continuous lateral paths for all existing
 2048 flight plans. This computation should be fully integrated with the vertical trajectory in
 2049 that the turn conics should be based on the predicted speeds at the leg transitions.
 2050 Proper construction for all ARINC 424 defined waypoint/leg types and the
 2051 corresponding transitional paths between them should be generated and flown by
 2052 the system.

COMMENTARY

2054 Altitude terminated legs are unique in that the termination criteria for
 2055 the leg is based on altitude instead of a lateral location. This implies a
 2056 further coupling to the vertical profile in the construction of the
 2057 reference path for these leg types.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2058 **4.3.3.1.2 Lateral Leg Transitions**

2059 Leg transitions should provide for a continuous path between legs and generally
 2060 should be determined by the course change between the legs, the type of next leg,
 2061 waypoint overfly requirement, bank angle limitations, and the predicted speeds for
 2062 the transition. Leg transition paths must be constructed within the airspace
 2063 limitations specified in DO-283() for operation within RNP airspace.

2064 When a lateral path transition cannot be constructed per the leg definition, the
 2065 system should provide an indication to the crew.

2066 There are three categories of turns recognized in DO-283():

- 2067 1. Fly-by turns- Subdivided into 2 categories, high altitude (\geq FL195) and low
 2068 altitude ($<$ FL195)
- 2069 2. Fly-over turns
- 2070 3. Fixed radius transitions

2071

COMMENTARY

2072 DO-283() assumes that course changes at a fly-by fix will not exceed
 2073 120 degrees for low altitude operation ($<$ FL195) and 70 degrees for
 2074 high altitude operation (\geq FL195). While this assumption is reasonable
 2075 for a database-defined procedure and enroute definitions, flight crew
 2076 modifications to the route may make this assumption impractical due
 2077 to factors such as aircraft performance, course, change, and leg
 2078 length.

2079

2080 **4.3.3.1.2.1 Fly-By Turns**

2081 DO-283() provides the requirements for the fly-by leg transition. DO-283() relates
 2082 the radius of the turn to ground speed and bank angle and gives a theoretical
 2083 transition area within which the aircraft should remain throughout the turn.
 2084 Remaining within the transition area is dependent upon the course change
 2085 assumptions noted above and the area may not apply if the course change is
 2086 exceeded. In such exceedance cases, the path to be flown should be displayed to
 2087 the flight crew. For normal fly-by transitions (i.e. course changes less than 135
 2088 degrees), the fix should sequence at the lateral bisector.

2089

2090

COMMENTARY

2091 When situations are encountered outside the DO-283() assumptions
 2092 noted above, the following guidelines are offered:

2093 For fly-by turns with track changes less than 135 degrees, a circular
 2094 transition path should be constructed tangential to the current and the
 2095 next legs. The leg transition should occur at the bisector. For track
 2096 changes greater than 135 degrees, a circular path should be
 2097 constructed to be tangential to the current leg and a line normal to the
 2098 current leg emanating from the waypoint. This path should be
 2099 extended to provide a 40- to 50-degree intercept to the next leg. See
 2100 Figure 4.3.3-1 below.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2101
2102
2103
2104
2105
2106
2107
2108
2109

The fly-by leg transition reduces track miles while also enhancing ride quality. However, enroute air traffic controllers have noted that some aircraft begin the turn initiation earlier than expected and in some cases have conflicted with other traffic. The criteria specified in DO-283() are minimum requirements and can result in a generous theoretical transition area. It is recommended that equipment manufacturers give ample consideration to airspace consumption when selecting nominal bank angles.

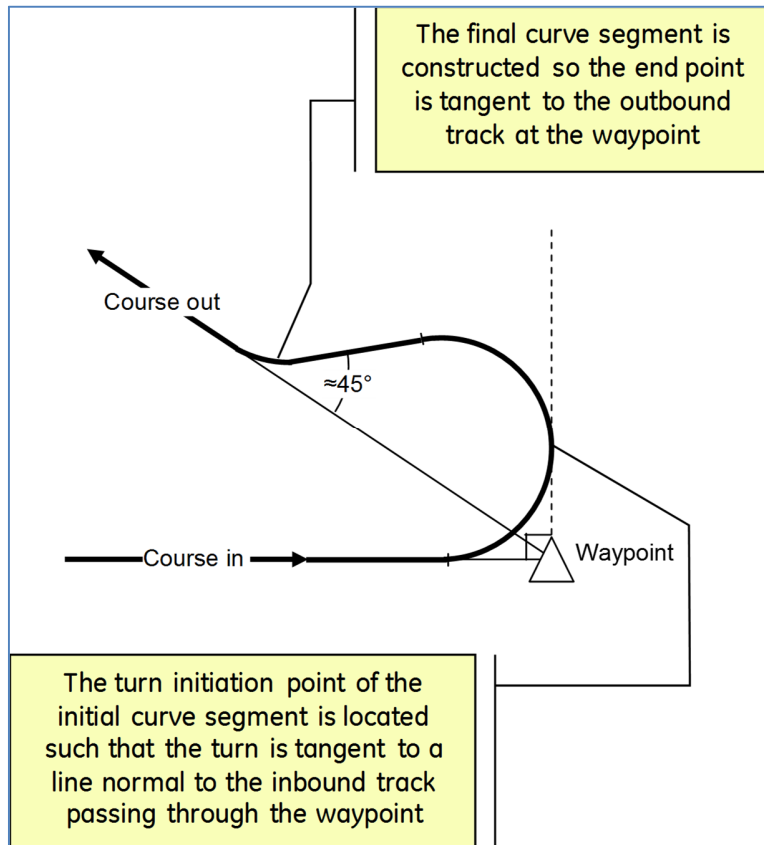


Figure 4.3.3-1 Fly-By Turn > 135 Degrees

2110
2111
2112
2113
2114
2115
2116
2117
2118
2119
2120

4.3.3.1.2.2 Fly-Over Turns

When a fly-over waypoint is specified, the leg transition should occur at the waypoint prior to transitioning to the next leg. For fly-over waypoints, the next leg type should define the transition path. When the fly-over waypoint is sequenced, the lateral guidance function should command an intercept to capture the next leg. The intercept should be based upon aircraft performance and geometry parameters such as ground speed, leg length, and bank angle limitations.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2121

COMMENTARY

2122

2123

2124

2125

2126

2127

2128

DO-283() discourages the use of fly-over waypoints since the path is not repeatable and RNP containment cannot be assured. If fly-over transitions are used, for example at the missed approach point, the leg following the fly-over fix is assumed not to have the requirements of RNP applied to it. It is recognized, however, that some terminal area operations may require the use of fly-over waypoints followed by a defined leg to the next waypoint.

2129

2130

4.3.3.1.2.3 Fix Radius Transitions (FRT)

2131

2132

2133

2134

2135

2136

2137

The FRT is intended to define a fixed radius transition path between airway legs in the enroute sector when parallel routes are closely spaced at the transition waypoint and the fly-by turn is not compatible with separation criteria. DO-283() specifies the geometry and method of computing the fixed turn radius. The FRT is defined in terms of the track change, turn radius, and lead distance. For those enroute airways using an FRT, the turn radius is coded in the ARINC 424 navigation database for the respective airway where the FRT is specified.

2138

2139

COMMENTARY

2140

2141

2142

2143

2144

2145

2146

ICAO Doc 9613: *Performance-Based Navigation Manual*, lists two possible radii, 22.5 NM for high altitude routes (\geq FL 195) and 15 NM for low altitude routes. Although these radii are suggested and the actual radii coded in the navigation database could vary, it is expected that airspace designers will abide by these guidelines so that aircraft bank angle limitations in current systems will be respected.

2147

2148

Special Lateral Path Construction

2149

2150

2151

2152

All procedural paths such as hold patterns, procedure turns and procedure holds should be continuous paths that allow accurate reference paths to be constructed for the complete flight plan. The construction of these paths must meet the airspace limitation and path geometry requirements specified in DO-236().

2153

2154

2155

2156

2157

2158

For hold pattern entries, these paths contain all the geodesic and curved segments of the entry (including transition from the prior leg) and may optionally be displayed on the ND before the entry maneuver. After the entry is complete, subsequent path updates should account for changes in airspeed, wind speeds and altitude of the airplane. Hold entry paths must conform to the airspace limitations specified in DO-236().

2159

2160

2161

2162

2163

2164

For holding pattern exits which require a sequence of the hold fix, the lateral path should be updated to include the appropriate fly-by transition to the following leg and the paths must conform to the airspace limitations specified in DO-236() for hold exits. For other holding pattern exits (e.g. a direct-to) the lateral path should be updated accordingly, without a return to the hold fix, and should comply with airspace limitations specified in RNP MASP for those types of maneuvers.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2165 Similar path construction and path prediction techniques are used when procedure
2166 turns and procedure holds are part of the flight plan.

2167 4.3.3.1.4 Lateral Guidance Roll Command

2168 Based on the aircraft current state provided by the navigation function and the
2169 stored reference path, lateral guidance should compute a roll steering command
2170 that is both magnitude and rate limited. This roll command is computed to capture
2171 and track the geodesic and curved path segments that comprise the reference path
2172 as displayed on the ND.

2173 4.3.3.1.5 Lateral Guidance Output Parameters

2174 Lateral guidance should compute and output the following parameters related to the
2175 active flight plan:

- 2176 • Roll command
- 2177 • Distance to go (active waypoint)
- 2178 • Bearing to go (active waypoint)
- 2179 • Desired Track
- 2180 • Cross track error
- 2181 • Track angle error

2182 4.3.3.1.6 Lateral Capture Path Construction

2183 At engagement, a capture path may be constructed that guides the airplane to the
2184 active leg. This capture path should capture the active guidance leg such that
2185 smooth path acquisition occurs without excessive roll activity or turns in the wrong
2186 direction.

2187 4.3.3.1.7 Localizer/MLS Capture

2188 [Deleted by Supplement 5]

2189 4.3.3.1.8 Earth Reference Model

2190 A WGS-84 based earth model is the standard reference earth model. If geodesic
2191 path definition based on WGS-84 is not employed (e.g. spherical earth model), any
2192 differences between the selected earth reference model and the WGS-84 earth
2193 model must be included as part as the path definition error.

2194 Refer to DO-236() and/or DO-283() for additional details.

2195

2196 4.3.3.2 Vertical Guidance and Trajectory Predictions

2197 4.3.3.2.1 Trajectory Predictions

2198 The Trajectory Predictions function computes and stores a 4D trajectory which
2199 represents a prediction of the aircraft state (e.g. distance, altitude, airspeed, fuel,
2200 time) at various points in the flight plan which is used for display and downlink.
2201 Trajectory Predictions also computes a reference descent and approach trajectory
2202 which is used by Vertical Guidance for control in descent and approach.

2203 The system should compute a complete aircraft trajectory prediction along the
2204 specified lateral route. When in preflight and a destination exists in the flight plan,
2205 the trajectory should include a takeoff segment, a climb segment, a cruise segment

4.0 FLIGHT MANAGEMENT FUNCTIONS

2206 which may include cruise altitude changes (cruise steps), a descent segment, and
 2207 an approach segment to the destination. When enroute, the trajectory should
 2208 include segments for the remaining phases of flight. The trajectory may include
 2209 predictions of the missed approach when included in the flight plan. The trajectory
 2210 should be continuous from the departure airport (or present position if enroute) to
 2211 the destination airport. The takeoff, climb, and cruise segments should be a
 2212 prediction (i.e. model) of how lateral guidance and vertical guidance will guide the
 2213 aircraft from present position along the specified route toward the cruise altitude.
 2214 The descent and approach segments should be defined in two parts: (a) a reference
 2215 descent and approach path that defines a Top of Descent location as well as
 2216 reference altitudes and airspeeds for all points between Top of Descent and the
 2217 destination and (b) a prediction of how VNAV will guide the aircraft to acquire and
 2218 track this descent and approach reference path (both altitude and airspeed) once
 2219 the aircraft is in descent or approach.

2220

2221

COMMENTARY

2222 The descent/approach may be thought of as two separate
 2223 trajectories, one which is a reference and defines *path* altitudes and
 2224 speeds (i.e. where the aircraft should be) and one which is a
 2225 prediction based on the aircraft present position and defines
 2226 *predicted* altitudes and speeds (i.e. where the aircraft will be if
 2227 prediction assumptions are valid). It should be noted that some
 2228 systems display the predicted descent altitudes and speeds while
 2229 others display the reference path altitudes and speeds.

2230

2231

The system should compute a vertical trajectory for the following flight plans:

2232

- Active

2233

- Modified

2234

- Secondary

2235

2236

For each point in the vertical trajectory predictions, the following data should be
 2237 computed, stored, and made available to other functions:

2238

- Predicted Altitude

2239

- Predicted Speed

2240

- Estimated Time of Arrival (ETA) or Estimated Time Enroute (ETE)

2241

- Predicted Fuel Remaining

2242

2243

Refer to Section 4.3.3.2.3 for accuracy requirements related to the ETA.

2244

2245

In addition, for each point between Top of Descent and the destination (inclusive),
 2246 the following data should be computed, stored, and made available to other
 2247 functions:

2248

- Reference Path Altitude

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 2249 • Reference Path Speed

2250

2251 The vertical trajectory predictions should include points at:

- 2252 • the lateral sequence point of each waypoint in the primary flight plan
- 2253 • speed change points (start and end of an acceleration/deceleration)
- 2254 • Crossover Altitude
- 2255 • Top of Climb
- 2256 • Step Climb
- 2257 • End of Descent
- 2258 • Top of Descent
- 2259 • Level-Off Start
- 2260 • Level-Off End
- 2261 • Descent Path Intercept Point (when off-path in descent)

2262

2263

COMMENTARY

2264 The above points are the minimum required to support display and
2265 datalink requirements including ADS-C Extended Projected Profile.
2266 Additional points may be necessary to support specific capabilities or
2267 to obtain a desired accuracy via linear interpolation at any arbitrary
2268 point in the vertical trajectory.

2269

2270 The vertical trajectory predictions should be based on the following inputs:

- 2271 • Lateral flight plan elements (Section 4.3.2.4)
- 2272 • Vertical flight plan elements (Section 0)
- 2273 • Measured and forecast winds/temperatures (Section 4.3.2.5.1)
- 2274 • Lateral path including curved transitions between legs, holding pattern
2275 entries and lateral offsets (Section 4.3.3.1)
- 2276 • Models of the airframe lift and drag characteristics
- 2277 • Models of airframe speed and altitude limitations (e.g. stall, buffet, VMO,
2278 MMO)
- 2279 • Models of the engine thrust and fuel flow characteristics
- 2280 • Aircraft weight and center of gravity
- 2281 • Crew selected and preselected guidance modes

2282

2283 The vertical trajectory predictions should be updated when an edit is made to a
2284 flight plan element or other input into vertical trajectory predictions. Refer to Section
2285 3.4.2 for specific response time requirements related to these modifications.

2286 The vertical trajectory predictions should be updated on a periodic basis to account
2287 for tactical interventions as well as wind, temperature, and other modeling errors.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2288 The vertical trajectory should be integrated with the lateral trajectory such that the
 2289 climb rate and lateral leg distances used to compute the vertical trajectory account
 2290 for smooth (curved) transitions between lateral legs.

2291

2292

COMMENTARY

2293 The above requirement is not intended to preclude assumptions in
 2294 the vertical trajectory when lateral discontinuities and manually
 2295 terminated legs (i.e. HM, VM, and FM legs) are encountered in the
 2296 flight plan. In these situations, the lateral trajectory is ill-defined and
 2297 the vertical and lateral trajectory assumptions may differ in order to
 2298 provide a more reasonable prediction of destination time and fuel.
 2299 Users of 3D/4D trajectory information should keep these scenarios in
 2300 mind when using the trajectory information and designing interfaces.

2301

2302 The vertical predictions should comply with all waypoint altitude and speed
 2303 constraints as specified in Sections 4.3.2.5.2 and 4.3.2.5.3. When this is not
 2304 possible due to aircraft performance or a conflict in the constraints, appropriate
 2305 indications should be provided to inform the crew of the specific issue. As with
 2306 vertical guidance, vertical trajectory predictions should prevent a descending
 2307 maneuver in a climbing segment in order to satisfy a climb altitude constraint.
 2308 Likewise, it should prevent an ascending maneuver in a descending segment in
 2309 order to satisfy a descent altitude constraint. Similarly, vertical predictions should
 2310 produce a speed profile that is monotonic during a single phase of flight in the
 2311 presence of speed constraints. The predicted speed profile should remain within the
 2312 operating envelope of the specific aircraft. It should take into account aircraft/engine
 2313 performance, flap configuration changes, selected speed schedules, and speed
 2314 constraints/limits. The trajectory predictions and associated advisories should be
 2315 consistent with vertical guidance when the vertical guidance function is engaged.

2316 Refer to DO-283() for specific VNAV performance and operational requirements.

2317

4.3.3.2.1.1 Takeoff Phase Predictions

2319 The takeoff phase may be constructed based on a simple model or more complex
 2320 first principle models using takeoff thrust, flap setting and other vertical flight plan
 2321 parameters including derated takeoff off thrust, thrust reduction height/altitude and
 2322 acceleration height/altitude. The takeoff model should support the overall accuracy
 2323 requirements and system level advisories.

2324 Refer to Climb Phase Predictions for an example of a typical takeoff segment.

2325

4.3.3.2.1.2 Climb Phase Predictions

2327 The climb phase is typically predicted based on climb thrust, which may be a
 2328 derated and/or noise abatement climb thrust, and a speed schedule for optimized
 2329 operations. When constraints are encountered as part of the vertical flight plan,
 2330 these constraints take precedence over the optimal climb profile. Waypoint altitude
 2331 constraints are referenced to baro altitude. Predictions may assume a transition to
 2332 STD pressure at the transition altitude. AT or BELOW and AT altitude constraints

4.0 FLIGHT MANAGEMENT FUNCTIONS

2333 apply as an upper limit altitude before the associated waypoint. AT or ABOVE and
 2334 AT altitude constraints apply as a lower limit altitude after the associated waypoint.
 2335 Similarly, waypoint speed constraints are referenced to calibrated airspeed and
 2336 apply as an upper and/or lower speed limit. AT or BELOW and AT waypoint speed
 2337 constraints apply as an upper speed limit before the associated waypoint. AT or
 2338 ABOVE and AT waypoint speed constraints apply as a lower speed limit after the
 2339 associated waypoint until climb mach is achieved or cruise altitude is captured. A
 2340 series of identical AT speed constraints forms a constant speed segment in the
 2341 climb speed profile. Altitude associated speed limits are referenced to calibrated
 2342 airspeed and apply below the specified altitude.

2343

2344 Figure 4.3.3-2 depicts an example of a climb phase prediction.

2345

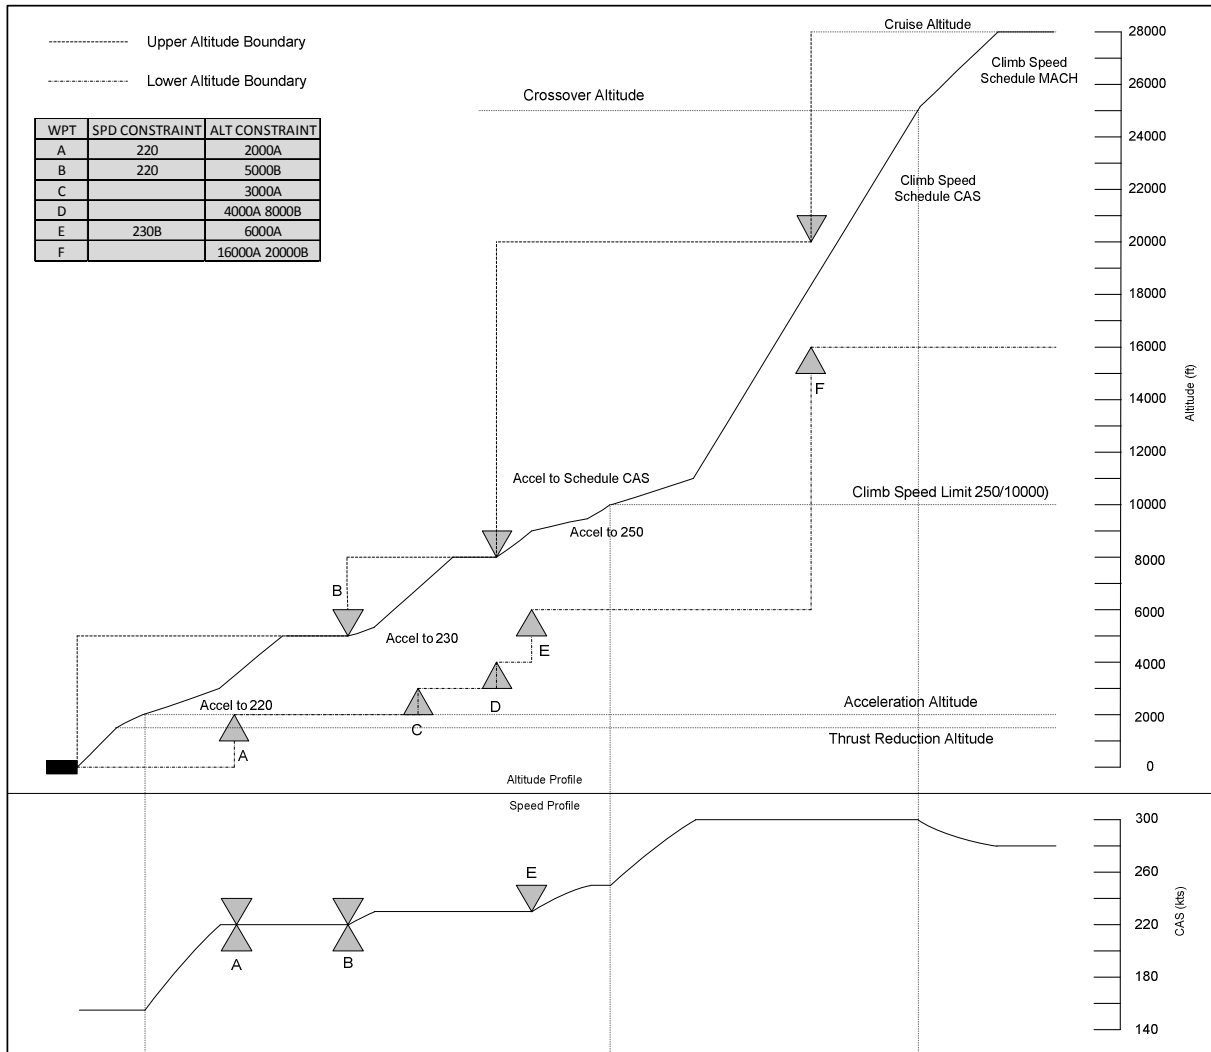


Figure 4.3.3-2 Climb Phase Prediction Example

2346

2347

2348

4.0 FLIGHT MANAGEMENT FUNCTIONS

2349

COMMENTARY

2350

2351

2352

2353

2354

2355

2356

2357

2358

2359

2360

2361

2362

In this example, the predicted climb profile, which is based on the selected climb thrust limits and climb speeds, meets all the ABOVE altitude constraints. However, factors such as aircraft characteristics and actual wind conditions may cause an ABOVE altitude constraint violation. If an ABOVE altitude constraint cannot be satisfied with the selected thrust limits and climb speeds, the crew should be informed of the situation prior to committing to the procedure so a different thrust/speed climb can be attempted. It is assumed that procedure designers will take aircraft performance and meteorological variation into account in the design of departure procedures. It is highly desirable to impose as few constraints and/or ATC interventions as is possible during a departure so the aircraft can perform a Continuous Climb Departure (CCD) for fuel/time efficient climb operation.

2363

2364

4.3.3.2.1.3 Cruise Phase Predictions

2365

2366

2367

2368

2369

2370

2371

2372

2373

2374

2375

2376

2377

2378

The cruise phase is typically predicted based on an optimal speed profile at a specified cruise altitude. When a step climb is active or the aircraft is in cruise below the cruise altitude, the system should predict a climb to cruise altitude assuming engagement of the vertical guidance function. Likewise, when a step descent is active or the aircraft is in cruise above the cruise altitude, the system should predict a descent to cruise altitude assuming engagement of the vertical guidance function. The system may provide for one or more preplanned and/or optimal cruise steps. Preplanned cruise steps may be a climb/descent at a specified waypoint or an optimal step where the system determines the optimal location and/or altitude to change cruise altitude. Similarly, the system may provide for a drift up cruise capability (“cruise/climb mode” in ARINC 660B) which allows the system to perform a drift up maneuver within a specified altitude block to better achieve optimal operation as fuel is burned off and aircraft weight decreases. When present, these preplanned maneuvers should be reflected in the cruise predictions.

2379

2380

2381

2382

2383

2384

2385

The cruise speed is based on the selected cruise performance mode. When an active RTA exists in the flight plan, the cruise speed profile should reflect the speeds that will be flown in an attempt to achieve the RTA. Similar to preplanned cruise steps, the system may provide for one or more preplanned cruise speed or performance mode changes (e.g. constant mach segments). When present, these preplanned cruise speed changes should be reflected in the cruise predictions.

2386

2387

2388

2389

The system should provide an indication when a destination exists in the flight plan and predictions determine the cruise altitude is unachievable due to aircraft performance limitations and/or insufficient route distance.

2390

2391

4.3.3.2.1.4 Descent Phase Path Construction and Predictions

2392

2393

2394

For the descent phase, the system should construct a reference descent path that vertical guidance can use as a target path. During the descent phase, tactical situations may divert the aircraft from the descent reference path, so the system

4.0 FLIGHT MANAGEMENT FUNCTIONS

2395 should provide vertical predictions that model how vertical guidance will attempt to
2396 capture and track the reference path (altitude and speed).

2397

2398 4.3.3.2.1.4.1 Descent Phase Path Construction

2399 The descent path should be constructed based on idle or near idle thrust and a
2400 speed schedule for optimized operations. When altitude constraints are
2401 encountered in the vertical flight plan and the idle path does not satisfy one or more
2402 constraints, the constraints take precedence over the optimal descent profile and a
2403 geometric descent path constructed. The resultant vertical trajectory should be
2404 flyable by the aircraft. When this is not possible, appropriate indications should be
2405 provided. Waypoint altitude constraints are referenced to baro altitude and apply at
2406 the associated waypoint. A series of altitude constraints form a geometric boundary
2407 that the descent path must stay within beyond the first constrained waypoint,
2408 excluding small excursions for idle path decelerations (see Figure 3). Similarly,
2409 waypoint speed constraints are referenced to calibrated airspeed and apply as an
2410 upper and/or lower speed limit. AT or BELOW and AT waypoint speed constraints
2411 apply as an upper speed limit after the associated waypoint. AT or ABOVE and AT
2412 waypoint speed constraints apply as a lower speed limit before the associated
2413 waypoint but do not apply to the descent mach and/or extend into the cruise phase.
2414 A series of identical AT speed constraints forms a constant speed segment in the
2415 descent speed profile. Altitude associated speed restrictions are referenced to
2416 calibrated airspeed and apply below the specified altitude. To honor these
2417 constraints, the vertical path must anticipate the altitude/speed constraint prior to
2418 reaching the associated waypoint/altitude.

2419 When conflicts exist between different types of constraints or the aircraft
2420 performance cannot satisfy all constraints, the descent path construction should
2421 give priority to one constraint over another as follows:

- 2422 1. Altitude constraints
- 2423 2. Vertical angle (FPA) constraints
- 2424 3. Speed constraints
- 2425 4. Time constraints (RTA)

2426

COMMENTARY

2427 A conflict between an altitude constraint and an FPA constraint can
2428 only exist for an ABOVE altitude constraint. In the case of a BELOW
2429 constraint, a level segment should be inserted to satisfy both
2430 constraints (see Figure 4.3.3-9). An altitude constraint should never
2431 cause construction of the vertical path for the leg to be shallower than
2432 the FPA constraint. The above requirement does not preclude
2433 insertion of a vertical discontinuity as a means to ensure some
2434 measure of speed control and/or minimum deceleration capability.

2435

2436 Figure 4.3.3-3 depicts an example of a descent path construction.
2437

4.0 FLIGHT MANAGEMENT FUNCTIONS

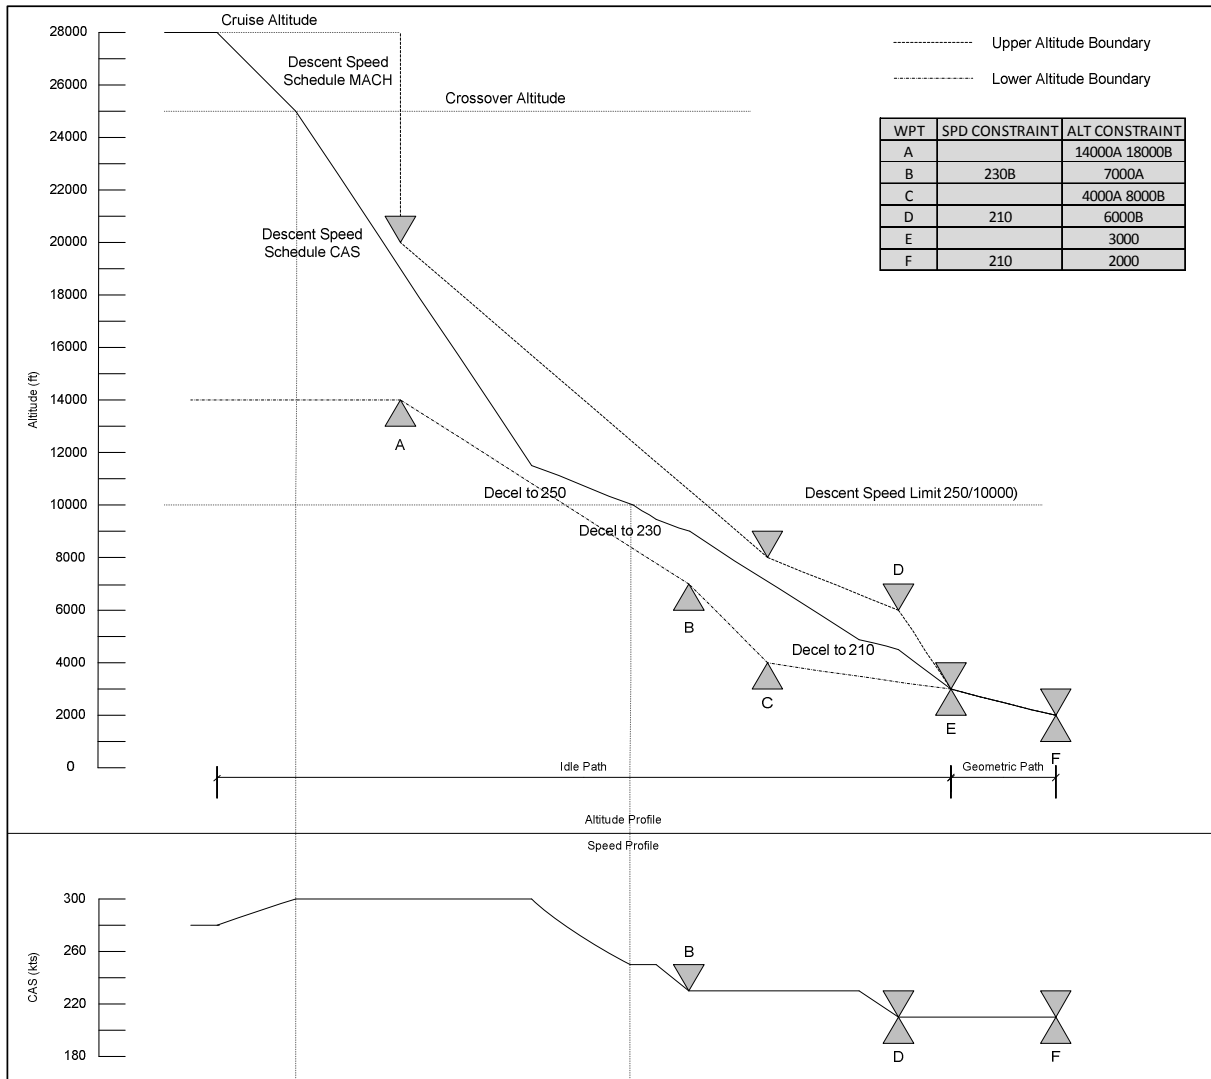


Figure 4.3.3-3 Descent Path Construction Example #1

COMMENTARY

In this example, the descent path fits within the constraint boundaries. There may be procedures or conditions where the descent path follows a boundary. In some cases, factors such as aircraft characteristics and meteorological conditions may dictate if a descent path is flyable (per the rules) for a given aircraft on a given day. When a continuous, flyable descent path which satisfies all constraints cannot be constructed, the system should provide appropriate indications to the crew. It is assumed that procedure designers will take aircraft performance and meteorological variation into account in the design of arrival procedures. It is highly desirable to impose as few constraints and/or ATC interventions as is possible during an arrival so the aircraft can perform a Continuous Descent Operation (CDO) for fuel/time efficient descent operation.

2438
 2439
 2440
 2441
 2442
 2443
 2444
 2445
 2446
 2447
 2448
 2449
 2450
 2451
 2452
 2453
 2454

4.0 FLIGHT MANAGEMENT FUNCTIONS

2455

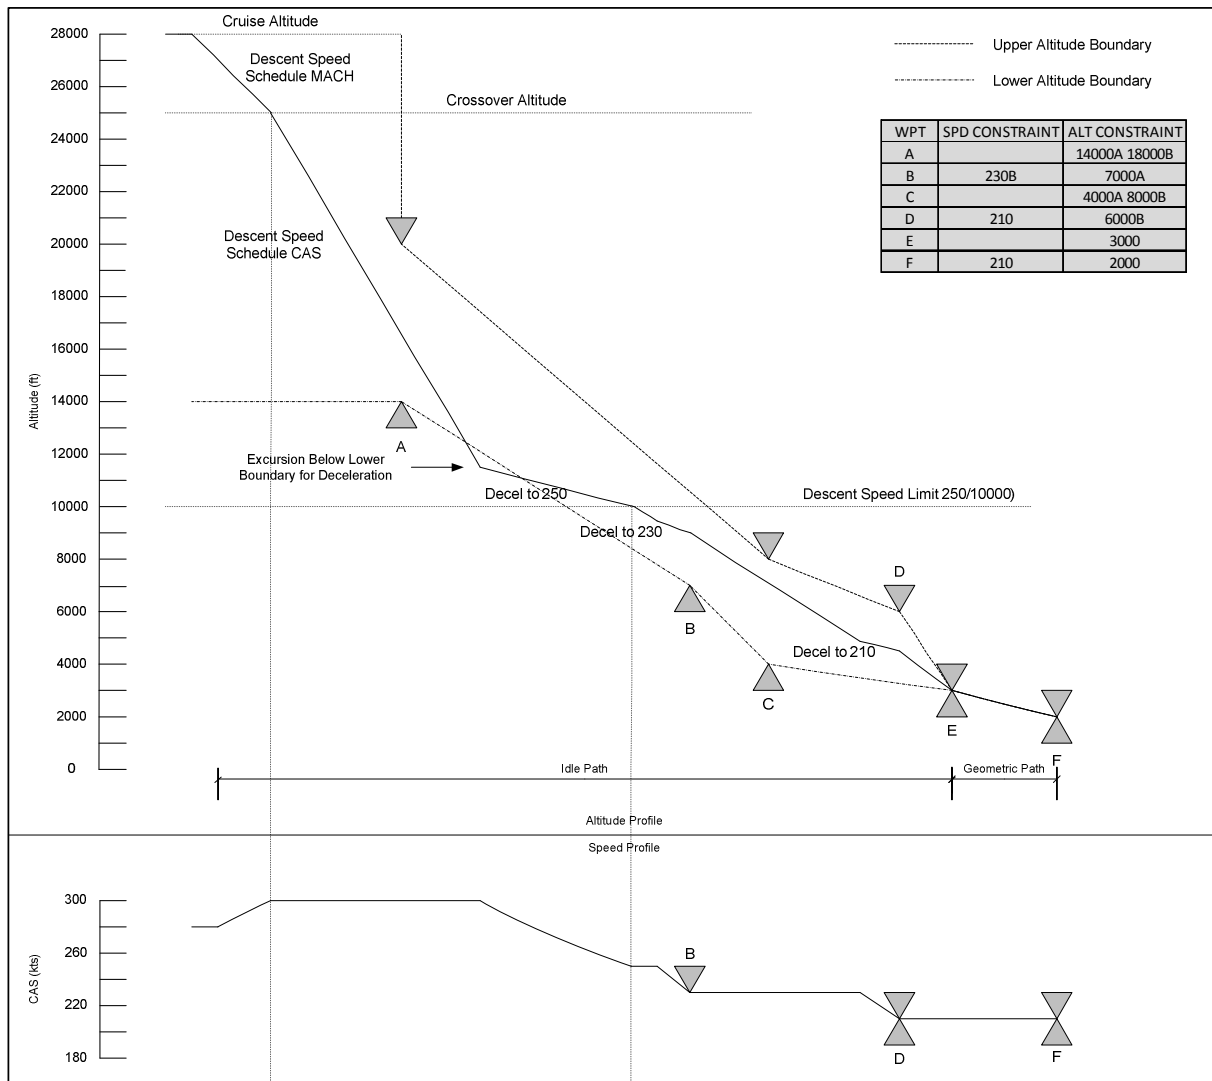


Figure 4.3.3-4 Descent Path Construction Example #2

COMMENTARY

In this example, a shallow idle deceleration segment is constructed to facilitate a short, efficient deceleration to the descent speed limit. Per DO-283(), to facilitate decelerations within curvilinear (idle) paths, small excursions below the lower altitude boundary are allowed and expected when an idle path is constructed to satisfy a series of AT or BELOW, AT or ABOVE, and WINDOW constraints. Excursions below the lower altitude boundary for step-down or dive-and-drive descent path strategies (Figure 4.3.3-5) or above the upper altitude boundary for stay-high descent path strategies (Figure 4.3.3-6) are prohibited.

2456
2457
2458
2459
2460
2461
2462
2463
2464
2465
2466
2467
2468
2469
2470

4.0 FLIGHT MANAGEMENT FUNCTIONS

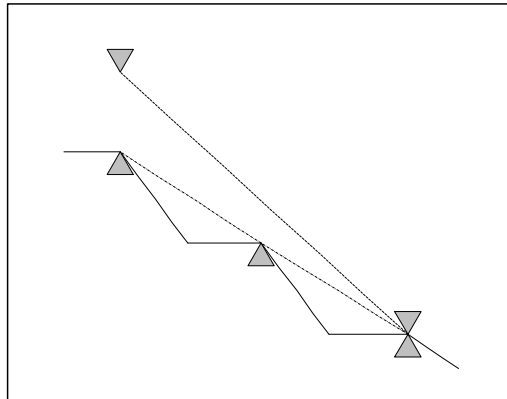


Figure 4.3.3-5 Step-Down Idle Descent (Prohibited)

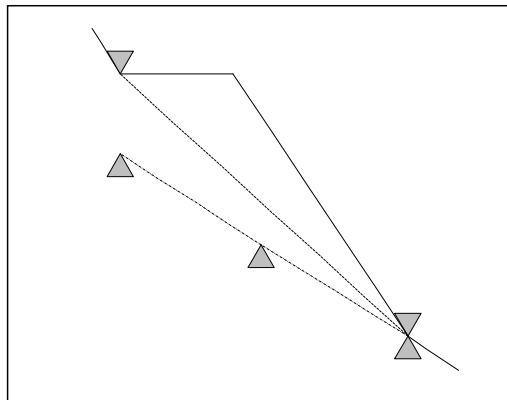


Figure 4.3.3-6 Stay-High Idle Descent (Prohibited)

2471
2472
2473

2474
2475

2476
2477
2478
2479
2480
2481
2482
2483

The descent path is typically constructed using a series of straight line segments which comply with the altitude boundary rules as described above. When the descent path is flown using the Vertical Guidance function, systems may cross above or below the altitude constraint value due to a vertical fly-by transition. DO-283() defines the acceptable altitude deviation for a vertical fly-by transition.

2484 When the crew initiates a vertical direct-to to a vertically constrained fix in descent,
2485 the system should construct a geometric descent path from the aircraft position to
2486 the vertically constrained fix.

2487

2488

COMMENTARY

2489
2490
2491
2492
2493

The above requirement is not intended to take precedence over normal geometric path construction rules. In other words, the system is not required to build an unflyable descent path nor one that violates a vertical angle constraint.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2494 4.3.3.2.1.4.2 Descent Phase Predictions

2495 During the descent phase, situations may arise which divert the aircraft from the
 2496 desired reference path/speed profile. These include: not being cleared to descend
 2497 at the predicted top of descent, being instructed to descend prior to the top of
 2498 descent, unforecasted meteorological conditions and flight plan edits. The system
 2499 should provide vertical predictions (altitude, speed, time, and fuel) that model how
 2500 vertical guidance will attempt to capture and track the descent reference path.
 2501 These predictions should be available for display and datalink in order to support
 2502 situational awareness and advisories to the crew. When descent predictions
 2503 determine that a constraint will be violated, appropriate indications should be given
 2504 to the crew.

2505

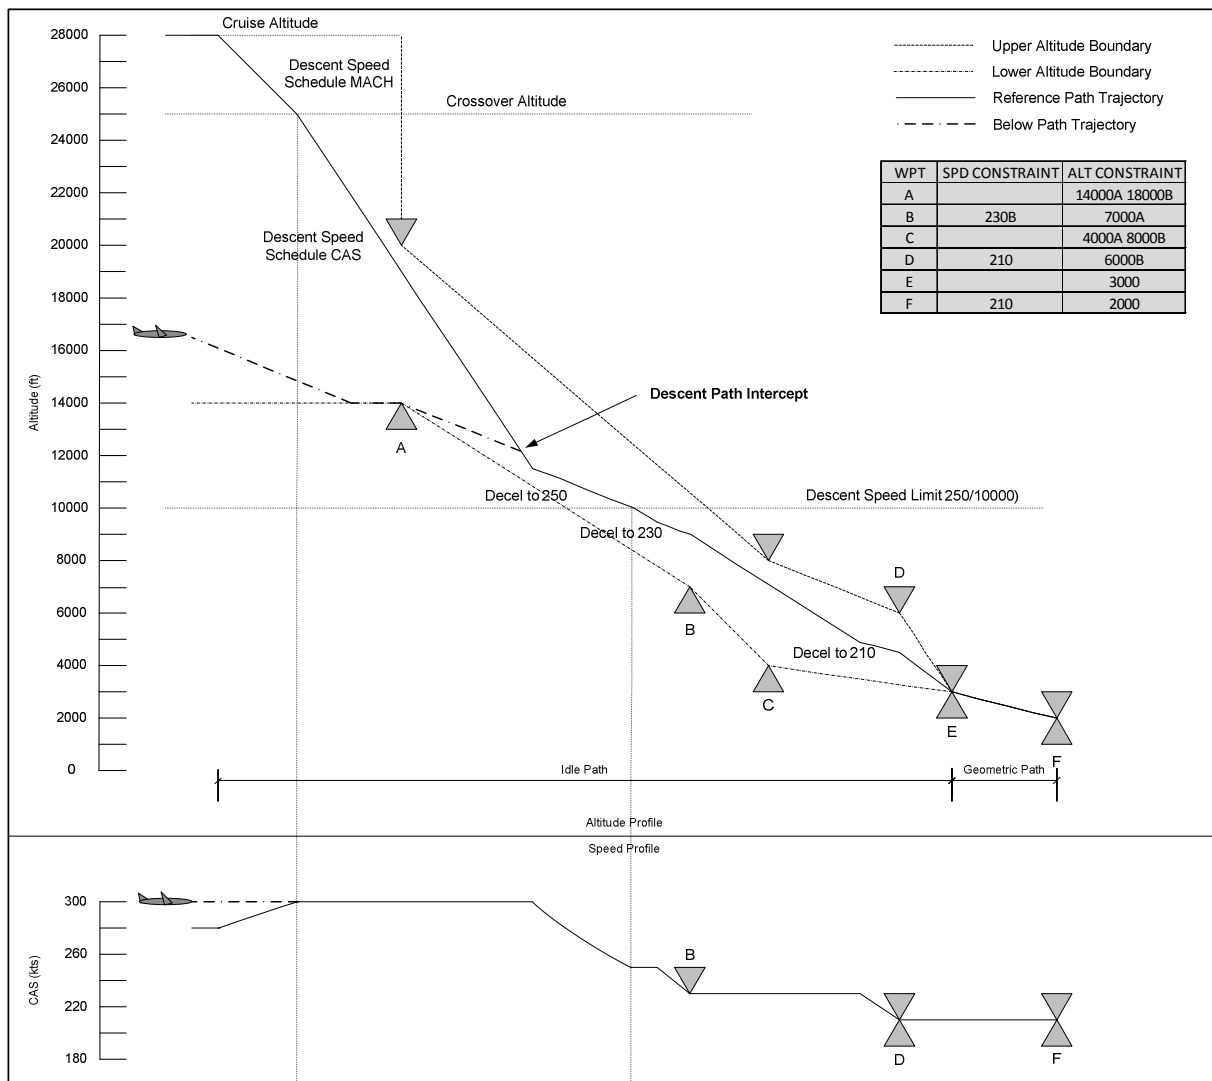


Figure 4.3.3-7 Below-Path Descent Prediction Example

2506

2507

2508

4.0 FLIGHT MANAGEMENT FUNCTIONS

COMMENTARY

2509
2510
2511
2512
2513
2514
2515

In this descent scenario, predictions model the vertical guidance below-path descent control strategy. A level-off is performed at 14000 feet to honor the ABOVE altitude constraint at WPT A. Upon sequence of WPT A, a partial power descent resumes until intercept of the descent reference path.

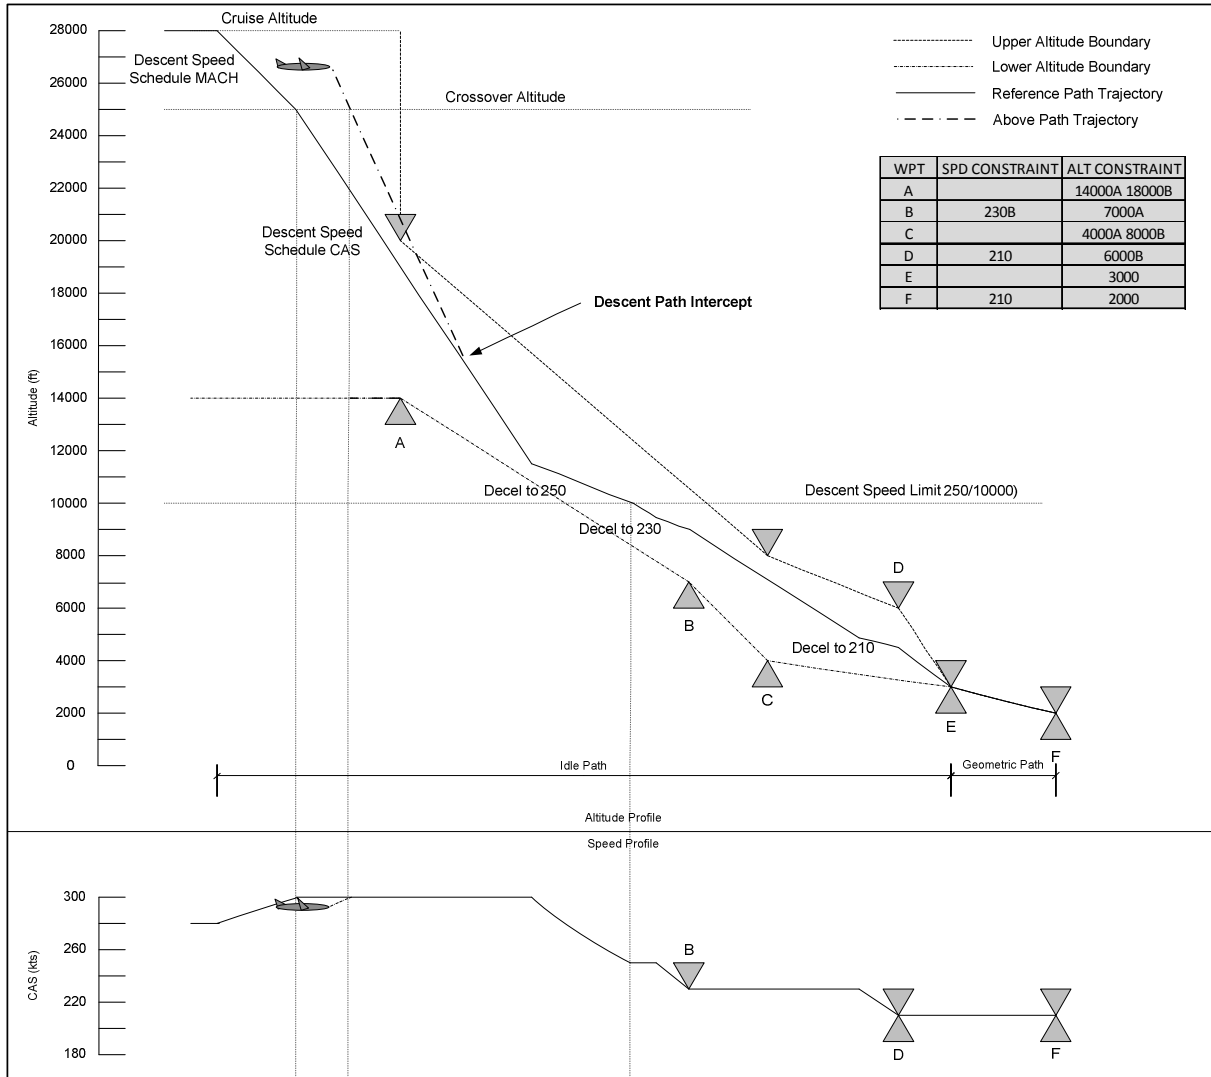


Figure 4.3.3-8 Above-Path Descent Prediction Example

COMMENTARY

2516
2517
2518
2519
2520
2521
2522
2523
2524

In this descent scenario, predictions assume vertical guidance will attempt to recapture the descent reference path by descending steeper than the planned descent rate. The above-path descent predictions predict the aircraft will cross WPT A at 19000 feet and violate the 18000 BELOW constraint.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2525

2526 **4.3.3.2.1.5 Approach Phase Path Construction and Predictions**

2527 Similar to descent phase, the system should construct an approach path for use by
2528 vertical guidance as a reference or target path. As with takeoff, the approach path
2529 may be constructed using a simple model or more complex first principle models
2530 using idle thrust, aeroconfiguration setting, and other vertical flight plan parameters.
2531 The approach model should support the overall accuracy requirements and system
2532 level advisories.

2533 During approach phase, tactical situations may divert the aircraft from the reference
2534 path, so the system should provide vertical predictions that model how vertical
2535 guidance will attempt to capture and track the reference path (altitude and speed).

2536

2537 The vertical approach path consists of two portions: an initial approach path
2538 followed by a final approach path. In the initial approach path, the aircraft
2539 decelerates from a flaps-up target speed toward a configured landing speed. The
2540 initial approach path terminates upon reaching the start of the final approach path.
2541 The final approach path extends from the final approach capture point (intercept of
2542 final approach vertical angle) to the destination and is typically constructed at a
2543 constant landing configuration speed and vertical angle.

2544

2545 The final approach path should be constructed based on the vertical angle coded on
2546 the destination runway, Missed Approach Decision Point (MAP), or Final End Point
2547 (FEP). In the case of a MAP beyond the Landing Threshold Point (LTP), the system
2548 may compute the FEP and associated angle or may obtain the FEP and angle from
2549 the navigation database. Refer to ARINC 424 for additional details on non-precision
2550 approach codings. For the final approach, the system should not construct a vertical
2551 path shallower than the specified vertical angle. The system may construct a
2552 vertical path steeper than the specified vertical angle(s) in order to satisfy an
2553 ABOVE altitude constraint. The above statements are not intended to preclude
2554 temperature compensation of the altitude constraints and vertical angle(s). A few
2555 typical final approach path geometries are illustrated in Figure 4.3.3-9 and Figure
2556 4.3.3-10 below. A final approach path which ends at a FEP coded in the navigation
2557 database is illustrated in Figure 4.3.3-11 below.

2558

4.0 FLIGHT MANAGEMENT FUNCTIONS

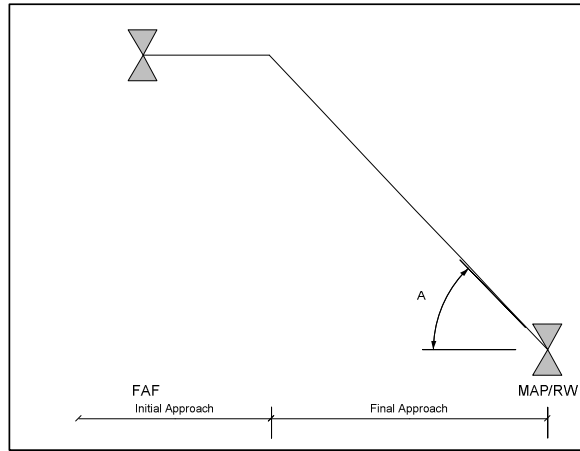


Figure 4.3.3-9 Typical Final Approach #1

2559
2560
2561

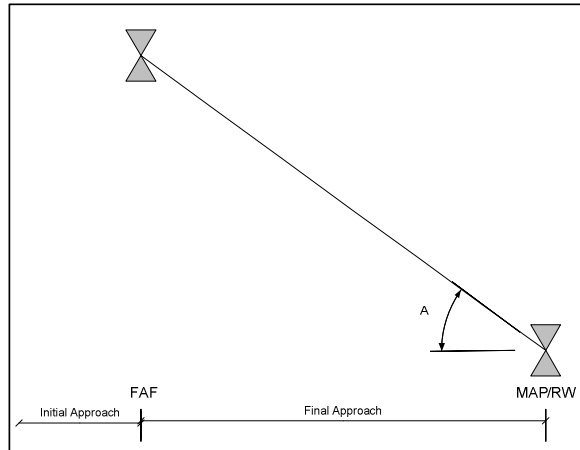


Figure 4.3.3-10 Typical Final Approach #2

2562
2563
2564

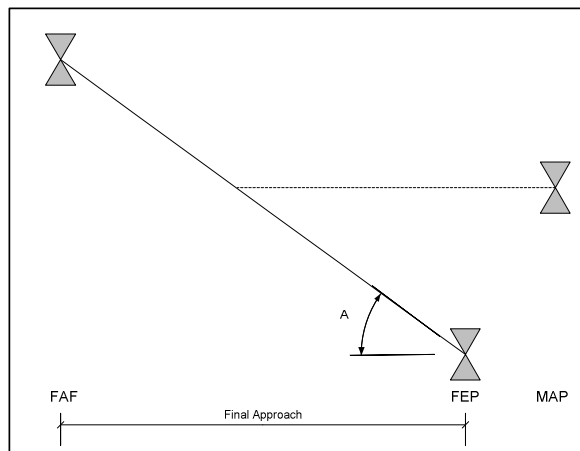



Figure 4.3.3-11 MAP Beyond Landing Threshold Point

2565
2566
2567

4.0 FLIGHT MANAGEMENT FUNCTIONS


2568
 2569
 2570
 2571
 2572
 2573
 2574
 2575
 2576
 2577
 2578
 2579
 2580
 2581
 2582
 2583

In the presence of vertical angle constraint, the initial approach path for the vertical angle leg should be constructed using the vertical angle. The system may construct a vertical path steeper than the specified vertical angle(s) in order to satisfy an ABOVE altitude constraint. The above statements are not intended to preclude temperature compensation of the altitude constraints and vertical angle(s). In the absence of a vertical angle constraint, the initial approach path may be constructed as a stepdown or “dive and drive” approach in accordance with VFR flight rules as shown in Figure 4.3.3-12. However, it is preferable the initial approach path be constructed as a “Continuous Descent Approach” (CDA) path as shown in Figure 4.3.3-13 and Figure 4.3.3-14. A CDA path is a more stabilized and fuel efficient approach path and generally safer. It aligns with industry recommendations and trends. In either case, when a continuous, flyable approach path which satisfies all constraints cannot be constructed, the system should provide appropriate indications to the crew.

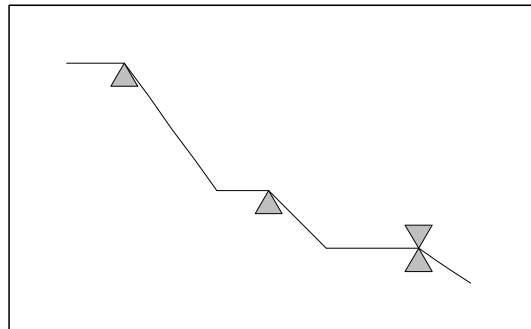

2584
 2585
 2586

Figure 4.3.3-12 Step-Down Initial Approach

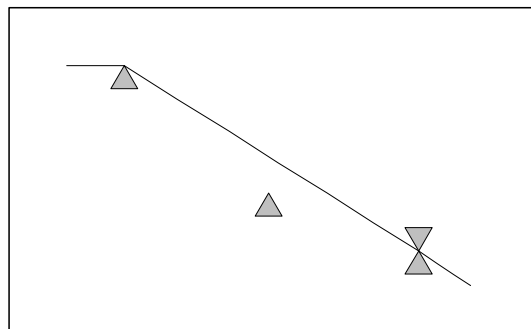

2587
 2588
 2589

Figure 4.3.3-13 Continuous Descent Approach #1

4.0 FLIGHT MANAGEMENT FUNCTIONS

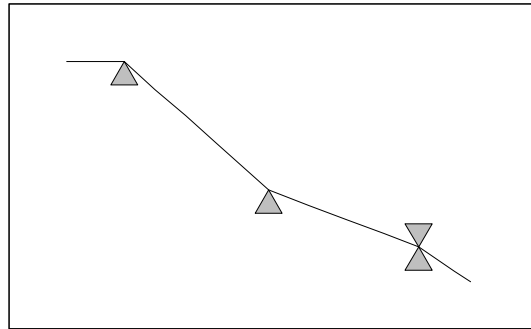


Figure 4.3.3-14 Continuous Descent Approach #2

2590

2591

2592

2593 4.3.3.2.1.6 Missed Approach Phase Prediction

2594 The system may provide a missed approach prediction aligned with the lateral
 2595 missed approach path. If a vertical trajectory is predicted it should be based on go
 2596 around thrust limits and flap placard speeds and is predicted much like the climb
 2597 profile. Typically, the prediction starts at the missed approach point or when the
 2598 crew initiates the missed approach and terminates at an altitude constraint defined
 2599 in the missed approach procedure. Any remaining descent path altitude and speed
 2600 constraints are ignored.

2601

2602

COMMENTARY

2603 Typically, the missed approach speed is limited by flap configuration. In the case
 2604 where the aircraft is in a clean configuration, the speed target should not be
 2605 released to the airport altitude speed restriction. It is recommended that the speed
 2606 should be limited to a minimum clean speed or low altitude best hold speed.

2607 4.3.3.2.2 Vertical Guidance

2608 The Vertical Guidance function defines vertical guidance targets and, when in
 2609 descent, reference parameters to be used by the autopilot and autothrottle to fly the
 2610 vertical flight plan.

2611 When vertical guidance is engaged, depending on the aircraft architecture, the
 2612 vertical guidance function should request or select a control mode for the elevator
 2613 and throttle and generate altitude, airspeed, thrust, vertical speed, pitch targets,
 2614 and/or load factors in accordance with the requested and selected control mode(s).
 2615 An alternative design may provide vertical segment(s) and/or capture trajectory as
 2616 part of vertical parameters.

2617 Depending on the autopilot interface, these targets and parameters are used by
 2618 control laws in either the FMS or the autopilot to generate pitch and thrust
 2619 commands.

2620 In addition, Vertical Guidance is responsible for automatically updating the phase of
 2621 flight and providing vertical situational awareness in the form of vertical deviation
 2622 and advisory messages.

2623 When the autopilot interface is a target interface, the system should provide the
 2624 requested elevator control mode to the autopilot and provide targets for the both the
 2625 requested and selected (i.e. engaged) elevator control mode. With this interface,

4.0 FLIGHT MANAGEMENT FUNCTIONS

2626 vertical guidance requests and targets are analogous to the crew mode and target
2627 selections on the AFCS Control Panel.

2628 When the autopilot interface is a pitch command, the system should compute a
2629 pitch command in accordance with the selected internal control mode. With this
2630 interface, vertical guidance always computes a pitch command whether the internal
2631 control mode is speed on elevator, vertical speed, altitude hold, or (descent) path on
2632 elevator. When the autopilot interface is a pitch command, the system should also
2633 perform the mode transition and path capture of the vertical guidance altitude target.

2634 The system should provide a requested autothrottle control mode along with an
2635 EPR/N1 command (if appropriate).

2636 The vertical guidance function should provide for auto switching of the flight phase
2637 during a flight. This flight phase should be used as the basis for altitude, speed, and
2638 thrust target selection and should be made available to the AFCS. At a minimum,
2639 the system should provide logic for the automatic transition between flight phases of
2640 preflight, climb, cruise, and descent. The preflight flight phase should apply when
2641 the aircraft is on the ground. When in preflight, the system should allow for access
2642 and entry of all route and performance initialization data. After liftoff, the flight phase
2643 should switch to climb and the climb phase should remain active until the aircraft
2644 acquires the initial cruise altitude, at which point the phase should switch to cruise.
2645 The flight phase should then switch from cruise to descent when the aircraft
2646 reaches the top of descent and the descent phase should remain active for the
2647 remainder of the flight.

2648 COMMENTARY

2649 The logic discussed above is general and applies to a minimum set of
2650 flight phases. In general, systems will provide additional flight phases to
2651 facilitate specific functionality defined for a particular aspect of the
2652 aircraft's operation. Some of the additional phases which should be
2653 considered are Takeoff, Approach, Go-Around, and Done. The specific
2654 logic for the transition between phases is implementation dependent
2655 since the conditions are generally application specific and are a function
2656 of the flight control system modes, aircraft dynamics and performance
2657 characteristics and aircraft operations.

2658 4.3.3.2.1 Climb Phase Operation

2659 The system should provide for guidance to the selected performance mode speed
2660 schedule applied to the climb trajectory and should provide the appropriate speed
2661 target and thrust command (or target) required to achieve the associated trajectory.
2662 In addition, an altitude command (or target) for the next target altitude (level off) in
2663 the vertical trajectory should be provided. The target altitude should be a function of
2664 the flight plan altitude constraints and the crew selected (clearance) altitude. The
2665 profiles are constrained by the altitude selected by the pilot on the AFCS Control
2666 Panel, cruise altitude, and waypoint altitude constraints.

2667 4.3.3.2.2 Cruise Phase Operation

2668 The system should provide for guidance to the selected performance mode
2669 speed/schedule applied to the cruise phase of the flight and should provide the
2670 appropriate speed target and altitude command (or target). The target altitude
2671 should be the cruise altitude or step altitude. Entry of a higher or lower cruise

4.0 FLIGHT MANAGEMENT FUNCTIONS

2672 altitude results in a step climb or step descent respectively, with guidance
2673 commands consistent with the selected operation.

2674 The system may also provide vertical guidance for a drift-up cruise climb mode
2675 when ATC has provided a block altitude clearance.

2676 4.3.3.2.2.3 Descent Phase Operation

2677 The system should provide for guidance to the selected performance mode speed
2678 schedule applied to the descent trajectory and should provide, through the use of
2679 both a path and speed (airmass) mode of control, the appropriate speed target,
2680 thrust command (or target), pitch command, or vertical speed command (or target)
2681 required to achieve the associated trajectory. In addition, an altitude command (or
2682 target) for the next target altitude in the vertical trajectory should be provided. The
2683 target altitude should be a function of the flight plan altitude constraints and the
2684 crew selected (clearance) altitude.

2685 When tracking the descent path, a pitch command (or target) or vertical speed
2686 command (or target) should be computed to allow capture and track of the
2687 reference descent path. Overspeed protection in the form of vertical mode reversion
2688 logic should be provided to enable guidance to switch from path control to speed
2689 control if conditions are such that both path and speed cannot be maintained.
2690 Annunciation may also be provided prior to mode reversion for predicted overspeed
2691 or speed/altitude constraint violations.

2692 When the crew causes a transition to descent flight phase prior to reaching the
2693 planned Top of Descent point, the system should default to its below-path descent
2694 control strategy. Systems typically command a shallow rate of descent until the
2695 reference descent path is intersected, at which time the originally planned descent
2696 profile is resumed.

2697 The system should switch the speed target to the approach speed at a point that is
2698 either, constructed in the trajectory and displayed to the crew, or as a result of the
2699 crew selection of an approach configuration. Once targeted, the approach speed
2700 should be limited to the speed related to the current configuration of the aircraft,
2701 switching to the landing speed when landing configuration is selected.

2702 Vertical deviation information based on the difference between the reference
2703 descent/approach path and the actual aircraft altitude should be provided
2704 throughout the descent/approach phase of flight.

2705 4.3.3.2.2.4 Selected Altitude Compliance

2706 Since altitude clearances are difficult to pre-plan using flight plan altitude
2707 constraints, a crew selected altitude, usually provided by the flight controls panel,
2708 should be used as a tactical altitude limiter by the flight management function. The
2709 aircraft, under vertical guidance control, should not be allowed to ascend through
2710 the selected altitude during a climb, or descend through the selected altitude during
2711 a descent. During approach operations, this general rule may be suspended to
2712 allow the crew to pre-select the altitude clearance to arm a missed approach. The
2713 selected altitude may also be used to arm an automatic transition to descent or to
2714 enable step climbs and descents during cruise phase operations.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2715 **4.3.3.2.2.5 Altimeter Barometric Correction for Terminal Area Operations**

2716 Generally, altimeter barometric settings are utilized during terminal area operations
 2717 to account for the local pressure deviation in the air data system, making the
 2718 barometric altitude a more accurate ground reference

2719 Moreover, the local altitude reference may be either Altimeter sub-scale setting to
 2720 obtain elevation when on the ground (QNH) or atmospheric pressure at runway
 2721 (QFE) based (sea level equals zero for QNH, runway elevation equals zero for
 2722 QFE). Vertical guidance should accept an indication of which reference is being
 2723 used and apply the appropriate adjustments.

2724 **4.3.3.2.2.6 Altitude Constraints**

2725 The Vertical Guidance function of the system should prevent the aircraft, when in
 2726 takeoff or climb and under vertical guidance control, from ascending through the
 2727 upper bound of a climb AT, AT or BELOW, or WINDOW altitude constraint.
 2728 Likewise, it should prevent the aircraft, when in descent or approach and under
 2729 vertical guidance control, from descending through the lower bound of a descent
 2730 AT, AT or ABOVE, or WINDOW altitude constraint. Aside from altitude captures, it
 2731 should be a basic philosophy that the Vertical Guidance function should never
 2732 descend in takeoff or climb flight phase in order to satisfy an altitude constraint;
 2733 likewise, it should never ascend in descent or approach in order to satisfy an
 2734 altitude constraint.

2735
 2736 Refer to 4.3.2.5.2 for the definition of climb and descent altitude constraints.

2737

2738

COMMENTARY

2739 In takeoff or climb, upon engagement or insertion of a flight plan with
 2740 an altitude constraint below the aircraft, the Vertical Guidance function
 2741 may find the aircraft is in violation to (i.e. above) a subsequent
 2742 BELOW climb altitude constraint. The Vertical Guidance behavior in
 2743 this situation differs between systems. Some systems will prevent
 2744 engagement of Vertical Guidance into an altitude constraint violation
 2745 while others allow engagement into a violation. Some systems
 2746 prevent engagement into a violation and also disengage when a
 2747 violation occurs while the Vertical Guidance function is engaged. On
 2748 those systems where Vertical Guidance can engage or be engaged in
 2749 a violation condition, some will provide an indication and level-off to
 2750 minimize the violation of the altitude constraint whereas others will
 2751 provide an indication and maintain a climbing attitude. An analogous
 2752 situation exists in descent for ABOVE altitude constraints.

2753

2754 When under vertical guidance control and in violation to an ABOVE constraint, the
 2755 Vertical Guidance function should level-off to minimize the violation of the altitude
 2756 constraint as the constraint may exist for obstacle clearance.

2757 When below-path and under vertical guidance control and flying a lateral leg with a
 2758 procedural vertical angle, the Vertical Guidance function should level-off as the
 2759 vertical angle may exist for obstacle clearance.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2760 Refer to 4.3.3.2.1 for more details regarding use of altitude constraints in the
2761 descent path construction and trajectory predictions.

2762

2763 4.3.3.2.2.7 Speed Restrictions

2764 The system should honor altitude-based speed limits such as airport speed limits
2765 (e.g. 250/10000) and ICAO limits for procedure legs. For airport speed limits and
2766 other limits which apply to a region or block of airspace, the aircraft airspeed should
2767 remain AT or BELOW the speed limit while the aircraft is below the specified
2768 altitude. For ICAO limits, the aircraft should remain AT or BELOW the speed limit
2769 while the aircraft is both flying the procedure leg and below the specified altitude.

2770

2771 In the case of descent AT and AT or BELOW restrictions, sufficient deceleration
2772 distance should be provided in order to cross the speed restriction at or below the
2773 restriction speed. Once the descent speed restriction has been sequenced, it should
2774 be latched such that the descent target speed does not exceed the restriction speed
2775 unless the crew deletes the latched speed restriction or the aircraft transitions back
2776 to climb flight phase.

2777

2778 Refer to 4.3.2.5.3 for the definition of climb and descent waypoint speed constraints
2779 and their applicability in various flight phases.

2780

2781 In general, the system should compute the target speed at any given point in the
2782 flight plan as the speed schedule limited to the lowest AT/BELOW of applicable
2783 speed restrictions. This target speed should always be limited to the speed
2784 envelope (e.g. VMO, MMO, stall, buffet, and placard limits) of the aircraft for the
2785 given or assumed aerodynamic configuration. The Vertical Guidance function of the
2786 system should accelerate or decelerate as necessary to capture and track the
2787 limited target speed.

2788

2789 COMMENTARY

2790 Historically, all speed constraints in the navigation database and
2791 entered by the crew were treated as AT or BELOW speed constraints
2792 by the FMS. Indeed, most of the optimizations performed by the FMS
2793 were accomplished using speed schedules optimized for some
2794 criteria (e.g. fuel, time, cost, maximum angle/rate); the philosophy of
2795 the FMS was to reach the optimum speed with speed restrictions
2796 preventing it from doing so. DO-283() mandated support for an AT
2797 and AT or ABOVE speed constraint capability, and the ARINC 424
2798 source now includes a speed descriptor field with each waypoint
2799 speed constraint. While DO-283() defines a minimal set of
2800 requirements, it does not provide guidance in terms of what takes
2801 precedence when an ABOVE speed constraint conflicts with the
2802 speed schedule and other speed constraints and limits. To ensure a
2803 measure of interoperability as this capability is incorporated into flight
2804 management systems, the following requirements and guidance are
2805 offered.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2806
2807 When in conflict, the system should always give priority to altitude-based speed
2808 limits over waypoint-based speed constraints.

2809

2810 **COMMENTARY**

2811 Altitude-based limits are AT or BELOW speed limits which may be
2812 lower than a preceding AT or ABOVE climb waypoint speed
2813 constraints and/or subsequent AT or ABOVE descent waypoint
2814 speed constraint. In such cases, the altitude-based limit(s) should
2815 take priority. Airport speed limits are in place to ensure safety with
2816 slower moving VFR traffic while ICAO limits ensure aircraft remain
2817 within the designated airspace.

2818

2819 When in conflict, the system should give priority to BELOW speed constraints over
2820 ABOVE speed constraints.

2821

2822 **COMMENTARY**

2823 In descent, a deceleration point should occur prior to an ABOVE
2824 speed constraint if necessary in order to ensure a safe, continuous
2825 deceleration to the landing speed. Moreover, altitude-based limits are
2826 BELOW speed constraints that are associated with airspace
2827 limitations and thus should take precedence.

2828

2829 The figures below illustrate various conflicts and the speed profiles
2830 that result given the rules in this section.

2831

2832 For the descent scenario illustrated in Figure 4.3.3-18, an alternative is to insert a
2833 speed discontinuity into the theoretical descent path (at AAA) and provide
2834 appropriate indications to the crew. This is deemed less preferable as it may lead to
2835 unrealistic deceleration assumptions which are only apparent once the ABOVE
2836 speed constraint is sequenced. Moreover, in the absence of special considerations,
2837 insertion of a speed discontinuity creates an inherent ETA error and may cause
2838 poor guidance behavior as the reference path speed profile is often used as a
2839 reference for advisories and mode reversion logic.

2840

2841

2842

4.0 FLIGHT MANAGEMENT FUNCTIONS

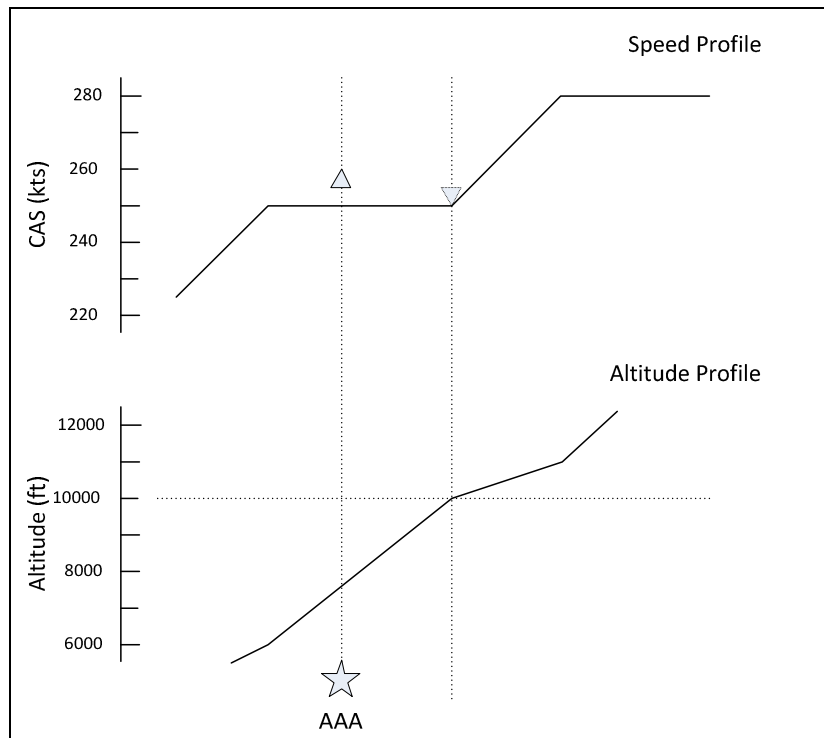


Figure 4.3.3-15 250/10000 takes priority over 260A at AAA (climb)

2843

2844

2845

4.0 FLIGHT MANAGEMENT FUNCTIONS

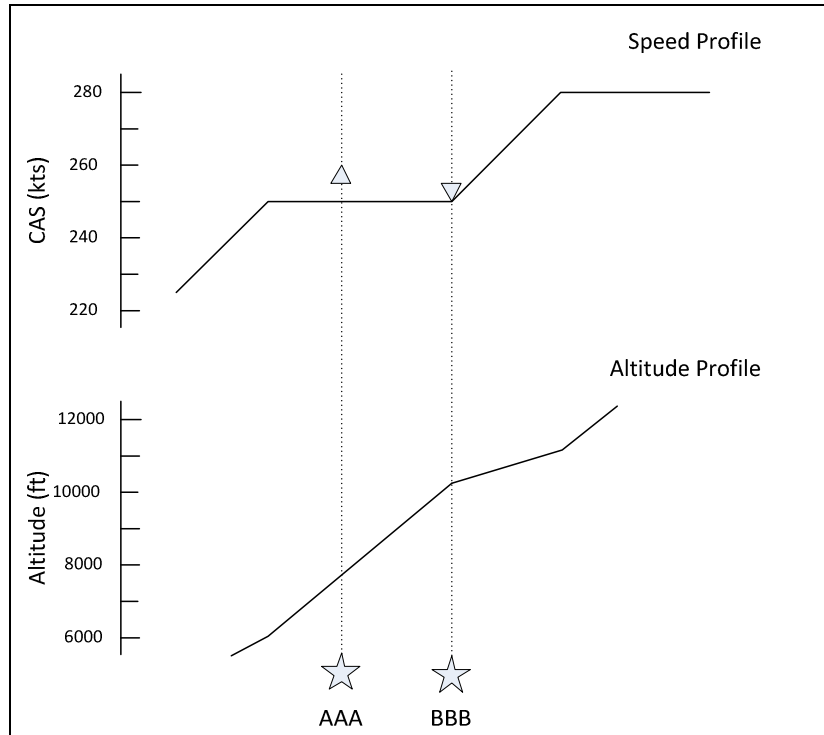


Figure 4.3.3-16 250B at BBB takes priority over 260A at AAA (climb)

2846

2847

2848

2849

4.0 FLIGHT MANAGEMENT FUNCTIONS

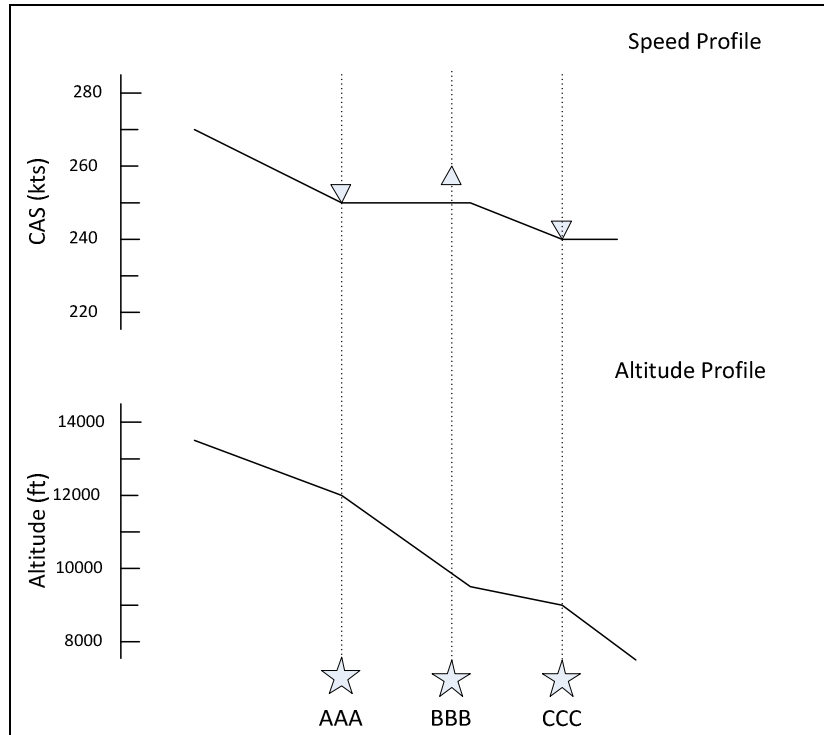


Figure 4.3.3-17 250B at AAA takes priority over 260A at BBB (descent)

2850
2851
2852

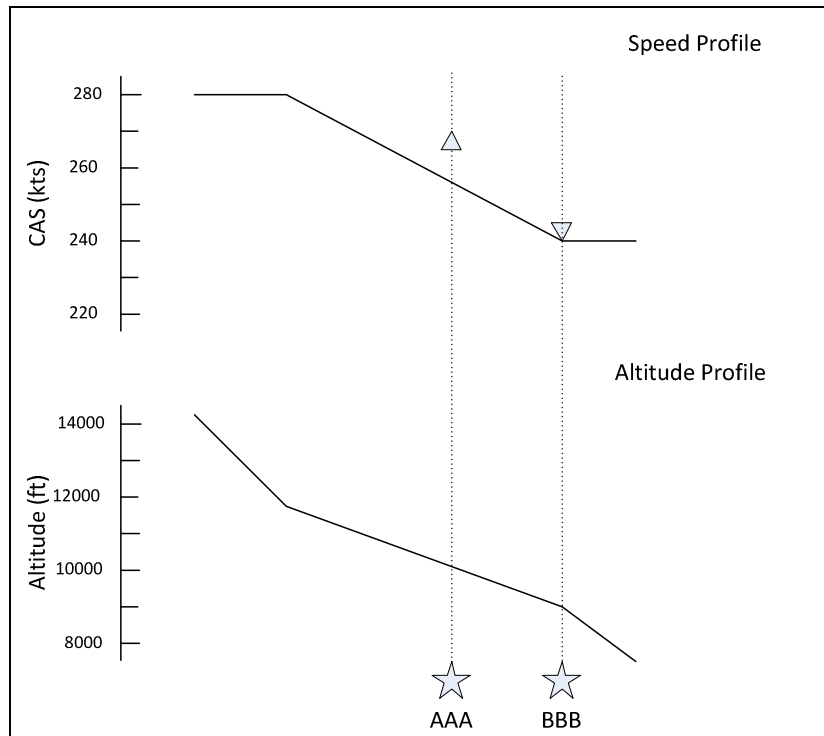


Figure 4.3.3-18 Decel to 240B AT BBB takes priority over 270A at AAA (descent)

2853
2854
2855

4.0 FLIGHT MANAGEMENT FUNCTIONS

2856 In general, in the absence of edits and tactical speed interventions, the system
 2857 should produce a speed profile that is monotonic during a single phase of flight. For
 2858 takeoff and climb, the speed target should continuously increase until reaching the
 2859 climb speed schedule. For descent and approach, the speed target should
 2860 continuously decrease from the descent speed schedule until reaching the landing
 2861 speed. As such, the system should compute a climb speed schedule which is the
 2862 maximum of the mode-based climb speed and the highest ABOVE climb speed
 2863 constraint; the system should compute a descent speed schedule which is the
 2864 maximum of the mode-based descent speed and the highest ABOVE descent
 2865 speed constraint. This limitation should be applied to both the speed schedule CAS
 2866 and MACH (when applicable).

2867

2868

COMMENTARY

2869 Without the MACH limitation, a higher ABOVE speed constraint will
 2870 produce a lower crossover altitude at which point the ABOVE speed
 2871 constraint will cease to apply. For this reason, it is suggested that the
 2872 MACH equivalent of the ABOVE speed constraint evaluated at 25000
 2873 feet be used as the lower limit MACH value. This ensures that ABOVE
 2874 speeds are maintained until at least 25000' for most aircraft.

2875
 2876 It is assumed that ABOVE speed constraints would not be applied
 2877 when in performance modes designed to maximize climb rate or
 2878 angle.

2879

2880 The system should not apply ABOVE speed constraints to hold speed schedules.

2881

2882 Refer to 4.3.3.2.1 for more details regarding use of speed restrictions in the descent
 2883 path construction and trajectory predictions.

2884

4.3.3.2.3 Estimated Time of Arrival (ETA)

2886 The system should be capable of providing an ETA for every flight plan fix in the
 2887 primary flight plan. For modifications to the active flight plan, each flight plan fix ETA
 2888 should be available within 30 seconds (15 seconds typical) of the completion of
 2889 entries required to perform the calculations.

2890

2891 The accuracy of the ETA should be within +/- 1 percent of the time of flight
 2892 remaining to the fix, or +/- 10 seconds, whichever is greater, for the entered
 2893 conditions.

2894

2895

2896

COMMENTARY

2897 It is understood that additional data is required (e.g. forecast wind and
 2898 temperature) to improve the operational accuracy of the predicted

4.0 FLIGHT MANAGEMENT FUNCTIONS

2899 ETA. Such entries can be made manually by the flight crew or
2900 uplinked via AOC or ATS datalink.

2901

2902 **4.3.3.2.4 Required Time of Arrival (RTA)**

2903 The system should provide a control mode such that the aircraft will be controlled to
2904 arrive at any specified waypoint in the primary flight plan at a specified arrival time
2905 (RTA). The system should support a resolution of 1 second for entry and display of
2906 the RTA time. Accuracy of this function should be ± 30 seconds at enroute fixes and
2907 and ± 10 seconds at descent fixes. If the RTA is predicted to be unachievable, an
2908 indication of this condition should be provided to the crew. The condition should be
2909 continually reassessed until such time as the RTA is achievable. All RTA
2910 calculations should respect the speed envelope as well as all flight plan constraints.
2911 The RTA control band should be designed to limit throttle activity to a minimum.

2912 The RTA function should accommodate ATS data link consistent with industry
2913 standards (e.g. DO-258(), DO-350()) including constraint types AT, AT or BEFORE,
2914 and AT or AFTER.

2915 Systems may provide predictions of the earliest and latest arrival times for the
2916 candidate RTA waypoint and/or active RTA waypoint. Consideration of fuel reserves
2917 in the prediction of RTA feasibility may be provided.

2918 While in preflight, the system may compute a recommended takeoff time which
2919 allows an RTA to be achieved using the crew entered cost index or planned speed
2920 schedules. While in preflight, the system may also compute the earliest and latest
2921 takeoff times which allow an RTA to be achieved.

2922

2923 **4.3.3.2.5 Time of Arrival Control (TOAC)**

2924

2925

COMMENTARY

2926 As detailed in DO-236() and DO-283(), the TOAC function is a
2927 performance-based operation that invokes a time accuracy
2928 requirement for arriving at a specified RTA waypoint within a range of
2929 achievable ETAs. The accuracy requirement is dependent upon
2930 current and accurate performance data inputs and uncertainty
2931 models. TOAC is intended to support/enable future advanced air
2932 traffic management (ATM) operations such as time-based trajectory
2933 operations (4DTBO) by providing a performance-based time
2934 management capability. The requirement for a performance-based
2935 time function that enhances predictability, similar in concept to
2936 performance requirements of RNP, is a new model upon which to
2937 enable future air traffic sequencing and flow management.

2938

2939 The equipment should provide a Time of Arrival function which supports a specified
2940 arrival time (RTA) at a fix within the range of achievable ETAs. The range of
2941 achievable ETAs at the specified fix is computed by the system based upon entered
2942 aircraft performance parameters, current and forecast environmental conditions,
2943 and uncertainty models.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2944 The TOAC function should be operational in both enroute and descent phases of
2945 flight.

2946 **COMMENTARY**

2947 Additionally, it is expected that procedure designs will implement
2948 speed and altitude constraints (when required) that are compatible
2949 with a time-based system such as TOAC by not overly constraining
2950 the path. For example, a speed-constrained descent and a time-
2951 constrained descent may not be compatible except under specific
2952 conditions.

2953 The system should be capable of providing the range of achievable ETAs for at
2954 least one fix in the primary flight plan for display in the flight deck and
2955 communication to the traffic management facility. For fixes after an RTA constrained
2956 fix, the range of achievable ETAs should be based on the ETA at the RTA fix.

2957
2958 When the RTA is selected from within the range of achievable ETAs computed by
2959 the system, the total time error (TTE), in the presence of the uncertainty model
2960 described in DO-283(), should be less than or equal to the required accuracy in 95
2961 percent of the attempts.

2962 The equipment should control to the accuracy requirement while also considering
2963 the adverse flight deck effects of large speed and thrust fluctuations.

2964
2965 **COMMENTARY**

2966 It is expected that the essential information such as current and
2967 accurate wind and temperature forecasts are provided and used by
2968 the system such that the performance requirements for the TOAC
2969 function can be met.

2970
2971 DO-283() specifies the functional requirements of a TOAC function.

2972
2973 **4.3.3.3 Three-Dimensional RNAV Approach**

2974 [Deleted by Supplement 5]

2975 **4.3.4 Performance Calculations Function**

2976 The performance function should use information from the flight plan and the
2977 performance data base (See Section 9.4) to generate performance related data for
2978 display on the MCDU.

2979 **4.3.4.1 Performance Modes**

2980 One performance mode that should be common to all flight phases is the economy
2981 speed mode which should calculate the associated speeds and speed schedules
2982 which minimize the total cost of operating the airplane on a given flight. This mode
2983 should use a Cost Index, which is the ratio of time-related costs (crew salaries,
2984 maintenance, etc.) to fuel cost.

4.0 FLIGHT MANAGEMENT FUNCTIONS

2985 This is expressed as:

$$2986 \qquad \qquad \qquad \text{Time Cost}$$

$$2987 \qquad \qquad \text{Cost Index (CI) = } \frac{\text{-----}}{\text{Fuel Cost}}$$

$$2988 \qquad \qquad \qquad \text{Fuel Cost}$$

2989 Typical Cost Index entries vary from zero to 999, with the minimum trip fuel cost
 2990 occurring with the Cost Index set to zero. Cost Index values above zero result in
 2991 increased trip speeds and varying aircraft vertical trajectories. At the proper Cost
 2992 Index, the increased fuel cost will be offset by the reduced time cost.

4.3.4.1.1 Climb Mode

2994 Speed modes supported may include:

- 2995 • Economy CAS/Mach (based on Cost Index) – Lowest cost of operation
- 2996 • Pilot-entered CAS/Mach – Manual selection (or pre-selection)
- 2997 • Maximum angle climb – Maximum climb rate with respect to distance
- 2998 • Maximum rate of climb – Maximum climb rate with respect to time
- 2999 • Required Time of Arrival (RTA) – Variable speed to meet a time constraint

4.3.4.1.2 Cruise Mode

3001 Speed modes supported may include:

- 3002 • Economy CAS or Mach (based on Cost Index) – Lowest cost of operation
- 3003 • Pilot-entered CAS or Mach – Manual selection (or pre-selection)
- 3004 • Maximum endurance – Maximum time endurance
- 3005 • Long Range Cruise – Maximum range
- 3006 • Required Time of Arrival (RTA) – Variable speed to meet a time constraint

4.3.4.1.3 Descent Mode

3008 Speed modes supported may include:

- 3009 • Economy CAS/Mach (based on Cost Index) – Lowest cost of operation
- 3010 • Pilot-entered CAS/Mach – Manual selection (or pre-selection)
- 3011 • Maximum descent rate – Maximum descent rate with respect to time
- 3012 • Required Time of Arrival (RTA) – Variable speed to meet a time constraint

3013

4.3.4.2 Maximum and Optimum Altitudes Calculation

3015 The performance function should compute both optimum and maximum altitude for
 3016 the aircraft/engine type, weight, atmospheric conditions, bleed air settings, and the
 3017 other vertical flight planning parameters. The optimum altitude algorithm should
 3018 compute the most cost effective operational altitude and the maximum altitude
 3019 algorithm should compute the highest attainable altitude (up to maximum certified
 3020 altitude) while satisfying maneuver margin and minimum climb rate(s) criterion.
 3021 Optimum altitude should be limited by maximum altitude. Consideration should be
 3022 given in the algorithm design to eliminate the sensitivity and therefore possible
 3023 erratic behavior that can occur because of the flatness of the performance
 3024 characteristics. Maximum altitude for engine out should also be computed.

4.0 FLIGHT MANAGEMENT FUNCTIONS**3025 4.3.4.3 Trip Altitude Calculations**

3026 The performance function should compute a recommended cruise altitude for a
3027 specified route. This altitude may be different from the optimum altitude in that for
3028 short trips the optimum altitude may not be achievable because of the trip distance.
3029 This algorithm searches for the altitude that satisfies the climb and descent while
3030 preserving a minimum cruise time specified by the crew or airline policy. Some
3031 designs may elect to integrate this computation as part of the optimum altitude
3032 algorithm. All the vertical flight planning parameters should be considered in this
3033 algorithm.

3034 4.3.4.4 Alternate Destinations Calculation

3035 The performance function should perform alternate destination calculations. The
3036 computations should be based on the selected flight plan routing to the alternate
3037 destination, typically either a direct route from current position to the alternate
3038 destination or a route that proceeds to the current destination and assumes
3039 execution of a missed approach at the destination followed by a direct to the
3040 alternate destination. Distances, fuel, and ETA, and optionally best trip cruise
3041 altitude should be computed for each alternate destination and made available for
3042 display. Available holding time at present position, given the current fuel state
3043 versus the fuel required to fly to the alternate destination, may also be computed.
3044 Besides the alternate destination prediction, this function should provide for the
3045 retrieval of the airports nearest the aircraft at crew request.

3046 4.3.4.5 Step Climb/Descent

3047 The performance function should include a prediction of the optimum point(s) at
3048 which a step climb/descent maneuver may be initiated to provide for more cost-
3049 effective operation. This algorithm should consider all the vertical flight planning
3050 parameters as well as entered wind data. The time and distance to the optimum
3051 step point to the specified step altitude should be made available for display. Also,
3052 the percent savings/penalty for the step climb or descent versus the current flight
3053 plan may be computed and displayed.

3054 4.3.4.6 Cruise Climb

3055 The performance function may compute an optimum or drift-up cruise climb
3056 guidance which tracks the optimum altitude. This algorithm should take into account
3057 fuel burn (weight decrease) and the predicted wind altitude profile..

3058 4.3.4.7 Vertical Advisory Calculations

3059 The performance function should provide advisories of distance and time (ETA or
3060 ETE) to the next waypoint altitude and/or speed target change. This information is
3061 based on the stored trajectory prediction and the current state of the aircraft. It
3062 should also provide advisories of distance and time to vertical points which do not
3063 correspond to waypoints. These points include:

- 3064 • Top of Climb (T/C)
- 3065 • Top of Descent (T/D)
- 3066 • Start of Climb (S/C)
- 3067 • Start of Descent (S/D)
- 3068 • Level-Off Start

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 3069 • Level-Off End
- 3070 • Bottom of Descent (B/D)
- 3071 • End of Descent (E/D)
- 3072 • Descent Path Intercept
- 3073 • Deceleration or Target Speed Change Point

3074

3075 At a minimum, the performance function should compute distances to the top of
3076 climb (T/C) and top of descent (T/D) points for display on the MCDU.

3077 These vertical points should be displayed on the Navigation Display (ND) and
3078 Vertical Situation Display (VSD); the advisory distances and times displayed on the
3079 MCDU should be consistent with the location on the ND and VSD.

3080 4.3.4.8 Thrust Limit Data Calculations

3081 The thrust limits for takeoff, climb, cruise, go around, and continuous modes of
3082 operation should be computed (if applicable for the installation) for the current
3083 atmospheric conditions and type of engine/aircraft and bleed settings. Moreover,
3084 derates for takeoff and climb thrust should be available for selection as well as
3085 selected temperature derates for takeoff thrust. The crew can manually select the
3086 thrust limit mode that is output as the current thrust limit or an auto mode can be
3087 selected that makes the choice based on logic between the flight control computer
3088 and the FMC.

3089

COMMENTARY

3090 In some designs, the thrust limit function is performed by a Thrust
3091 Control Computer (TCC). For these designs, the thrust limit
3092 computation in the FMC is only required for the purpose of trajectory
3093 predictions and support of other performance calculations.

3094 4.3.4.9 Takeoff Reference Data

3095 The performance function should provide for the entry of V1, VR, and V2 speeds.
3096 Computation of V-speeds for selected flap setting and runway, weight, CG, and
3097 atmospheric conditions may be implemented for the purpose of selection and/or
3098 reasonableness checks. The entered or selected V-speeds should be output for
3099 display on the flight instruments. Flap/slat retraction speeds may optionally be
3100 computed and displayed for reference.

3101 4.3.4.10 Approach Reference Data

3102 Landing configuration selection should be provided for each configuration
3103 appropriate for the operation of the specific aircraft. The crew should be allowed to
3104 select the desired approach configuration and the state of that selection should be
3105 made available for output to other systems. Selection of an approach configuration
3106 should also result in the computation of a landing speed based on a manually
3107 entered wind correction for the destination runway. In addition, approach
3108 configuration speeds should be computed and displayed for reference.

3109 4.3.4.11 Reserve Fuel Calculation

3110 When the system supports a default reserve fuel, the default reserve fuel should be
3111 computed based on the estimated fuel burn for the given flight plan, the entered or

4.0 FLIGHT MANAGEMENT FUNCTIONS

3112 measured total fuel quantity, and additional entered parameters such as assumed
 3113 fuel flow percent error. Manual entry of a reserve fuel quantity should be provided
 3114 and should override the default value (if any). The system should provide an
 3115 indication to the crew when the predicted fuel at destination is below the reserve
 3116 fuel.

3117 **4.3.4.12 Engine-Out Performance Calculation**

3118 Systems should provide engine-out performance predictions for the case of the loss
 3119 of at least one engine. These predictions may include:

- 3120 • Climb at engine-out climb speed
- 3121 • Cruise at engine-out cruise speed
- 3122 • Driftdown to engine-out maximum altitude at driftdown speed
- 3123 • Use of maximum continuous thrust
- 3124 • Two-engine-out predictions when applicable on three and four engine
 3125 aircraft

3126 **4.3.4.13 Other Predictions**

3127 A number of other predictions and computed performance parameters can be
 3128 provided by flight management systems. The following are a few of these optional
 3129 functions:

3130 **4.3.4.13.1 Maximum Range Computation**

3131 Capability to compute the maximum range of the aircraft based on the
 3132 entered/measured fuel quantity and the specified reserves should be provided. Both
 3133 range to reserves and range to empty may be displayed as appropriate.

3134 **4.3.4.13.2 Maximum Endurance Computation**

3135 The maximum endurance time of the aircraft can be computed based on the
 3136 entered/measured fuel quantity and the specified reserves. Both endurance time to
 3137 reserves and time to empty can be provided.

3138 **4.3.4.13.3 Descent Energy Circles**

3139 For a selected fix point and associated altitude constraint, the distance required to
 3140 descend from current altitude to the constraint altitude can be computed for both
 3141 clean and full drag aircraft configurations. This data can be available for display on
 3142 both the MCDU and as range circles centered on the specified fix on the navigation
 3143 display.

3144 **4.3.5 Printer Functions**

3145 Capability may be provided to print various data such as data link messages, flight
 3146 plans, and maintenance information.

3147

3148 **4.3.6 AOC Function**

3149 The system should provide for a data link interface with Airline Operations
 3150 Communication. This interface should allow for uplink and crew controlled insertion
 3151 of parameters that are enterable through the MCDU. This should include:

- 3152 • User preferred flight plans defined by the airline dispatch office

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 3153 • Wind and Temperature entries at multiple altitudes (Section 4.3.2.5.1)
- 3154 • Waypoints where automatic position reports are required
- 3155 • Performance initialization data
- 3156 • Navigation data base amendments

3157 Likewise, this interface should provide for the downlink of entered and computed
3158 data, including flight plan requests and waypoint reports.

3159 Refer to Section 8.0 and ATTACHMENT 7 for interface details.

3160

4.3.7 ATS Datalink

3162 Air Navigation Service Providers (ANSPs) are implementing, or have plans to
3163 implement, Air Traffic Services Datalink functions using existing and future data link
3164 systems whose requirements are defined according to the DO-264/ED-78 safety
3165 and performance requirements process. These include:

- 3166 • FANS 1/A+ Interoperability and Accommodation (DO-258 FANS
3167 Interoperability, DO-305 Accommodation in Domestic Airspace, and DO-306
3168 Oceanic Safety and Performance Requirements)
- 3169 • Link 2000+ (subset of Baseline 1, DO-280/290/EUROCONTROL spec-0116)
- 3170 • Baseline 2 Rev A or B (DO-350 through DO-353/ED-229)

3171

3172

COMMENTARY

3173 Rev A is planned for Europe and Rev B is planned for the US

3174

3175 The FMS system should support these datalink systems. FANS 1/A was originally
3176 utilized primarily in trans-oceanic ATC environments (mandated in the North
3177 Atlantic) but is being expanded into US and European domestic airspace. Link
3178 2000+ is the datalink system in Europe. Baseline 2 is applicable to domestic
3179 airspace in North America and will eventually replace Link 2000+ in domestic
3180 European airspace. Some aircraft avionics implementations have elected to
3181 support multiple ATS datalink systems (oceanic and domestic).

3182 All these ATS datalink systems provide the capability to establish a direct message
3183 exchange between the pilots and controllers, using datalink messages instead of
3184 voice and may provide other functions such as downlink of position reports and
3185 aircraft state and intent information.

3186 The datalink communication architecture on the aircraft has evolved with variation in
3187 the allocation of the datalink subfunctions to physical units.

3188

4.0 FLIGHT MANAGEMENT FUNCTIONS

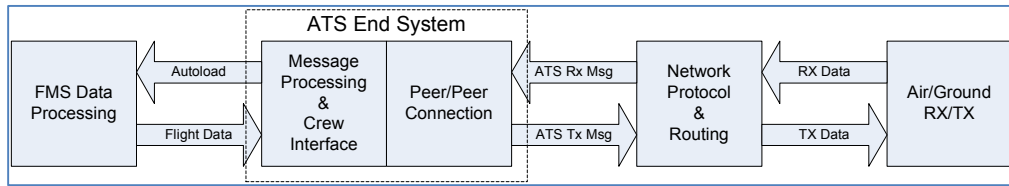


Figure 4.3.7-1 Functional Breakdown of ATS Datalink Airborne Architecture

3189
3190
3191
3192
3193
3194
3195
3196
3197
3198
3199

Some system integrators have chosen to allocate the ATS end system into the FMS, some have chosen to allocate the ATS end system to a different unit and establish a significant data interface with the FMS to support the various datalink functions. Some implementations have a minimal interface with the FMS and depend on the crew to manually support the data needs of the datalink function. The following sections describe all the potential FMS requirements for the datalink functions without regard to the functional allocation of the specific airborne architecture.

3200

It is imperative for stakeholders to understand the specific airborne architecture and which requirements are applicable in their particular architecture.

3201
3202

3203

4.3.7.1 Future Air Navigation System 1/A (FANS 1/A)

3204

The ATS applications used in FANS 1/A are Air Traffic Services Facilities Notification (AFN), Automatic Dependent Surveillance-contract (ADS-C), Controller Pilot Data Link Communication (CPDLC) as defined in DO-258/DO 290 and ARINC 622. These applications enable the following ATS services:

3205
3206
3207
3208

- Data Link Initiation (DLIC)
- ATC Communications Management (ACM)
- Clearance Request and Delivery (CRD)
- ATC Microphone Check (AMC)
- Pre-Departure Clearance
- Information Exchange and Reporting (IER)
- Position Reporting (PR)
- In Trail Procedure (ITP)

3209
3210
3211
3212
3213
3214
3215
3216

4.3.7.1.1 Air Traffic Services Facilities Notification (AFN)

3217

The AFN logon function can only be aircraft initiated. The aircraft system uses the logon function to provide an application name, address, and version number for each application that the aircraft wishes to use, along with the current position as required by the ground system. In response, the ground provides an application name and version number for each application that the ground supports. AFN enables and precedes the use of CPDLC, ADS-C and associated services.

3218
3219
3220
3221
3222
3223
3224

To support auto transfer from one center to the next, the contact function provides a method for the ATS ground system to request the aircraft system to initiate the logon function with the next ATS ground system. The aircraft initiates a logon and provides the information indicating whether or not the requested contact was

3225
3226
3227
3228

4.0 FLIGHT MANAGEMENT FUNCTIONS

3229 successful. The AFN logon messages and sequence are detailed in DO-258 and
3230 ARINC 622.

3231 For architecture with dual datalink systems (dual stack), the AFN function should
3232 support the auto transfer from one datalink system to another datalink system.

3233

3234 4.3.7.1.2 Controller/Pilot Data Link Communication (CPDLC)

3235 The CPDLC specific messages supported should be those defined by ICAO Doc
3236 4444: PANS-ATM and DO-258()/ED-100() to enable the following services:

- 3237 • ATC Communications Management (ACM)
- 3238 • Clearance Request and Delivery (CRD)
- 3239 • ATC Microphone Check (AMC)
- 3240 • Pre-Departure Clearance
- 3241 • Information Exchange and Reporting (IER)
- 3242 • Position Reporting (PR)

3243 These messages include some which are loadable and others which are display
3244 only. The FMS exchanges these messages with the communication management
3245 function which provides for the capability to receive and send these messages over
3246 the data link network. The FMS should provide the capability to interface with the
3247 network protocol and integrity checking as defined by ARINC 622, These data link
3248 messages will be identified with an Imbedded Message Identifier (IMI) of ATx and
3249 Message Format Identifier (MFI) of AA/BA to distinguish them from AOC messages
3250 and take priority over any other pending data link messages.

3251 Interpretation of the message is based on the CPDLC application defined by RTCA
3252 DO-258/290 message element number. Upon receipt of an ATC uplink, the system
3253 should annunciate an alerting level message in the primary field of view and set an
3254 output discrete that will be used to control an aural warning. The system should also
3255 provide for a crew interface that details these messages for crew review along with
3256 the appropriate prompts for crew responses such as accept, reject, standby, or
3257 response data that may be required.

3258 As a minimum, the FMC functions should provide the capability to load (autoload)
3259 the following message types:

- 3260 • Cross position BEFORE, AT, or AFTER time
- 3261 • Route Clearances

3262 For all load functions, the changes should be displayed for review by the flight crew.
3263 The changes should be initiated and activated by the flight crew.

3264

3265 4.3.7.1.3 Automatic Dependent Surveillance - Contract (ADS-C)

3266 This function should provide for uplink messages to establish the following:

- 3267 • Periodic Contract
- 3268 • On Demand Contract
- 3269 • Event Contract
- 3270 • Cancel Contract
- 3271 • Cancel All Contracts

4.0 FLIGHT MANAGEMENT FUNCTIONS

3272 It should also provide Acknowledgment, Negative Acknowledgment, Noncompliance
3273 Notification, and data downlink messages as defined in RTCA DO-258.

3274 This function should support at least 5 connections (four typically used for ATC and
3275 another for AOC). Each connection is associated with the ATC center address and
3276 may have any contract type.

3277 The ADS-C contracts should be established automatically by the contract protocol
3278 defined in DO-258 without the need for crew intervention. Each contract specifies
3279 the data groups as well as the report interval and other report downlink triggers that
3280 are desired. Each contract request can specify the data groups to be transmitted:

- 3281 • Basic ADS-C
- 3282 • Flight ID
- 3283 • Airframe ID
- 3284 • Air vector
- 3285 • Ground vector
- 3286 • Aircraft Intent
- 3287 • Projected profile
- 3288 • MET data

3289 All time stamps associated with data groups should be based on the UTC received
3290 from the GNSS. UTC based on aircraft clocks should only be used in case of GNSS
3291 outage or failure.

3292

3293 4.3.7.2 Link 2000+

3294 The ATN applications used in Baseline 1 Link 2000+ are subsets of context
3295 management (CM), and Controller Pilot Data Link Communication (CPDLC), as
3296 defined in DO-280/290/EUROCONTROL spec-0116. These applications support
3297 the following ATS Services:

- 3298 • Data Link Initiation (DLIC)
- 3299 • ATC Communications Management (ACM)
- 3300 • Air Traffic Clearance (ACL)
- 3301 • ATC Microphone Check (AMC)

3302

3303 4.3.7.2.1 Context Management (CM)

3304 The Baseline 1 Link 2000+ CM logon function can only be aircraft initiated. The
3305 aircraft system uses the logon function to provide an application name, address,
3306 and version number for each application that the aircraft wishes to use that can be
3307 ground initiated, along with the Origin and Destination airports as required by the
3308 ground system. In response, the ground provides an application name and version
3309 number for each ground-only initiated requested application.

3310 To support auto transfer from one center to the next, the Link 2000+ CM contact
3311 function provides a method for the ATS ground system to request the aircraft
3312 system to initiate the logon function with the ATS ground system indicated in the
3313 CM contact. The ATS ground system initiates this function with a contact request
3314 specifying the ATS ground system CM application address with which to logon. The
3315 aircraft initiates a logon and provides the information indicating whether or not the

4.0 FLIGHT MANAGEMENT FUNCTIONS

3316 requested contact was successful. The Context Management logon messages and
3317 sequence are detailed in the Baseline 1 ATN Interoperability DO-280.

3318 For architecture with dual datalink systems (dual stack), the CM function should
3319 support the auto transfer from one datalink system to another datalink system.

3320

3321 4.3.7.2.2 Controller Pilot Data Link Communication (CPDLC)

3322 The Link 2000+ CPDLC is a subset of the ATN Baseline 1 CPDLC as defined in
3323 RTCA DO-280/290/ EUROCONTROL spec-0116. The ATN Baseline 1 Link 2000+
3324 controller-pilot message exchange function defines a method for a controller and
3325 pilot to exchange information via data link as detailed in DO-280/
3326 290/EUROCONTROL spec-0116. This function provides messages for the
3327 following:

- 3328 • ATC Communication Management (ACM)
- 3329 • Air Traffic Clearance (ACL)
- 3330 • ATC Microphone Check (AMC)

3331 The ATN Baseline 1 Link 2000+ CPDLC message elements encompass level
3332 assignments, crossing constraints, lateral deviations, route changes and
3333 clearances, speed assignments, radio frequency assignments, and various requests
3334 for information. The pilot has the capability to respond to messages, request
3335 clearances and report information. An uplink “free text” capability is also provided to
3336 exchange information not conforming to defined formats and to append information
3337 explaining error reasons. A downlink “free text” capability is provided to append
3338 information explaining error reasons.

3339 The Baseline 1 transfer of data authority function provides the capability for the
3340 current data authority (CDA) to designate another air traffic service unit (ATSU) as
3341 the next data authority (NDA). A CPDLC connection can be established by the NDA
3342 at a time before becoming the CDA. This capability is intended to prevent a loss of
3343 communication that would occur if the NDA were prevented from actually setting up
3344 a connection with an aircraft system element until it became the CDA.

3345

3346 4.3.7.3 Baseline 2 (B2)

3347 The ATS applications used in Baseline 2 are Context Management (CM), Automatic
3348 Dependent Surveillance-Contract (ADS-C) and Controller Pilot Data Link
3349 Communication (CPDLC) as defined in DO-350 through DO-353 and ED-229.
3350 These applications support the following ATM functions:

- 3351 • Data Link Initiation (DLIC)
- 3352 • ATC Communications Management (ACM)
- 3353 • Clearance Request and Delivery (CRD)
- 3354 • ATC Microphone Check (AMC)
- 3355 • Departure Clearance (DCL)
- 3356 • Data Link Taxi (D-TAXI)
- 3357 • In Trail Procedure (ITP)
- 3358 • Advanced Interval Management (A-IM)
- 3359 • Oceanic Clearance Delivery (OCL)
- 3360 • Information Exchange and Reporting (IER)

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 3361 • Position Reporting (PR)
- 3362 • 4-Dimensional Trajectory Data Link (4DTRAD)
- 3363 • Dynamic Required Navigation Performance (DRNP)

3364

3365 **4.3.7.3.1 Context Management (CM)**

3366 The CM logon function can only be aircraft initiated. The aircraft system uses the
 3367 logon function to provide an application name, address, and version number for
 3368 each application that the aircraft wishes to use that can be ground initiated, along
 3369 with the Origin and Destination airports as required by the ground system. In
 3370 response, the ground provides an application name and version number for each
 3371 ground-only initiated requested application.

3372 To support auto transfer from one center to the next, CM contact function provides a
 3373 method for the ATS ground system to request the aircraft system to initiate the
 3374 logon function with the ATS ground system indicated in the CM contact. The ATS
 3375 ground system initiates this function with a contact request specifying the ATS
 3376 ground system CM application address with which to logon. The aircraft initiates a
 3377 logon and provides the information indicating whether or not the requested contact
 3378 was successful. The Context Management logon messages and sequence are
 3379 detailed in DO-350 and ED-229.

3380 For architecture with dual datalink systems (dual stack), the CM function should
 3381 support the auto transfer from one datalink system to another datalink system.

3382

3383 **4.3.7.3.2 Controller Pilot Data Link Communication (CPDLC)**

3384 The ATN Baseline 2 controller-pilot message exchange function defines a method
 3385 for a controller and pilot to exchange information via data link as detailed in DO-350
 3386 and ED-229. This function provides messages for the following:

- 3387 • General information exchange
- 3388 • Clearance delivery, request, and response
- 3389 • Departure Clearance
- 3390 • Taxi Instructions
- 3391 • Separation Assurance
- 3392 • Route modification
- 3393 • Advanced Interval Management
- 3394 • 4D trajectory based operation
- 3395 • Dynamic RNP

3396 The aircraft system should allow the flight crew to view the message with no more
 3397 than a single action and allow the flight crew to access the list/queue of unread
 3398 messages with no more than a single action. The aircraft system should display the
 3399 messages on a display in the primary field of view.

3400 The aircraft data link system should provide the flight crew with the capability to load
 3401 designated CPDLC uplink messages into the FMS to avoid hazards associated with
 3402 human entry errors and/or increased workload. The following clearance messages
 3403 are prone to these hazards:

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 3404 • A clearance that will require the creation, in the resulting flight plan, of more
- 3405 than one waypoint unless the route is described by a procedure name that
- 3406 can be loaded from the navigation database,
- 3407 • A clearance that will require the creation, in the resulting flight plan, of one
- 3408 waypoint specified by place-bearing-distance or latitude/longitude with a
- 3409 resolution smaller than whole degrees.

3410 The aircraft data link system will provide the flight crew with assistance to create
 3411 CPDLC downlink messages to avoid any safety implications (i.e., human entry
 3412 errors and/or significant increased workload). The following downlink messages are
 3413 prone to these hazards:

- 3414 • request messages which contain more than one waypoint
- 3415 • report messages of the present aircraft position or containing one (or more)
- 3416 waypoint(s) from the FMS active flight plan.
- 3417

3418 4.3.7.3.3 Automatic Dependent Surveillance (ADS-C)

3419 The ADS-C application provides automatic reports from an aircraft system to an
 3420 ATSU as detailed in DO-350. The ATSU is capable of requesting the aircraft system
 3421 to provide the ADS-C reports to the ATSU system in three ways:

- 3422 • on demand
- 3423 • on a periodic basis
- 3424 • when triggered by an event

3425 Only one contract of a given type is permitted at one time per ATSU. When the
 3426 ATSU sends a contract request to an aircraft system for a periodic or event
 3427 contract, and either of these two contracts already exists with that aircraft, then the
 3428 new contract will override the previous contract for that type. Acceptance of an
 3429 event or periodic contract request implicitly cancels an existing respective event or
 3430 periodic contract. Since the demand contract is satisfied by sending a single report,
 3431 any number of demand contracts may be sequentially established with a given
 3432 aircraft. The ATSU is capable to cancel either a single contract or all contracts in
 3433 operation that it has established with an aircraft. The ATSU specifies either which
 3434 contract(s) to cancel by identifying the contract type(s), or specifying to cancel all
 3435 contracts. The aircraft system acknowledges the cancellation and ceases sending
 3436 the ADS-C reports for the cancelled contract(s). The aircraft system is capable of
 3437 providing ADS-C reports to support contract requests. The ADS-C reports content
 3438 and the conditions under which the report is sent vary depending on the type of
 3439 contract request and the conditions specified in the request. The aircraft system is
 3440 capable of supporting contract requests with at least five ground systems
 3441 simultaneously. In addition, when in emergency mode, the aircraft system provides
 3442 an emergency/urgency indication as part of each downlink ADS-C messages
 3443 including the ADS-C report.

3444 Each contract request can specify the data groups to be transmitted:

- 3445 • Basic ADS-C
- 3446 • air vector
- 3447 • ground vector
- 3448 • projected profile
- 3449 • MET data
- 3450 • RTA status data

4.0 FLIGHT MANAGEMENT FUNCTIONS

- 3451 • extended projected profile
- 3452 • planned final approach speed
- 3453 • RNP status

3454

3455

COMMENTARY

3456 The predicted altitudes in ADS reports should be the level at which
 3457 the aircraft is predicted to sequence the point. When the aircraft is off
 3458 the vertical reference path this altitude may be different than the
 3459 predicted reference path altitude.

3460

4.3.8 Airport Surface Guidance

3462 [Deleted by Supplement 5].

4.3.9 Terrain and Obstacle Data

3464 [Deleted by Supplement 5].

4.3.10 Electronic Map Interfaces**4.3.10.1 Navigation Display Interface**

3467 The system should support an interface with a Navigation Display (ND) in order to
 3468 provide lateral situational awareness (e.g. aircraft position, lateral trajectory, nearby
 3469 nav aids, etc). RTCA DO-257() defines requirements for the ND Based on the
 3470 architecture, the FMF may provide data for use by an external symbol generator or
 3471 may provide a series of drawing commands. The EFIS ND interface is detailed in
 3472 Section 7.0; the CDS interface is in ARINC 661.

3473 In addition to the map background data and the aircraft position, the system should
 3474 supply a number of other dynamic data items that are contribute to lateral situation
 3475 awareness. These may include:

- 3476 • Wind (either cross wind and headwind components or magnitude and
 3477 bearing)
- 3478 • Time and distance to go to the next waypoint
- 3479 • Ground speed
- 3480 • Vertical deviation when guiding to the descent path
- 3481 • Trend vector showing current rate and direction of turn

3482 The system should support independent ND displays such that each pilot may
 3483 select different map ranges, modes, or options.

4.3.10.2 Vertical Situation Display Interface

3485 The system may support an interface with a Vertical Situation Display (VSD) to
 3486 provide vertical situational awareness (e.g. vertical aircraft position, AFCS Control
 3487 Panel Altitude, altitude constraints, descent reference path, vertical trajectory
 3488 predictions, terrain, etc). RTCA DO-257() defines requirements for the VSD. Based
 3489 on the architecture, the FMF may provide data for use by an external symbol
 3490 generator or may provide a series of drawing commands. The CDS interface is in
 3491 ARINC 661.

4.0 FLIGHT MANAGEMENT FUNCTIONS

3492 In addition to the map background data, vertical aircraft position, and AFCS Control
 3493 Panel Altitude, the system should supply a number of other dynamic data items that
 3494 contribute to vertical awareness. These may include:

- 3495 • Vertical speed
- 3496 • Vertical deviation when guiding to the descent path
- 3497 • Trend vector showing current flight path angle

3498 The system should support independent VSD displays such that each pilot may
 3499 select different map ranges, modes, or options.

3500 4.3.11 CMU Interface

3501 The system should provide for an interface with a CMU for the purpose of
 3502 supporting all data link functionality described in this characteristic. The standard
 3503 interface between the CMU and the flight management function, detailing the
 3504 interface data and formats, may be found in Section 8.0 of this characteristic.
 3505 Message formats for AOC communications are defined in ATTACHMENT 7.

3506 4.3.12 Predictive Receiver Autonomous Integrity Monitoring (RAIM)

3507 Optional capability may be provided for the FMS to transmit the selected destination
 3508 latitude, longitude, and ETA to the GNSS when a flight plan has been activated and
 3509 predicted. The purpose of this capability is for the prediction of the availability of
 3510 GNSS satellite coverage for the approach phase of the flight. The GNSS should
 3511 respond to whether adequate satellite coverage is anticipated. If not, the system
 3512 should immediately alert the crew. Interface requirements for this capability are
 3513 defined in ARINC Characteristic 743A, Appendix C.

3514 4.3.13 Precision-Like Approach Guidance

3515 With the advent of advanced navigation sensors and airborne systems, two
 3516 methods have been developed that allow non-precision approaches to be flown like
 3517 an ILS, MLS, or GLS precision approach: LP/LPV Approaches and FMS Landing
 3518 System (FLS)

3519 LP/LPV Approaches are analogous to GLS approaches. Both LP/LPV and GLS are
 3520 satellite-based operations using an augmented GNSS solution. In a GLS approach,
 3521 a ground station transmits both (a) corrections to a GNSS signal, and (b) a Final
 3522 Approach Segment (FAS) Data Block which defines the localizer and glideslope
 3523 beams. When tuned to the GLS channel number, a receiver onboard the aircraft
 3524 receives those signals and computes ILS look-alike deviations for use by the
 3525 autoflight and display systems. In an LP/LPV approach, a receiver onboard the
 3526 aircraft receives corrections to the GNSS signal from a satellite-based system
 3527 (SBAS) rather than a ground-based system (GBAS); it typically receives the FAS
 3528 Data Block from the onboard Flight Management System.

3529 For any non-precision approach, some Flight Management Systems support an FLS
 3530 guidance mode where the onboard FMS navigation solution may be used to provide
 3531 the autoflight and display systems with ILS look-alike deviations.

3532

3533 4.3.13.1 LP/LPV Approach Guidance

3534 On some installations, the system supports LP/LPV approach capability when used
 3535 in conjunction with an ARINC 743B GNSS Landing System Sensor Unit (GLSSU)

4.0 FLIGHT MANAGEMENT FUNCTIONS

3536 (RTCA DO-229 Delta-4 SBAS receiver) or an ARINC 755 Multi-Mode Receiver
 3537 (MMR) supporting the GLS function. The GLSSU (or MMR) provides the lateral
 3538 and vertical deviations (ILS look-alike) and guidance during the final approach
 3539 segment.

3540 On those installations, upon crew selection of the desired LP/LPV approach, the
 3541 system should extract the Final Approach Segment (FAS) data block from its
 3542 navigation database and transmit it to the GLSSU/MMR. The protocol to exchange
 3543 the FAS data block is described in ARINC 743B Appendix D and ARINC755
 3544 Appendix A. The Final Approach Segment (FAS) data block includes a 32-bit Cyclic
 3545 Redundancy Check (CRC) value ensuring the integrity of the data from the time of
 3546 the original packet generation.

3547 Upon crew activation of a new approach where the previously selected Final
 3548 Approach Segment is no longer applicable, the system should invalidate the
 3549 previously sent Final Approach Segment Data Message (FASDM).

3550

4.3.13.2 FMS Landing System (FLS)

3552 The system may support a virtual ILS guidance capability which can be used to fly a
 3553 non-precision final approach segment. This capability is referred to as FMS Landing
 3554 System (FLS).

3555 When an FLS capability is provided and the crew has selected a non-precision
 3556 approach, the system should provide a means for the crew to select or de-select
 3557 FLS guidance for the final approach. When FLS is selected and lateral guidance is
 3558 not already being provided by a ground-based localizer (if allowed), the system
 3559 should compute a virtual localizer path. When FLS is selected, the system should
 3560 compute a virtual glideslope path. For the virtual glideslope path, the anchor point
 3561 should be located such that the aircraft can maintain a constant vertical angle to the
 3562 landing threshold point (LTP), even in cases where the MAP is not located at the
 3563 runway or there is a curved lateral path to the runway. When FLS guidance is
 3564 selected, the system should interface to the autoflight and/or display systems to
 3565 allow the virtual localizer and/or glideslope to be flown. When the system cannot
 3566 support FLS guidance for the selected non-precision approach, the system should
 3567 prohibit selection of FLS guidance and/or provide an indication to the crew.

3568

3569

COMMENTARY

3570 FLS guidance must comply with the Temperature Compensation
 3571 Requirements in Section 4.3.2.5.4.

3572

4.3.14 Integrity Monitoring and Alerting**4.3.14.1 Sensor Status**

3575 Sensor warning inputs will be implemented as specified in ARINC Specification 429,
 3576 Section 2.1, in that validity status is contained within the digital word format.

3577 In all cases of sensor input failure, suitable sensor failure warning and degraded
 3578 status annunciation should be provided.

4.0 FLIGHT MANAGEMENT FUNCTIONS**3579 4.3.14.2 System Status Alert**

3580 Any change of status that results in reduced system operational capability or
3581 availability should be annunciated to the pilot on, or adjacent to, primary flight
3582 instruments. Additional data for use in diagnosing the reason for the change will be
3583 of value if it can be displayed on the MCDU or output to an onboard printer or data
3584 collection system (e.g., through the data loader interface). Means should be
3585 provided to cancel the alert.

3586

COMMENTARY

3587 The system status alert is designed only to attract the attention of the
3588 pilot to the fact that something has happened either within the system
3589 or to one of the sensors that has degraded or will degrade the
3590 operational viability of the system. It will be necessary for the pilot to
3591 look for further signs to determine the actual problem and whether or
3592 not he can correct it.

3593 System integrity monitoring and failure warning discrete outputs are described in
3594 Section 5.3 of this Characteristic. All other such alerts and warnings are included in
3595 the transmitted digital word as specified in ARINC Specification 429, Section 2.1.

3596

4.0 FLIGHT MANAGEMENT FUNCTIONS

3597 **4.3.14.3 Self-Test**

3598 The FMC should be designed to perform automatic self-tests of its internal
3599 operation, and reasonableness tests on input data during normal operation. The
3600 FMC will generate digital output buses which will include malfunction codes to
3601 indicate the FMC's assessment of its health, and the status of its interfaces.

3602 **4.3.14.4 Failure Response**

3603 The system should monitor its own health and processing for integrity. When an
3604 error is detected, the system should record the failure in a nonvolatile BITE log and
3605 attempt to recover from or correct the error if possible. If an attempted fault recovery
3606 is unsuccessful, the system should prevent further processing in the affected
3607 partition.

COMMENTARY

3608 The airlines desire a high degree of fault tolerance in the FMS.
3609 System recovery logic for intermittent faults should be designed to
3610 minimize visible flight deck effects and loss of system availability.
3611

3612 **4.4 Training Simulator Support Functions**

3613 FMS requirements for simulator support functions are defined in ARINC Report
3614 610().
3615

5.0 STANDARD INTERFACES3616 **5.0 STANDARD INTERFACES**3617 **5.1 FMC Digital Data Input Ports**

3618 This section describes the digital interfaces to the FMC. It is unlikely that all of these
 3619 inputs will be employed in a given installation. Those not used in a particular aircraft
 3620 type need not be implemented in the FMC. However, hardware, software, and
 3621 computer cycle time capacity should be available to allow all of them to be activated
 3622 when needed.

3623 **COMMENTARY**

3624 Data signaling for inputs and outputs to the FMC should be in the
 3625 ARINC 429 low-speed rates, except where otherwise specified. The
 3626 data signals are defined in Attachment 4 of this document.

3627 Providing for FMC interchangeability across different aircraft types in
 3628 a user's fleet may generate the need for the computer to offer more
 3629 input capacity than needed on any one of those types.

3630 **5.1.1 VOR Input Ports**

3631 Two ARINC 429 input ports are provided to receive data from dual ARINC 711 VOR
 3632 receivers.

3633 **5.1.2 DME Input Ports**

3634 Two ARINC 429 input ports are provided to receive data from dual ARINC 709 DME
 3635 interrogators.

3636 **5.1.3 ILS/MMR Input Port**

3637 One ARINC 429 input port will receive data from an ARINC 710 ILS receiver or an
 3638 ARINC 755 Multi-Mode Landing System Receiver (MMR).

3639 **COMMENTARY**

3640 These ports are used to support LP/LPV approaches when interfacing to an ARINC
 3641 755 MMR

3642 **5.1.4 Air Data Input Ports**

3643 Two ARINC 429 input ports will receive data from dual ARINC 706 Air Data
 3644 Systems or ARINC 738 Air Data Inertial Reference Unit (ADIRU).

3645 **5.1.5 IRS/AHRS Input Ports**

3646 Three ARINC 429 input ports will receive data from ARINC 704 IRS, ARINC 705
 3647 AHRS or ARINC 738 ADIRU systems. These are ARINC 429 high-speed inputs.

3648 **5.1.6 GNSS Input Ports**

3649 Two ARINC 429 input ports should receive data from an ARINC 743 GNSS Sensor.
 3650 These may be ARINC 429 high-speed or low-speed inputs. The ARINC 743 GNSS
 3651 Sensor is capable of providing ARINC 429 data in high-speed or low-speed format.

3652 **COMMENTARY**

3653 These ports are used to support LP/LPV approaches when interfacing to an ARINC
 3654 743B GLSSU or an ARINC 755 MMR

5.0 STANDARD INTERFACES

3655 **5.1.7 Flight Control System Input Ports**

3656 One ARINC 429 input port will receive data from an ARINC 701 Flight Control
3657 System glare shield controller.

3658 **5.1.8 MCDU Input Ports**

3659 Two ARINC 429 input ports are provided to receive data from one or two MCDUs.
3660 One of these ports is designated the “on-side” port and the other is designated the
3661 “off-side” port (see Attachment 3 of this document).

3662 **5.1.9 Data Loader Input Ports (ARINC 615)**

3663 One ARINC 429 input port is dedicated to receive data to update bulk storage
3664 integral to the FMC. This port is intended for an interface with a loading device of
3665 the type described in ARINC 615. The characteristics of the digital data
3666 transmission on this bus are defined to the extent necessary in that document.

3667 **5.1.10 Data Link Input Ports**

3668 The FMC should provide two ARINC 429 high-speed input ports to receive data
3669 from up to two ARINC 758 CMUs.

3670 The FMC should provide two ARINC 429 low-speed input ports to receive data from
3671 up to two ARINC 724B ACARS Management Units or to support existing ACARS
3672 functionality integrated into the ARINC 758 CMU.

3673 **COMMENTARY**

3674 Dual ACARS low-speed inputs can be accommodated by using a
3675 software selectable speed input for at least one of the CMU inputs.

3676 **5.1.11 Intersystem Data Input Port**

3677 One ARINC 429 input port provides the intersystem comparison data received from
3678 a second FMC.

3679 **COMMENTARY**

3680 As an alternative to ARINC 429, a faster intersystem data bus may
3681 be necessary. Refer also to Sections 5.2.1 and 5.4.

3682 **5.1.12 Propulsion/Configuration Data Input Ports**

3683 Six ARINC 429 input ports are provided for engine and fuel flow and quantity
3684 parameters and data received from the Thrust Control Computer (TCC).

3685 **COMMENTARY**

3686 It is intended that four of these ports should be assigned for receiving
3687 individual engine and fuel flow data from up to four engines or fuel
3688 systems. The remaining two ports would normally receive other data
3689 such as thrust limit, fuel quantity, and TCC data.

3690 **5.1.13 Electronic Flight Instrument System Input Ports**

3691 Two ARINC 429 input ports are provided for data from an Electronic Flight
3692 Instrument system. This interface may provide interface capability to the Cursor
3693 Control Device (CCD). This capability may be provided by a separate input as
3694 defined in Section 5.1.19.

5.0 STANDARD INTERFACES

3695 **5.1.14 Printer**

3696 One ARINC 429 input port is provided for data from an ARINC 740 or ARINC 744
3697 airborne printer.

3698 **5.1.15 Digital Clock Input**

3699 One ARINC 429 input port is provided for data from a digital clock. The clock input
3700 may be provided from a GNSS source, in which case the GNSS input is utilized per
3701 Section 5.1.6. In this case a dedicated clock input port is not required.

3702 **5.1.16 Maintenance Input**

3703 One ARINC 429 low-speed input port is provided for interface to an ARINC 604 or
3704 624 maintenance system.

3705 **5.1.17 WBS Input**

3706 One ARINC 429 input port is reserved for input of data from an ARINC 737 On-
3707 Board Weight and Balance System (WBS).

3708 **5.1.18 Simulator Input**

3709 A serial digital input is required to support ARINC 610B simulator functions. As a
3710 manufacturer option, this input may be shared with other interfaces not requiring
3711 simultaneous use, such as maintenance or data loader inputs.

3712 **5.1.19 Pointing Device**

3713 Two high-speed ARINC 429 input ports are reserved for input from dual cockpit
3714 pointing devices.

3715 **COMMENTARY**

3716 These ports are retained for compatibility with unknown systems
3717 should they exist. It is expected that all future systems will receive
3718 graphical user interface inputs via an ARINC 661 CDS interface.

3719 **5.1.20 ASAS Input**

3720 One ARINC 429 high-speed port is reserved for input of data from an Aircraft
3721 Separation Assurance System (ASAS) system.

3722 **5.1.21 Reserved Ports for Growth Inputs**

3723 Four ARINC 429 input ports are reserved. These ports should be software
3724 selectable as ARINC 429 high-speed or low-speed inputs.

3725 **5.2 FMC Digital Data Outputs**

3726 Separate buffered ARINC 429 data output ports are provided to drive the MCDUs
3727 and other subsystems requiring FMC data.

3728 **5.2.1 FMC Intersystem Output**

3729 The FMC should provide an output bus which can be used for intersystem
3730 communication from one FMC to another. Section 5.4 of this document provides
3731 guidance on intersystem communications.

3732 **COMMENTARY**

3733 It may be necessary to exchange data at higher data rates than
3734 possible on an ARINC 429 data bus. In these cases, an alternative

5.0 STANDARD INTERFACES

3735 data bus may be used. Any alternative data bus should meet the
3736 same EMI requirements of ARINC 429.

3737 **5.2.2 General Data Output**

3738 Two ARINC 429 outputs provide data to flight instruments, to radio receivers or
3739 frequency management unit for tuning, to the Thrust Control Computer System,
3740 Flight Control Computer System, and other users. They may also provide
3741 initialization data to the IRS. Optionally, they may include the FAS data block to an
3742 ARINC 743B GLSSU or ARINC 755 MMR.

3743 **COMMENTARY**

3744 The amount of data to be carried may require the use of ARINC 429
3745 high-speed buses.

3746 **5.2.3 Primary Display Data Output**

3747 Two ARINC 429 high-speed outputs are dedicated to supplying data for the
3748 Electronic Flight Instrument systems.

3749 **COMMENTARY**

3750 The specialized design of the FMC/EFI interface makes these outputs unsuitable for
3751 supplying other displays such as digital electromechanical instruments. The general
3752 data outputs should be used for these purposes. See Section 7.0 of this document.

3753 **5.2.4 MCDU Output Ports**

3754 Two ARINC 429 outputs provide the means for the FMC to supply data to the
3755 MCDUs for the system.

3756 **5.2.5 Data Loader Output**

3757 One ARINC 429 output is provided for interface to an ARINC 615 data loader.

3758 **5.2.6 Data Link Output Ports**

3759 One ARINC 429 high-speed output is provided for connection to an ARINC 758
3760 CMU.

3761 One ARINC 429 low-speed output is provided for connection to an ARINC 724B
3762 ACARS Management Unit, or to support existing ACARS functionality integrated
3763 into the ARINC 758 CMU.

3764 **5.2.7 Autothrottle (Reserved)**

3765 One ARINC 429 output is reserved to supply data to an Electronic Engine Control
3766 (EEC) computer.

3767 **5.2.8 Printer**

3768 One ARINC 429 high-speed output is reserved for the output of data to an ARINC
3769 740 or ARINC 744 printer.

3770 **5.2.9 Onboard Maintenance**

3771 One ARINC 429 output is reserved for the output of data to an ARINC 604 or 624
3772 onboard maintenance system.

3773 **5.2.10 Programmable Data Output**

3774 One ARINC 429 high-speed output is provided to support flight test data collection.

5.0 STANDARD INTERFACES

3775 **5.2.11 Simulator**

3776 A serial digital output is required to support ARINC 610B simulator functions. As a
 3777 manufacturer option, this output may be shared with other interfaces not requiring
 3778 simultaneous use, such as maintenance or data loader inputs.

3779 **5.2.12 Aircraft State and Intent Path Output (Trajectory Bus)**

3780 The FMC should include an ARINC 429 high-speed bus to provide Position Velocity
 3781 Time (PVT) and intent data from the FMC. This data may be used for surveillance
 3782 applications such as ADS-B, Terrain Awareness and Warning System (TAWS),
 3783 Terrain/Obstacle avoidance, and other situational awareness systems. The
 3784 interface definition is comprised of present aircraft state data that is broadcast at a
 3785 half second (2 Hz) update rate. The FMS should comply with the requirements of
 3786 RTCA DO-229C that specifies that the data defining the position shall be output
 3787 prior to 200 milliseconds after the time of applicability.

3788 Additionally, trajectory intent data for the active flight plan, modified flight plan, or
 3789 other specified flight plan, assumed to be flown in FM managed mode, is
 3790 transmitted as a block data transfer. This data may be used for all types of ATM
 3791 applications.

3792 As an option, the Aircraft State and Trajectory output may be provided by an ARINC
 3793 664 Ethernet interface. The intention is that the same data items are provided; only
 3794 the transfer mechanism(s) are different. The Ethernet Aircraft State is specified in
 3795 Section 5.2.12.1.2 and the Ethernet Trajectory output is specified in Section
 3796 5.2.12.2.2. There are no pin assignments in this Characteristic for an ARINC 664
 3797 Ethernet bus. These interfaces may be aircraft specific.

3798 The list of ARINC 429 data words used for the broadcast data is included in ARINC
 3799 Specification 429: Digital Information Transfer System (DITS).

3800 **5.2.12.1 Aircraft State Data**

3801 The aircraft state data from the FMS should include the parameters in Table 5-1 or
 3802 Table 5-2. Trajectory intent status data should be included as an FMC output based
 3803 on determination if the aircraft is following its FMC specified flight plan. Separate
 3804 discrete bits (label 270 bits 27, 28, 29) are provided to the user to aid in the
 3805 interpretation of trajectory data. These discrete bits indicate whether the airplane is
 3806 being flown to the vertical, lateral, and speed/time targets for the trajectory provided
 3807 with the appropriate automation engaged, as necessary.

3808 This list of data represents information that is expected to be made available on the
 3809 Trajectory intent data bus from the FMC to support multiple functions. It is not
 3810 intended to specify what should be transmitted from the airplane.

3811 **5.2.12.1.1 A429 Aircraft State**

3812

3813

Table 5-1 A429 Intent Aircraft State Labels

Label	Parameter	Update Rate
102	FMS Selected Altitude	0.5 sec
103	FMS Selected Airspeed	0.5 sec
106	FMS Selected Mach	0.5 sec
114	FMS Desired Track	0.5 sec
116	Cross Track Distance	0.5 sec

5.0 STANDARD INTERFACES

Label	Parameter	Update Rate
117	Vertical Deviation	0.5 sec
135	Current Vertical Path Perf Limit (Vert RNP)	0.5 sec
136	Current Vertical Path Perf (Vert ANP ⁽¹⁾)	0.5 sec
150	UTC	0.5 sec
167	Estimated Position Uncertainty (or ANP)	0.5 sec
171	Current RNP	0.5 sec
233-237	Flight ID	0.5 sec
310	Present Position Latitude	0.5 sec
311	Present Position Longitude	0.5 sec
312	Ground Speed	0.5 sec
313	Track Angle True	0.5 sec
314	True Heading	0.5 sec
315	Wind Speed	0.5 sec
316	Wind Direction	0.5 sec
204	Baro-Corrected Altitude (pass through from ADC)	0.5 sec
203	Pressure Altitude (pass through from ADC)	0.5 sec
206	Calibrated Airspeed (pass through from ADC)	0.5 sec
205	Mach (pass through from ADC)	0.5 sec
210	True Airspeed (pass through from ADC)	0.5 sec
213	Static Air Temperature (pass through from ADC)	0.5 sec
320	Magnetic Heading (pass through from IRS)	0.5 sec
325	Roll Data (pass through from IRS)	0.5 sec
335	Track Angle Rate (pass through from IRS)	0.5 sec
365	Inertial Vertical Velocity (pass through from IRS)	0.5 sec
366	N/S Velocity	0.5 sec
367	E/W Velocity	0.5 sec
270	Intent Status bit 29-speed/time controlled bit 28-lateral controlled bit 27-vertical controlled bit 26-no active flight plan intent data bit 25-desired track mag/true ref (1 = true) bit 24-indicates when bus is guidance master	0.5 sec

3814

3815

3816

3817

Note 1:Vertical ANP is applied to baro-corrected altitude when below transition altitude. Vertical ANP is applied to transition flight level and barometric altitude when above transition altitude.

3818

COMMENTARY

3819

3820

3821

3822

Table 5-1 provides FMS data parameters for surveillance and fully recognizes that other data parameters necessary for surveillance may be provided by other systems (e.g., GPS, inertial system, air data system, Flight Controls system).

3823

3824

3825

3826

3827

The integrity data is Estimated Position Uncertainty and Current Vertical Path Performance. It is expected that surveillance systems using this data to transmit an integrity parameter outside the airplane would use these data items (or the appropriate integrity parameters when using data from another source, such as GPS) to compute the

5.0 STANDARD INTERFACES

3828 requisite integrity parameter as specified by the RTCA MOPS for that
3829 particular surveillance application.

3830 **5.2.12.1.2 Ethernet Aircraft State**

3831 The format of the aircraft state consists of a single block coded in big endian mode.
3832 This block should nominally be sent at 2 Hz rate.

3833

3834

Table 5-2 Ethernet Intent Aircraft State Format

Ethernet Aircraft State				
Data	Type	Size (bits)	Units	Comments
Start of Block		8		Start of application block. Code hx53
Block Size	Integer	8	Bytes	Size in bytes of aircraft state data block
Pad	Integer	16	-	hx0000
FMS Selected Altitude	Float	32	ft	Label 102, Note 2
FMS Selected Airspeed	Float	32	kt	Label 103, Note 2
FMS Selected Mach	Float	32	-	Label 106, Note 2
FMS Desired Track	Float	32	deg	Label 114, Note 2
Cross Track Distance	Float	32	NM	Label 116, Note 2
Vertical Deviation	Float	32	ft	Label 117, Note 2
Vertical RNP	Float	32	ft	Label 135, Note 2
Vertical ANP	Float	32	ft	Label 136, Notes 1 & 2
UTC	Float	32	sec	Label 150, Note 2
Estimated Position Uncertainty (or ANP)	Float	32	NM	Label 167, Note 2
Current RNP	Float	32	NM	Label 171, Note 2
Flight ID	String	m * 32	-	Label 233 – Label 237, Note 3
Present Position Latitude	Float	32	deg	Label 310, Note 2
Present Position Longitude	Float	32	deg	Label 311, Note 2
Ground Speed	Float	32	kt	Label 312, Note 2
Track Angle True	Float	32	deg	Label 313, Note 2

5.0 STANDARD INTERFACES

True Heading	Float	32	deg	Label 314, Note 2
Wind Speed	Float	32	kt	Label 315, Note 2
Wind Direction	Float	32	deg	Label 316, Note 2
ADC Baro-Corrected Altitude	Float	32	ft	Label 204, Note 2
ADC Pressure Altitude	Float	32	ft	Label 203, Note 2
ADC Calibrated Airspeed	Float	32	kts	Label 206, Note 2
ADC Mach	Float	32	-	Label 205, Note 2
ADC True Airspeed	Float	32	kts	Label 210, Note 2
ADC Static Air Temperature	Float	32	degC	Label 213, Note 2
IRS Magnetic Heading	Float	32	deg	Label 320, Note 2
IRS Roll Angle	Float	32	deg	Label 325, Note 2
IRS Track Angle Rate	Float	32	deg/sec	Label 335, Note 2
IRS Vertical Velocity	Float	32	ft/min	Label 365, Note 2
N/S Velocity	Float	32	kt	Label 366, Note 2
E/W Velocity	Float	32	kt	Label 367, Note 2
Intent Status	Integer	32	-	Label 270
End of Block		8		End of application block. Code hx45
Pad		24		hx000000

3835

Notes:

3836

3837

3838

3839

3840

3841

3842

3843

3844

3845

1. Vertical ANP is applied to baro-corrected altitude when below transition altitude. Vertical ANP is applied to transition flight level and barometric altitude when above transition altitude.
2. hxFF 80 00 00 code is reserved to indicate invalid / undefined parameter.
3. Strings are defined as the sequence of n (numbered 1 through n) ASCII characters, 8-bits encoded. Number n is encoded as a 16-bits unsigned integer, and is immediately followed by the n bytes of the string. Padding for 32-bits word shall be filled with 0's (zeroes).

5.0 STANDARD INTERFACES

3846 **5.2.12.2 Trajectory Intent Data**

3847 In addition to the aircraft state data defined above, the FMC should provide an
 3848 output of the flight path trajectory for each flight plan (i.e. active, modified,
 3849 secondary, and ATC flight plans). This may be used to support predictive functions
 3850 such as real time traffic conflict probes, airspace traffic situational awareness,
 3851 strategic traffic coordination, and terrain/obstacle avoidance. The data should
 3852 consist of a string of points that describe the predicted trajectory of the aircraft along
 3853 with the point type and data associated with the flight path transition. This data
 3854 forms the basis for a using function to be able to unambiguously reconstruct the
 3855 predicted flight trajectory. This block transmission is for the entire flight trajectory
 3856 even though a using function may only be interested in a part of the active
 3857 trajectory. For the active flight plan, this data should be updated on the following
 3858 events:

- 3859 • Whenever an active flight plan change occurs.
- 3860 • When a lateral waypoint is passed.
- 3861 • When a defined period has elapsed (on the order of one minute) since the
 3862 last transmission.

3863 **COMMENTARY**

3864 Other events might require data to be updated. For example, it may
 3865 be desirable to update the data when there has been a significant
 3866 change to the predicted trajectory caused by tactical operations or
 3867 unforecast environmental conditions.

3868 For the modified, secondary and data link flight plans, this data should be updated
 3869 (at a minimum) when the plan is created, deleted or modified.

3870 **5.2.12.2.1 A429 Trajectory Intent File Transfer Format**

3871 The A429 Trajectory Intent File Transfer Format is an encapsulation of the Ethernet
 3872 Trajectory Intent File Transfer Format (5.2.12.2.2). The Ethernet file, including the
 3873 header and footer, is encapsulated in a series of A429 words as outlined in the table
 3874 below.

3875 **Table 5-3 A429 Trajectory Intent File Transfer Format**

Word Type Bits 31, 30	Parameter	Bit 29	Format Bits 28-9	Label Bits 8-1
Start Of Transmission 1 1	-----	0	Bits 28-25 (Note 2) Bits 24-17 word count Bits 16-9 LDU sequence	232 for Active Intent (Note 3)
Full Data Word 0 1 (frame start)	Version	Bits 29-13 Pad 0	Bits 12-9 Version/Compatibility (Note 4)	232
Full Data Word 0 0	Trajectory File	Bits 29-9 Trajectory File Content (5 nibbles)		232
Repeat Full Data Word group starting with frame start (01) as necessary to the end of trajectory. After 253 Full Data Words a new LDU must be started.				
End Of Transmission 1 1	-----	1	Bits 28-26 0 0 0 Bits 25 final LDU = 1 Bits 24-9 CRC	232

3877

Notes:

5.0 STANDARD INTERFACES

- 3878
3879
3880
3881
3882
3883
3884
1. Because of multiple users (sink) of this file, no RTS, CTS, ACK, or NAK protocol is provided. Receivers must be capable of handling the block file transfer when the transmitter sends it.
 2. Start of transmission word, Bits 28-25 describe provisions for alternate content.
 3. The following labels are used for different flight plan types:

Label	Flight Plan Type
232	Active
242	Modified
252	Secondary
262	Data Link

3885
3888

4. Version/Compatibility codes are as follows:

Bits 12-9	Version
0000	ARINC 702A-2 (2005)
0001	ARINC 702A-3 (2006)
0010	ARINC 702A-4 (2014)
0011	ARINC 702A-5 (2018)
----	Reserved
1111	Reserved

3890
3891

5.0 STANDARD INTERFACES

3892 **5.2.12.2.2 Ethernet Trajectory Intent File Transfer Format**

3893 The format of the trajectory data uses blocks containing a header, body, and footer.
 3894 All elements shall be coded in big endian mode.

3895

3896

Table 5-4 Ethernet Trajectory Intent File Transfer Format

HEADER			
Data	Type	Size (bits)	Comments
Start_of_block		8	Start of application block. Code hx53
Flight Plan type	Integer	8	(Note 1)
Trajectory_sequence_number	Integer	8	From 1 to 255 (0 reserved for special use) (Note 9)
Header_size	Integer	8	Size in byte of the header including pad
Trajectory_file_size	Integer	32	Size in byte of the file (does not include header nor footer)
Block_number	Integer	8	Number of application block starting with "0"
Number_of_blocks	Integer	8	Total number of application blocks for the transmitted file
Pad		16	hx0000
Block_size	Integer	32	Size in byte of application block including header and footer
Transition_altitude	Signed Integer	32	Initial climb transition altitude in feet (Note 6)
Climb_baro_setting	Float	32	Climb baro setting in hPa. (Note 6)
Transition_FL	Signed Integer	32	Descent transition FL in feet (converted by FL x 100) (Note 6)
Descent_baro_setting	Float	32	Descent baro setting in hPa (Note 6)
Climb Speed Schedule CAS	Float	32	Climb Speed Schedule CAS in knots (Note 6)
Climb Speed Schedule MACH	Float	32	Climb Speed Schedule MACH (Note 6)
Cruise Speed Schedule CAS	Float	32	Cruise Speed Schedule CAS in knots (Note 6)
Cruise Speed Schedule MACH	Float	32	Cruise Speed Schedule MACH (Note 6)
Descent Speed Schedule CAS	Float	32	Descent Speed Schedule CAS in knots (Note 6)
Descent Speed Schedule MACH	Float	32	Descent Speed Schedule MACH (Note 6)
BODY			

5.0 STANDARD INTERFACES

Data	Type	Size (bits)	Comments
Geometry	Integer	3	Always included. (Note 2)
Data Type	Integer	5	Always included. (Note 3)
Characteristics	Integer	24	Always included. (Note 4)
Path RNP	Float	32	Always included. (Note 6) RNP in NM.
Point Latitude	Float	32	Always included. (Note 6) Latitude in degrees.
Point Longitude	Float	32	Always included. (Note 6) Longitude in degrees.
Turn Radius	Float	32	Only included if geometry is arc to point. (Note 6) Radius in NM.
Turn Center Latitude	Float	32	Only included if geometry is arc to point. (Note 6) Latitude in degrees.
Turn Center Longitude	Float	32	Only included if geometry is arc to point. (Note 6) Longitude in degrees
Point Altitude	Signed Integer	32	Always included. See bit 1 and 2 of characteristics (Note 4, Note 5) for altitude reference. (Note 6) Altitude in feet.
Point ETA	Integer	32	Only included as specified in Data Type Table. (Note 3, Note 6) ETA in seconds (UTC)
Point Speed	Float	32	Only included as specified in Data Type Table. (Note 3, Note 6) Mach if value between 0-10 CAS in kt if value greater than 10
Point Wind Speed	Float	32	Only included as specified in Data Type Table. (Note 3, Note 6) Speed in kt.
Point Wind Direction	Float	32	Only included as specified in Data Type Table. (Note 3, Note 6) Direction in degrees.
Point Name	String	m * 32	Only included as specified in Data Type Table. (Note 3, Note 6, Note 7)
Ref Latitude	Float	32	Only included as specified in Data Type Table. (Note 3, Note 6) Latitude in degrees.
Ref Longitude	Float	32	Only included as specified in Data Type Table. (Note 3, Note 6) Longitude in degrees.
Altitude Constraint, Lower Bound	Signed Integer	32	Only included as specified in Data Type Table. (Note 3, Note 6) Altitude in feet.
Altitude Constraint, Upper Bound	Signed Integer	32	Only included as specified in Data Type Table. (Note 3, Note 6) Altitude in feet.
Earliest ETA	Integer	32	Only included as specified in Data Type Table. (Note 3, Note 6)

5.0 STANDARD INTERFACES

			ETA in seconds (UTC).
Latest ETA	Integer	32	Only included as specified in Data Type Table. (Note 3, Note 6) ETA in seconds (UTC).
Data Type Extension	Integer	32	Only included as specified in Data Type Table. (Note 3, Note 8)
Point Fuel	Float	32	Only included as specified in Data Type Table. (Note 3, Note 8) Note 6? Fuel in lbs
Point Temperature	Float	32	Only included as specified in Data Type Table. (Note 3, Note 8) Note 6? Temperature in °C
Point Path Altitude	Signed Integer	32	Only included as specified in Data Type Table. (Note 3, Note 8) (Note 4, Note 5) for altitude reference. Note 6? Altitude in feet.
Point Path Speed	Float	32	Only included as specified in Data Type Table. (Note 3, Note 8) Note 6? Mach if value between 0-10 CAS in kt if value greater than 10
Speed Constraint Type	Integer	8	0 = NONE 1 = AT or BELOW 2 = AT 3 = AT or ABOVE
Speed Constraint Value	Integer	24	Only included as specified in Data Type Table. (Note 3, Note 8) Speed in kt
RTA Constraint Type	Integer	8	0 = NONE 1 = AT or BEFORE 2 = AT 3 = AT or AFTER
RTA Constraint Value	Integer	24	Only included as specified in Data Type Table. (Note 3, Note 8) RTA in seconds (UTC).
FOOTER			
Data	Type	Size (bits)	Comments
End of block		8	End of application block. Code hx45
Pad		24	hx000000

3897

3898

3899

Notes:

- The following coding is used for different flight plan types:

Integer Value	Flight Plan Type
0	Reserved
1	Partial Portion of Active
2	Active

5.0 STANDARD INTERFACES

3	Secondary
4	Data Link
5	Modified/Temporary
6 - 255	Spare

3900

2. Geometry codes are as followed:

Integer Value	Geometry
0	Not Used
1	Start Point 3D
2	Line to point 3D
3	Arc to point 3D
4 - 7	

3901

3. Data Type codes are as follows:

Data Type Integer Value	Data Includes ETA	Data Includes point speed, wind speed, wind direction	Data Includes point name, ref latitude, ref longitude	Data Includes lower altitude constraint, upper altitude constraint	Data Includes earliest ETA, latest ETA	Data Includes extension field
0						
1	YES					
2	YES	YES				
3			YES			
4	YES		YES			
5	YES	YES	YES			
6			YES	YES		
7	YES		YES	YES		
8	YES	YES	YES	YES		
9	YES	YES	YES		YES	
10	YES	YES	YES	YES	YES	
11-15	SPARE					
16						YES
17	YES					YES
18	YES	YES				YES
19			YES			YES
20	YES		YES			YES
21	YES	YES	YES			YES
22			YES	YES		YES
23	YES		YES	YES		YES
24	YES	YES	YES	YES		YES
25	YES	YES	YES		YES	YES
26	YES	YES	YES	YES	YES	YES
27-31	SPARE					

3902

4. Characteristic codes are as follows:

5.0 STANDARD INTERFACES

Bits 1-24	Characteristics	Description
1	Start of climb	The point where the trajectory will begin a climb segment following a level (intermediate or cruise) segment.
2	Top of climb	Where the trajectory arrives at the cruise flight level. There will be one top-of-climb point for each cruise flight level (step climbs).
3	Top of descent	The point where the trajectory begins a descent from the cruise flight level.
4	End of descent	The point in the trajectory where the descent procedure ends. Subsequent points will correspond to an approach procedure or may include a vertical discontinuity if the approach is undefined.
5	Start of descent	A point where the trajectory will begin a descent segment following a level (intermediate or cruise) segment.
6	Runway	Indicates that the point corresponds to a runway.
7	Level-Off Start	A point in climb or descent where a (intermediate) level segment begins
8	Level-Off End	A point in descent where a (intermediate) level segment ends
9	Aircraft projection	Indicates that the point corresponds to the projection of the airplane's present position onto the current flight plan leg.
10	Discontinuity	Indicates that the trajectory from the previous point to this one is undefined.
11	Non-flyable	Indicates that the trajectory from the previous point to this one is unflyable.
12	Clearance Altitude Level-off	Indicates the point where the aircraft will level off at selected altitude.
13	Current or next leg	Indicates that the segment belongs at least partially to the active or the next leg.
14	Reserved	
15	Reserved	
16	Unnamed fix	A point inserted between other FMS trajectory points, not corresponding to any other specific point type, so as to provide more complete definition of the trajectory. The unnamed fix includes any vertical points not specifically identified by other characteristics listed that are necessary to describe the vertical trajectory.
17	Baro ref 1	Note 5
18	Baro ref 2	Note 5
19	Crossover altitude	The point in climb or descent where the airplane will transition between Mach and IAS control.
20	Transition altitude or Transition level	The point where the trajectory reaches the transition altitude (in climb) or transition level (in descent).
21	Speed change	The point where the airplane will begin accelerating or decelerating as a result of a speed constraint or limit, or reaches the target speed.
22	Reserved	
23	Reserved	
24	Reserved	

5. Altitude Reference


Baro ref 1 (bit1)	Baro ref 2 (bit2)	Description
0	0	Reserved

5.0 STANDARD INTERFACES

0	1	The altitude is baro referenced for a segment in climb with baro correction = Climb_baro_setting (if available)
1	0	The altitude is baro referenced for a segment in descent with baro correction = Descent_baro_setting correction (if available)
1	1	The altitude is STD referenced

Note that two codings may be used to code the same trajectory:

3904
3905

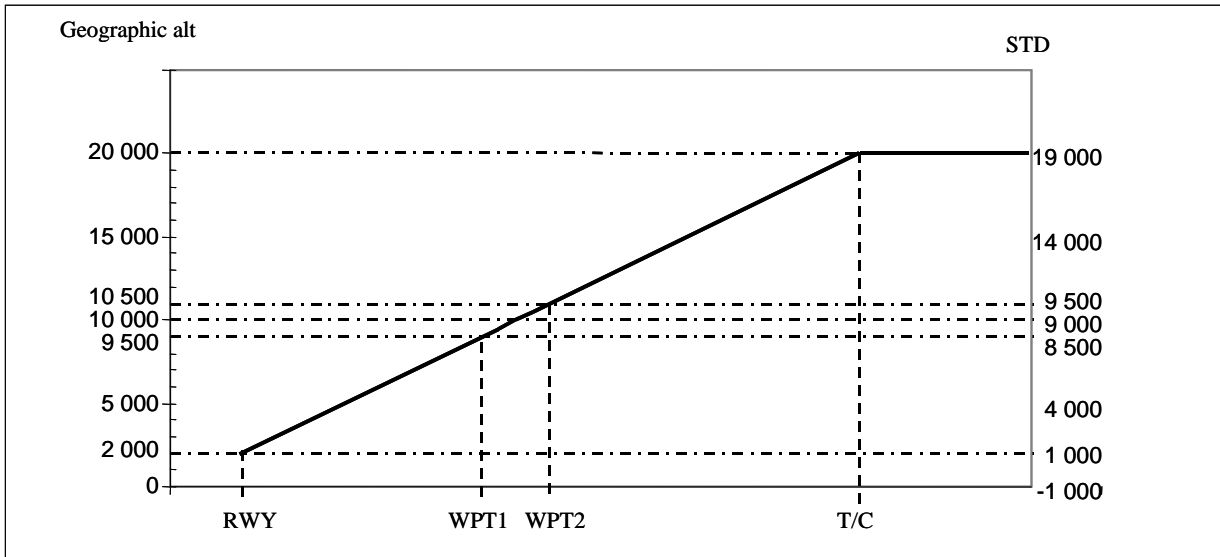

3906
3907

Example of trajectory with CLB QNH = 1049 hPa, transition altitude = 10 000 ft and standard temperature.

3908
3909
3910
3911

Note: Geographic altitude is true height above the earth (tape measure), with Mean Sea Level as the “0” reference. Geographic altitude is independent of atmospheric pressure or temperature.

	Geo Altitude	Std Altitude (1013 hPa)	ATC Altitude	Coding with “STD” only			Mixed coding with “STD” and “Baro” references		
				Altitudes coded in "format"	Baro_ref1	Baro_ref2	Altitudes coded in "format"	Baro_ref1	Baro_ref2
T/C	20 000	19 000	FL 190	9 000	1	1	19 000	1	1
WPT2	10 500	9 500	FL 095	9 500	1	1	9 500	1	1
Trans ALT	10 000	9 000	10 000 ft	9 000	1	1	10 000	0	1
WPT1	9 500	8 500	9 500 ft	8 500	1	1	9 500	0	1
RWY	2 000	1 000	2 000 ft	1 000	1	1	2 000	0	1

5.0 STANDARD INTERFACES

	0	-1 000	N/A	N/A	N/A	N/A	N/A	N/A	N/A
--	---	--------	-----	-----	-----	-----	-----	-----	-----

3912

3913

3914

3915

3916

3917

3918

3919

6. hxFF 80 00 00 code is reserved to indicate invalid / undefined parameter.
7. Strings are defined as the sequence of n (numbered 1 through n) ASCII characters, 8-bits encoded. Number n is encoded as a 16-bits unsigned integer, and is immediately followed by the n bytes of the string. Padding for 32-bits word shall be filled with 0's (zeroes).
8. Data Type Extension codes are as follows:

Bits 1-32	Parameter Provided (Y = 1, N = 0)
1	Point Fuel
2	Point Temperature
3	Point Path Altitude
4	Point Path Speed
5	Speed Constraint (Type & Value)
6	RTA Constraint (Type & Value)
7	Spare
8	Spare
9	Spare
10	Spare
11	Spare
12	Spare
13	Spare
14	Spare
15	Spare
16	Spare
17	Spare
18	Spare
19	Spare
20	Spare
21	Spare
22	Spare
23	Spare
24	Spare
25	Spare
26	Spare
27	Spare
28	Spare
29	Spare
30	Spare
31	Spare
32	Spare

3920

3921

9. For the transmission of a single trajectory, this number will remain unchanged for all application blocks (i.e. this number is attached to

5.0 STANDARD INTERFACES

3922 the trajectory file transmitted). This number is incremented when
 3923 transmitting a new trajectory (i.e. upon refresh whether the trajectory
 3924 has changed or not) and will return to 1 after 255. This will allow the
 3925 received to ensure that the blocks received correspond to the same
 3926 trajectory. It should be noted that, for a single channel, this number
 3927 could be identical but the Flight Plan Type different, depending on the
 3928 implementation. The code 0 (zero) is reserved for special use.

3929

3930

3931 5.2.13 Reserved Ports for Growth

3932 Four ARINC 429 output ports should be reserved for growth. These ports should be
 3933 programmable for high-speed or low-speed operation.

3934 5.3 Discrete Inputs and Outputs

3935 Digital discrete inputs may be provided by discrete program pins or by coded digital
 3936 configuration inputs, such as a configuration data base or Airplane Personality
 3937 Module (APM). Discrete program pins are defined in Attachment 2-3.

3938 5.4 FMC/FMC Intersystem Communications

3939 FMC-to-FMC intersystem communications are not defined in this document. The
 3940 formats and data content should be optimized by the system implementer to support
 3941 system synchronization, including, but not limited to, the following:

3942 Navigation Cross Check – used to monitor independent navigation calculation and
 3943 improve the integrity of the navigation solution.

3944 Data Entry Transfer – used to ensure that data entries and selections are reflected
 3945 in all FMCs.

3946 Radio Tuning Coordination – used to ensure that each FMC tunes a different set of
 3947 radio sensors (if possible) to ensure navigation independence.

3948 Status Information – used to synchronize mode of operation such as phase of flight,
 3949 active flight plan leg, navigation status and other events.

3950 Sensor Data – used to transfer data from some inputs, cross check discretes,
 3951 confirm sensor faults, etc.

3952 Crossloading of data bases and software - intersystem communications can be
 3953 utilized to facilitate data loading in a dual FMS installation.

3954 5.5 Ethernet Interface (ARINC 646)

3955 Two ARINC 646 Ethernet interfaces are provided for dual interface capability to
 3956 peripheral devices such as ARINC 615A data loader, ARINC 744A printer, and
 3957 ARINC 758 CMU. This should not be confused with ARINC 664 Ethernet operating
 3958 in a switched network topology (typical).

3959

6.0 CONTROL DISPLAY UNIT INTERFACE3960 **6.0 CONTROL DISPLAY UNIT INTERFACE**3961 **6.1 General**

3962 The Control Display Unit (CDU) design should be a Multi-Purpose Control and
3963 Display Unit (MCDU) in accordance with ARINC 739 or ARINC 739A.

3964 **COMMENTARY**

3965 It is expected that the MCDU installed in this configuration will
3966 provide a shared control and display resource used by both the FMC
3967 and the data link management unit. This is especially true where ATC
3968 data link communications are used. Depending on the chosen
3969 architecture for ATS Datalink (see Section 4.3.7), an ARINC 739A
3970 MCDU one key access to the Communications Management Unit
3971 (CMU) may be required as opposed to the standard log-on/log-off
3972 menu style selection.

3973 **6.2 Standby Navigation**

3974 In order to initialize the MCDU flight plan for standby navigation, the FMC should
3975 provide the MCDU with an ordered list defining the current active flight plan legs.
3976 Any leg whose type is not compatible with the MCDU flight plan, as described in
3977 ARINC 739, should be replaced with a flight plan discontinuity. This initialization
3978 should occur as required to ensure the MCDU has current data at the time of
3979 transition to standby navigation.

3980 **6.3 Self-Test**

3981 The MCDU may include a pilot confidence test, initiated by a control on the MCDU,
3982 which will provide a visual indication that the display and any status annunciators
3983 are operating correctly. This test should in no way affect the on-line performance,
3984 navigation and guidance computations, or the FMC interfaces.

3985 **6.4 MCDU Annunciators**

3986 The ARINC 739 MCDU may have several annunciator lights located on the unit
3987 front panel. The purpose of these annunciators is to alert the pilot's attention for
3988 possible required action. Specific annunciator definitions and associated logic is
3989 installation dependent and is not defined in this document; however, typical
3990 annunciator usage may include the following:

- 3991 • MSG (Message) – illuminates when FMC generated messages are
3992 displayed in the MCDU scratchpad
- 3993 • DSPY (Display) – illuminates when the current display is not related to the
3994 active flight plan leg or the currently operational performance mode
- 3995 • FAIL – illuminates in case of selected FMC failure
- 3996 • OFST (Offset) – illuminates when a parallel offset is in use
- 3997 • IND (Independent) – illuminates in case of independent dual system
3998 operation
- 3999 • MENU – illuminates when the FMC is the active subsystem and a non-active
4000 subsystem requests MCDU access

4001 **6.5 MCDU Alerting**

4002 The MCDU may display a number of messages on the bottom line of the display
4003 known as the scratchpad. These messages may be of several types, indicating

6.0 CONTROL DISPLAY UNIT INTERFACE

4004 different priorities or originating conditions. Specific message definitions, classes,
4005 and display logic are dependent on overall flight deck display/annunciation design
4006 and operational philosophy, and are not specified in this document. The following
4007 paragraphs provide a description of typical message classes and logic design
4008 considerations.

4009 High priority messages, referred to as Alerting or Type I messages, are typically
4010 displayed in response to a significant status change or operational condition of the
4011 system. Lower priority messages may be referred to as Advisory, Type II, or Entry
4012 Error messages, and usually indicate a condition of lesser importance, or prompt
4013 the pilot to enter required data or correct a previous entry through the MCDU.

4014 Considerations for design of MCDU alerting include the following:

- 4015 • Priority of scratch pad messages over other classes of messages and
4016 MCDU scratchpad alpha-numeric data entries
- 4017 • Relationship of scratchpad messages to EFIS messages or other dedicated
4018 annunciators in the pilot's forward field of view
- 4019 • Message clearing logic. Messages may be cleared by keyboard action, or
4020 automatically by a change in system status
- 4021 • Inhibition of MCDU messages during critical flight phases
- 4022 • Stack operation of multiple messages

4023 **6.6 MCDU Color and Font Usage**

4024 The MCDU may utilize variation in display color and character font size to convey
4025 additional information to the flight crew. Designers should consider priority of the
4026 displayed information and consistency with color usage on other display devices in
4027 defining MCDU color usage standards. Character font size may be used to indicate
4028 data attributes such as computed versus pilot-entered data.

4029

4030

7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE

4031 7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE

4032 7.1 Introduction

4033 The navigation data base stored in the ARINC 702A Advanced Flight Management
4034 Computer may, together with computed guidance data, be used to support the
4035 operation of a map display on an electronic horizontal situation indicator or other
4036 electronic display in the cockpit. This section of this Characteristic describes
4037 interface standards which will enable any manufacturer's FMC to be used with any
4038 manufacturer's electronic display. The term Electronic Flight Instrument (EFI) will be
4039 used to describe such displays generically.

4040 7.2 FMC Outputs to EFI

4041 Two high-speed ARINC 429 data output ports are provided on the FMC for
4042 instrumentation supply. All of the map background and position updating (dynamic)
4043 data for two EFIS will be supplied from both of these ports. In an installation
4044 comprising one FMC and two EFIS, the FMC's #1 Instrumentation Output should be
4045 connected to the captain's EFI, and its #2 Instrumentation output to the first officer's
4046 EFI. A possible interconnection scheme in an installation comprising two FMCs and
4047 two EFIS is to connect the #1 output of FMC #1 and the #2 output of FMC #2 to the
4048 captain's EFI and the #1 output of the FMC #2 to the #2 output of FMC #1 to the
4049 first officer's EFI.

4050 COMMENTARY

4051 The foregoing data output arrangements permit one FMC to supply
4052 independently organized data to each of two EFIS. While the word
4053 formats of the individual data elements crossing the interface are not
4054 map scale dependent, the total number of data words needed to
4055 construct the map does vary with the map scale selected. The FMC
4056 can thus accommodate the generation of maps on both sides of the
4057 cockpit even when the captain and the first officer have selected
4058 different scales.

4059 7.3 FMC Inputs from EFI

4060 The FMC provides two low-speed ARINC 429 data input ports through which map
4061 mode, scale and symbol option selections are transferred from the EFIS to the
4062 FMC.

4063

4064 7.4 EFI Design Features

4065 The following EFI design features impact the design of the FMC/EFI interface.

4066 7.4.1 Map

4067 The EFI will generate a dynamic map positioned relative to the aircraft. The map
4068 may be oriented with respect to aircraft track or heading.

4069 7.4.2 Plan

4070 The EFI may also generate a north-oriented static map positioned relative to
4071 reference points selected at the FMC Multi-Purpose Control Display Unit (MCDU).
4072 This may be used by the flight crew to verify the correct insertion of flight plan
4073 waypoints and other data.

7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE

4074 **7.4.3 HSI Mode**

4075 The FMC/EFI interface may provide outputs of desired track (course), track angle
 4076 error, drift angle, and lateral and vertical deviations to support the generation of a
 4077 HSI (rose mode) type of display. If provided, the lateral and vertical deviation
 4078 outputs should support the use of variable sensitivities (full scale deflection) in
 4079 accordance with the requirements of RTCA/EUROCAE SC-181/WG-13 RNP
 4080 MASPS.

4081 **7.4.4 Map Scales**

4082 EFI map scales for map and plan modes will be a compatible subset of the ARINC
 4083 708A Weather Radar, which has selectable ranges, from 5 to 640 nautical miles of
 4084 look-ahead. Additional low range capability may be required for incorporation of
 4085 surface map display capability.

4086 **7.4.5 Map Projection**

4087 The EFI will transform earth coordinate data received from the FMC into flat plane
 4088 coordinates for the map display. The accuracy of this transformation will be such
 4089 that the EFI can be used as a primary instrument for guiding the aircraft along
 4090 geodesic and circular transition flight paths, and provide accurate registration of
 4091 planar weather radar data on the map display. The map projection method chosen
 4092 is expected to permit worldwide EFI usage without latitude restrictions.

4093 The EFI will also ensure that vector lines and conics which cross display editing
 4094 boundaries are correctly terminated to ensure a continuous and accurate
 4095 presentation on the display. The EFI will translate the map background to account
 4096 for aircraft motion between map background data block transmissions based on
 4097 aircraft position and angular data received from the FMC and other systems.

4098 **7.4.6 Option Selection**

4099 The EFI will provide for symbology option selections, including weather radar data
 4100 overlay on the map. These will allow the flight crew to declutter the map by
 4101 selectively removing different categories of data, e.g., Nav aids, Airfields,
 4102 Geographic Reference Points, Waypoint Definition Data, etc.

4103 **7.4.7 Symbol Repertoire**

4104 Each category of data shipped from the FMC for display on the EFI will call for a
 4105 distinctive symbol on the display. A list of potential data categories includes, but is
 4106 not necessarily limited to, the following:

- 4107 • Active flight plan path
- 4108 • Secondary flight plan path
- 4109 • Modified flight plan path
- 4110 • Altitude Intercepts
- 4111 • RTA symbology
- 4112 • Waypoints
- 4113 • Waypoint data (altitude, speed, time)
- 4114 • Origin and destination airports

7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE

- 4115 • FIR boundaries
- 4116 • Special reference points (T/C, T/D, S/C, energy circles)
- 4117 • Runway Data
- 4118 • Marker Beacons
- 4119 • Tuned Navaids
- 4120 • Navaids, including (co-Located VOR and TACAN (VORTAC), VOR, DME/
- 4121 TACAN (high altitude and low altitude)
- 4122 • VOR radials
- 4123 • Airports
- 4124 • Geographic reference points
- 4125 • Non-directional beacons
- 4126 • Navigation data (e.g., sensor positions)
- 4127 • Terrain/obstacle data (MSA, MEA, MORA)
- 4128 • Special use airspace

4129 The data available for display in a particular installation will depend on the
 4130 navigation data base content of the FMC. The above data categories fall into the
 4131 following general symbology types, each of which requires different data
 4132 parameters for definition via the FMC/EFI interface.

- 4133 • Vectors (geodesic lines)
- 4134 • Conics (circular arc lines)
- 4135 • Upright symbols
- 4136 • Rotated symbols
- 4137 • Dynamic symbols
- 4138 • Alpha/numeric data readouts

7.4.8 EFI Data Conditioning

4140 The EFI will perform any input data filtering needed to produce a smoothly changing
 4141 map display, and will condition data used to update readouts on the display.

7.4.9 Pointing Device

4143 [Deleted by Supplement 5]

7.4.10 Surface Map Mode

4145 [Deleted by Supplement 5]

7.5 FMC Design Features

4147 The following FMC design features impact the design of the FMC/EFI interface.

7.5.1 Flight Plans

4149 As part of its guidance function, the FMC will have flight plans assembled in its
 4150 guidance buffers by pilot data entry or data link and selection through the MCDU.
 4151 Such flight plans will define paths in the sky in two, three and ultimately four
 4152 dimensions. Accurate representation of aircraft position with respect to the flight
 4153 plan path is essential when the EFI is used as the primary instrument by which the

7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE

4154 flight crew controls the aircraft laterally and vertically with respect to a three-
4155 dimensional path, and along that path to make good assigned times at waypoints.

4156 Flight plan paths can be presented on the EFI as sequences of lines and conics
4157 representing geodesic paths between waypoints and curved transitions between
4158 path legs. Circular path legs consisting of DME arcs, RF legs, holding patterns, and
4159 procedure turns can also be displayed. The FMC generates the necessary data to
4160 define four-dimensional flight plans in its guidance buffers. The guidance algorithms
4161 in the FMC calculate the position, speed and time differences between the aircraft
4162 state vector and the flight plan, and hence generate the guidance commands to the
4163 automatic flight control system (including the auto-throttle) to make good the flight
4164 plan.

4165 The guidance data can be used to define the vector lines and conics needed to
4166 represent the flight plan path and other guidance symbology on the EFI.

4167 7.5.2 Map Display Edit Areas

4168 The FMC should, to the extent of the limitations imposed by the size of the data
4169 block (see Section 7.6.2), supply map background data for an area large enough to
4170 preclude the appearance of blank screen between transmissions. The EFI will limit
4171 the data displayed to that needed for the viewing window. This limit operation will
4172 include vector clipping to ensure the correct display of vector data and associated
4173 text.

4174 7.5.3 Pointing Device

4175 [Deleted by Supplement 5]

4176 7.6 Interface Design

4177 The design of the FMC/EFI interface is described in the following paragraphs.

4178 7.6.1 General

4179 Map background data and position updating and other dynamic data should be
4180 interleaved on the FMC instrumentation output buses. The FMC should specify the
4181 data type to be displayed and the associated positioning and rotation data. The EFI
4182 will control symbology color, size, brightness, blinking and related parameters, and
4183 transform map position data received from the FMC into screen coordinates.

4184 The FMC should extract the information necessary for the map background from its
4185 navigation data base and flight plan buffers. Position data transmitted to the EFI
4186 should be in latitude and longitude coordinates. The types of data transmitted
4187 should respond to mode symbology options and display range selected by the flight
4188 crew on the EFI control panel. The order of the data on the bus should be in general
4189 accordance with the priority in which it is to be displayed.

4190 The FMC/EFI dynamic data interface should be designed to permit updating of the
4191 map background data positions between background data block transmissions
4192 without the need for a hand-shaking relationship between the FMC and the EFI
4193 symbol generator. FMC/EFI dynamic data is defined in Attachment 4.

4194 The FMC/EFI interface design and map background and dynamic data bus
4195 implementation should be such that the EFI can provide a valid map display if map
4196 background data transmissions are lost or invalid for periods of up to 10 seconds
4197 duration.

7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE

4198 The display mechanization should accommodate a worldwide map projection. This
 4199 may result in the need to provide additional and/or special software to project map
 4200 data in the vicinity of the earth's poles.

4201 7.6.2 Map Data Updating

4202 The FMC should supply map data to the EFI in alternating 64-word blocks of
 4203 background and dynamic data until a complete map background data block has
 4204 been transmitted (see Attachment 6, Figure 2). The maximum size of the
 4205 background data block should be programmable up to a maximum of 1023 words.
 4206 After completion of the map background data transmission, the dynamic data
 4207 should continue to be updated at a rate of 20 times per second (nominal) until a
 4208 new map background data block is to be transmitted. Map background data should
 4209 be updated and transmitted once every three seconds (nominal), except that when
 4210 a mode, scale or option change is made on the EFI, the FMC should update and
 4211 transmit new map background data within one second (maximum).

4212 COMMENTARY

4213 Dynamic data update at a rate greater than 16 times per second is
 4214 needed to avoid undesirable visual effects on the display.

4215 7.6.3 Background Data Prioritizing

4216 To ensure that writing time or other internal data processing limitations in the EFI do
 4217 not result in most wanted map background data not appearing on the display, the
 4218 FMC should prioritize the information as follows. The EFI should truncate the data, if
 4219 necessary, in the reverse order of this prioritization.

- 4220 1. Flight plan data
 - 4221 a. Active flight plan
 - 4222 b. Secondary flight plan
 - 4223 c. Flight plan changes
 - 4224 d. Waypoints
 - 4225 e. Waypoint data
 - 4226 f. Offsets
 - 4227 g. Altitude intercepts
 - 4228 h. Flight plan events
 - 4229 i. RTA symbology
- 4230 2. Selected reference points
- 4231 3. Runway Data (may be edited out in some flight phases but should not
 4232 disappear because of truncation of the data stream)
- 4233 4. Origin and destination airports
- 4234 5. Tuned nav aids
- 4235 6. Navigation data (may be dynamic rather than background)

7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE

- 4236 7. Non flight plan nav aids
- 4237 8. General reference points (position ordered)

4238 **7.6.4 Background Data Editing**

4239 An example of the background data editing process is shown in Attachment 6,
4240 Figure 1. The FMC should, as a minimum, transmit data for the displayed area plus
4241 the area which could appear on the display as a result of aircraft translation and
4242 rotation between map background data updates.

4243 Because the density of data needed for terminal operations could saturate the
4244 display at the higher map scales and the volume of data within the edit area
4245 overload the EFI symbol generator buffers, the FMC should determine the amount
4246 of data it supplies to the EFI from an analysis of the map scale and mode selection
4247 information it receives from the EFI.

4248 Typically, the high map scales are used in cruise and the low map scales are used
4249 for terminal area operations. Therefore, only high altitude chart data need be
4250 transferred across the interface for the larger map scales.

4251 **7.6.5 Mode Change Response**

4252 The FMC should respond to a mode, scale or symbology option selection change
4253 received from the EFI such that the desired data transmission occurs within one
4254 second maximum.

4255 **COMMENTARY**

4256 Airlines desire the overall (FMC and EFI) response time of a practical
4257 system to be less than two seconds.

4258 **7.6.6 Map Translation and Rotation Data**

4259 The FMC should provide the following data to the EFI to support map projection and
4260 rotation functions:

4261 Map Projection

4262 Map background data

- 4263 • Map reference latitude (plan mode only)
- 4264 • Map reference longitude (plan mode only)
- 4265 • Map mode/scale

4266 Map Position Data

- 4267 • Aircraft present latitude
- 4268 • Aircraft present longitude

4269 Map Rotation

4270 Map Position Data

- 4271 • Track (true)
- 4272 • Track (magnetic)

4273

7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE**4274 7.6.7 Resolution**

4275 The resolution of data used to position symbology on the display should be such
4276 that a change of binary state of the least significant bit of a position data word
4277 produces no visible step movement on the display.

4278 7.6.8 Interface Data Errors

4279 The mechanization of the FMC/EFI interface should minimize the visual effects on
4280 the map display of occasional data errors.

4281 7.6.9 FMC-to-EFI Data Transfer Protocol

4282 Because the FMC/EFI interface is dedicated to the transfer of data between the
4283 FMC and the EFI symbol generator(s), not all of the formatting and protocol
4284 standards of ARINC Specification 429: Digital Information Transfer System (DITS)
4285 will be applied. The following sections indicate where these departures from ARINC
4286 429 have been made. Although not mentioned hereafter, the electrical and timing
4287 standards set forth in ARINC 429 for high-speed operation (100 kbps) and the
4288 standard broadcast protocol do apply.

4289 7.6.9.1 Data Block Format

4290 The first word of each 64-word data block should be a Start of Transmission word
4291 containing octal code 301 in its label field (bits 1 through 8) if the block contains
4292 map background data and octal code 303 in this field if the block contains dynamic
4293 data. Bits 9 through 13 of each map background data block Start of Transmission
4294 word should contain a binary number indicating the position of the block in the
4295 sequence of such blocks into which the transmission is divided. In addition, the first
4296 such Start of Transmission word of a transmission should contain in bits 20 through
4297 29 a binary count of the total number of usable background data words to be
4298 contained in the transmission. (This count should not include Start of Transmission,
4299 End of Transmission, or fill-in words.) This field should contain binary zeros in all
4300 subsequent background data block Start of Transmission words of the transmission.
4301 All background data block Start of Transmission words should contain binary zeros
4302 in bits 14 through 19, while bits 30 and 31 should contain the control word code
4303 defined in Section 7.6.9.2 and bit 32 should be set to render word parity odd.

4304 The Start of Transmission word of each dynamic data block should contain binary
4305 zeros in bits 9 through 29 and the control word code defined in Section 7.6.9.2 in
4306 bits 30 and 31. Bit 32 should be set to render word parity odd.

4307 The last word of each 64-word map background data block should be an End of
4308 Transmission word containing octal code 302 in its label field. Bits 9 through 29 of
4309 this word should contain binary zeros. Bits 30 and 31 should contain the control
4310 word code defined in Section 7.6.9.2 and bit 32 should be set to render word parity
4311 odd.

4312 The 62 usable data words of each map background data block should contain the
4313 positional, character, and control information used by the EFI to construct the map
4314 background. The label codes and word formats defined in Attachment 6 to this
4315 document should be used. Bits 30 and 31 should be encoded to indicate word type
4316 per Section 7.6.9.2 and bit 32 should be set to render word parity odd. If the final
4317 block of the transmission contains less than 62 useful words, it should be padded to
4318 this length with fill-in words (binary zeros in bit positions 1 through 32) and
4319 terminated with the End of Transmission word at position 64.

7.0 ELECTRONIC FLIGHT INSTRUMENT SYSTEM INTERFACE

4320 Dynamic data blocks should be interleaved with map background data blocks as
 4321 described in Section 7.6.2. Dynamic data blocks should contain data words labeled
 4322 and formatted per ARINC Specification 429.

COMMENTARY

4324 The interleaving on the same bus of blocks of data labeled per
 4325 ARINC 429 standards and blocks of data labeled per other standards
 4326 requires the EFI to be capable of changing from one set of standards
 4327 to the other at appropriate instants during the data transmissions.
 4328 The EFI is expected to make use of the two Start of Transmission
 4329 words and the background data block End of Transmission word in
 4330 deciding when to make these changes.

7.6.9.2 Data Type Word Formats

4331 The general word format defined in ARINC Specification 429 should be employed.
 4332 Words transmitted by the FMC for which standards are defined in ARINC 429
 4333 should employ those standards and their ARINC 429 labels. Formats of symbol
 4334 word groups, vector word groups, map reference word groups, and dynamic symbol
 4335 words should differ from ARINC 429 standards in that the label field should be used
 4336 to encode data type and the sign/status matrix to designate multiple word records
 4337 within a data type group as follows:
 4338

BIT		WORD DESCRIPTION
31	30	
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control words (symbol rotation and vector conics)
1	0	Last word of data type group

4339 Attachment 6 to this document sets forth the formats of these FMC-specific ARINC
 4340 429 words.

7.6.10 EFI-to-FMC Data Transfer

4342 The data sent from the EFI to the FMC will consist of the map mode, scale and
 4343 symbol option selections made by the flight crew at the EFI control panel. These
 4344 selections will be encoded into one or more discrete words, as defined in ARINC
 4345 Specification 429, Part 2 and in ARINC Characteristic 725: Electronic Flight
 4346 Instruments (EFI).
 4347

8.0 COMMUNICATIONS MANAGEMENT UNIT INTERFACE

4348 **8.0 COMMUNICATIONS MANAGEMENT UNIT INTERFACE**

4349 **8.1 General**

4350 The Communications Management Unit (CMU) interface is defined in ARINC
4351 Characteristic 758: Communications Management Unit (CMU) Mark 2. Specific
4352 details are implementation dependent.

4353

9.0 DATA BASE STORAGE CONSIDERATIONS

4354 9.0 DATA BASE STORAGE CONSIDERATIONS

4355 9.1 Introduction

4356 The FMC will contain a number of data bases and configuration tables which
 4357 provide the data and definitions required to support the functions defined in Section
 4358 4. The data bases are stored in non-volatile memory and may be periodically
 4359 updated or modified via the data loader. The individual data bases should be
 4360 separately loadable. Designers should provide significant growth capacity when
 4361 sizing data base memory storage. Mechanisms should be provided to ensure the
 4362 integrity of the stored data such that the data cannot be modified by the crew or
 4363 system.

4364 9.2 Navigation Data Base

4365 The navigation data base is stored in non-volatile memory in two parts: a body of
 4366 active permanent data which is effective until a specified expiration date and a set
 4367 of data revisions or active data for the next period of effectivity. The effectivity dates
 4368 for both sets of data are displayed for reference on the system's configuration
 4369 definition page. Data base updates are to be accomplished at appropriate intervals
 4370 by loading the next cycle via means of a data base loader.

4371 The navigation data base contains all current information required for operation in a
 4372 specified geographic area. The data base should be consistent with the
 4373 requirements of **RTCA DO-201A: Standards for Aeronautical Data**. It includes the
 4374 following data:

- 4375 • VOR, ILS, DME, VORTAC, and TACAN navigation aids
- 4376 • NDBs
- 4377 • Waypoints
- 4378 • Airports and runways
- 4379 • Standard Instrument Departures (SIDs)
- 4380 • Standard Terminal Arrival Routes (STARs)
- 4381 • Enroute airways
- 4382 • Charted holding patterns
- 4383 • Approaches (GNSS, ILS, VOR, NDB, LOC, LDA, etc., types)
- 4384 • Approach and departure transitions
- 4385 • Final Approach Segment (FAS) Data Block (for LP/LPV approaches)
- 4386 • Company route structure
- 4387 • Terminal gates
- 4388 • Alternates
- 4389 • Minimum Safe Altitude (MSA)
- 4390 • Minimum Enroute IFR Altitude (MEA)
- 4391 • Minimum Obstruction Clearance Altitude (MOCA)
- 4392 • Grid Minimum Off-Route Altitudes (MORAs)
- 4393 • FIR/Upper Flight Information Region (UIR) Boundaries
- 4394 • Special Use Airspace
- 4395 • Effectivity dates

9.0 DATA BASE STORAGE CONSIDERATIONS

- 4396 • Airline customized data
- 4397 • RNP

4398 The data base is capable of supplying all of the information required for the
 4399 assembly of a complete flight plan for the selected route via MCDU data entry and
 4400 selection.

4401 9.3 Airline Modifiable Information (AMI) Data Base

4402 The Airline Modifiable Information data base is capable of defining those items
 4403 which may be individually selectable by the airline operator. These may include the
 4404 following:

- 4405 • Performance management options
- 4406 • Airport speed restrictions
- 4407 • AOC data link parameters
- 4408 • Tailorable CDU page formats
- 4409 • Flight test bus definitions

4410 The Airline Modifiable Information may also contain: special operations information,
 4411 trigger events, special airline specific messages, and/or parameters.

4412 9.4 Performance Data Base

4413 The performance data base will contain the data necessary to allow the FMS to
 4414 provide the vertical trajectory predictions (Section 4.3.3.2.1), performance
 4415 calculations (Section 4.3.4), and vertical guidance (Section 4.3.3.2.2) functions. The
 4416 data will consist of tables, coefficient for polynomials or any other convenient means
 4417 of representing the data, but will not include any executable code. The data
 4418 contained in the Performance Data base may include elements of the following:

- 4419 • Aerodynamic Data
 - 4420 ○ Drag polars (clean and high-lift)
 - 4421 ○ Reynolds number drag correction
 - 4422 ○ Compressibility drag
 - 4423 ○ Trim drag (clean and high-lift)
 - 4424 ○ Windmill drag
 - 4425 ○ Spoiler/speed brake drag
 - 4426 ○ Buffet onset mach number/lift coefficients
 - 4427 ○ Stall speeds (clean and high-lift)
 - 4428 ○ Bank angle limits
- 4429 • Propulsion Data
 - 4430 ○ Data to compute each thrust limit (Takeoff, Max Continuous, Max Cruise)
 - 4431 ○ Data to compute de-rate and flex take-off rating
 - 4432 ○ Bleed effects
 - 4433 ○ Idle thrust setting
 - 4434 ○ Relationship between thrust, fuel flow, ram drag and thrust setting
 4435 parameter (EPR or N1)
- 4436 • Performance Data
 - 4437 ○ Economy climb speed data (all-engine and one engine inoperative)

9.0 DATA BASE STORAGE CONSIDERATIONS

- 4438 ○ Economy cruise speed data (all-engine and one engine inoperative)
- 4439 ○ Economy descent speed data (all-engine and one engine inoperative)
- 4440 ○ Drift-down speed data
- 4441 ○ Hold speed data
- 4442 ○ Maximum endurance speed data
- 4443 ○ Long Range Cruise (LRC) speed data
- 4444 ○ Maximum angle climb speed data
- 4445 ○ Maximum rate of climb speed data
- 4446 ○ Flap/slat/gear placard speeds
- 4447 ○ Maximum altitude (all engine and one engine inoperative)
- 4448 ○ Take-off time, fuel, distance data
- 4449 ○ Go-around time, fuel, distance data
- 4450 ○ Alternate flight plan time, fuel, distance data
- 4451 ○ Optimum altitude/optimum step weight data
- 4452 ○ Relationship between fuel weight/C.G.
- 4453 ● Take-off/approach data
 - 4454 ○ Data to compute V1, VR, and V2
 - 4455 ○ Approach speed data
 - 4456 ○ Climb-out speed data

4457 This is not an all-inclusive list. Some of the data in the list may not be applicable to
 4458 a specific airplane/system and some additional data may be necessary in some
 4459 applications, particularly as additional capability is added to the system. The format
 4460 of the data is not specified in this document, but manufacturers are encouraged to
 4461 use a standard format that will allow use of the FMS across multiple airplane types.

4462 Data for the Performance data base is developed from data supplied by the airplane
 4463 manufacturer, and may include off-line data reduction and modeling before loading
 4464 into the FMS. It should be consistent with the data contained in that airplane's
 4465 Airplane Flight Manual (AFM) and Flight Crew Operations Manual (FCOM).

4466 The data base should contain sufficient data to allow identification of its part number
 4467 and to which airplane model(s) it is applicable. Loading and use of the data in the
 4468 FMS should include positive means of verifying that the appropriate data has been
 4469 loaded, and that data pertaining to a particular model airplane is not being used on
 4470 an airplane to which it does not apply.

4471 A particular data base may contain data for more than one airplane model. In this
 4472 case, positive means to preclude the wrong data being used should be provided.

4473 **9.5 Magnetic Variation Data Base**

4474 The magnetic variation data base will support the determination of magnetic
 4475 variation for any Lat/Long, Navaid, Waypoint, Airport, etc. The format of the data
 4476 stored in this data base is a manufacturer option, but should be flexible to
 4477 accommodate periodic update of the magnetic variation data reference.

COMMENTARY

4478
 4479 The use of current MagVar throughout the flight deck is desired to
 4480 minimize confusion. However, for those aircraft configurations which

9.0 DATA BASE STORAGE CONSIDERATIONS

4481 cannot be updated, system designers should give consideration to
4482 providing a means to harmonize MagVar tables with other aircraft
4483 equipment, such as the inertial reference system, to provide a
4484 consistent display of magnetic bearings in the flight deck.

4485

4486 **9.6 Terrain and Obstacle Data**

4487 [Deleted by Supplement 5].

4488

9.0 DATA BASE STORAGE CONSIDERATIONS

4489 **9.7 Airport Surface Map Data**

4490 [Deleted by Supplement 5].

4491

4492 **9.8 Configuration Data Base**

4493 The configuration data base defines parameters specific to an individual system
4494 application or installation.

4495

COMMENTARY

4496 These items are type certification driven. Changes to these items will
4497 require re-certification.

4498 These items may include the following:

- 4499 • Tables containing ATS data link parameters
- 4500 • Transport and network protocols
- 4501 • FMS configuration
- 4502 • Available functional options
- 4503 • Interface variations
- 4504 • CMU specific configuration variations
- 4505 • Optional maintenance configurations
- 4506 • Weight variants definitions

4507

4508

10.0 BUILT-IN TEST AND MAINTENANCE PROVISIONS4509 **10.0 BUILT-IN TEST AND MAINTENANCE PROVISIONS**4510 **10.1 General Discussion**

4511 Since the FMC may be the primary means of navigation on some aircraft, the
 4512 utmost attention should be paid to the need for reliability and maintainability in all
 4513 phases of system design, production, and installation.

4514 **COMMENTARY**

4515 It is also important to remember that all aspects of the testing
 4516 program (BITE, ramp, and shop testing) contribute to the reliability
 4517 and profitable operation of a system by the end users. The ability of
 4518 the program to identify faults, and facilitate their repair, has a
 4519 profound affect on maintainability and overall reliability. Attention to a
 4520 close relationship between aircraft faults and shop testing will help in
 4521 reducing the number of unscheduled removals.

4522 **10.2 Fault Detection and Reporting**4523 **10.2.1 General**

4524 The FMC should support at least one of the following Built-In Test Equipment
 4525 (BITE) capabilities defined by AEEC:

- 4526 • **ARINC Report 624:** Design Guidance for Onboard Maintenance System
- 4527 • **ARINC Report 604:** Guidance for Design and Use of Built-In Test
 4528 Equipment

4529 MCDU maintenance pages should contain a fault log formatted in accordance with
 4530 ARINC Report 624 or ARINC 604. This maintenance log should be able to be
 4531 printed on the cockpit printer via selection on the MCDU.

4532 **COMMENTARY**

4533 The option used should be compatible with the aircraft in which the
 4534 FMC will be installed.

4535 BITE in the FMC should be capable of detecting at least 95% of the faults or failures
 4536 which can occur within the FMS, and as many faults as possible associated with
 4537 other interfaces.

4538 Where possible, optional functions present in the FMS that are not activated by the
 4539 operator should be excluded from all on-board testing. The intent is to eliminate
 4540 unnecessary removals.

4541 BITE should closely relate to bench testing. Error modes encountered on the aircraft
 4542 should be reproducible in the shop. Error messages recorded by BITE should assist
 4543 bench testing.

4544 No failure occurring in the BITE subsystem should interfere with the normal
 4545 operation of the FMC.

4546 **10.2.2 Self-Monitoring**

4547 The self-contained fault detection should incorporate nonvolatile memory and logic
 4548 to identify true hardware faults based on the historical trends. This includes a flight
 4549 hour monitor as well as air-ground logic to monitor installed time on the aircraft.

4550

10.0 BUILT-IN TEST AND MAINTENANCE PROVISIONS4551 **10.2.3 Debugging Tools**

4552 FMC complexity is such that it may sometimes exhibit operational anomalies for
 4553 which the root cause(s) are difficult to identify. To provide for quick in-service
 4554 observation/evaluation of the FMC software anomalies, the FMC should provide
 4555 password accessible MCDU pages for BITE, view latched fail code(s), memory
 4556 contents, etc. This feature would be usable by supplier/operator engineers as a
 4557 debugging tool. Access to these pages should be categorized and leveled for line
 4558 maintenance or engineering use, as appropriate. This should be a certified
 4559 configuration so as to allow engineering evaluations in-flight during revenue
 4560 operations of the system.

4561 **10.2.4 Failure Rate Monitor**

4562 Reasonable failure rate thresholds for some significant faults should be
 4563 incorporated such that the FMC would optionally set a flag when these thresholds
 4564 are exceeded.

COMMENTARY

4565
 4566 Some hardware faults that would be reset during a ground check or
 4567 power interruption may not be repeated immediately. This condition
 4568 may allow the unit to remain on board the aircraft. A threshold
 4569 exceedance monitor would detect and set the flag when one of these
 4570 transient faults exceeds an acceptable rate of occurrence. Some
 4571 airlines may choose to deactivate such a monitor.

4572 **10.2.5 Fault Messaging**

4573 The FMC will have a go/no-go light or indicator indicating overall unit performance
 4574 ability. BITE fault messages (MCDU display, code lights or otherwise) will be as
 4575 descriptive as possible (English language fault descriptions). When an external or
 4576 internal fault occurs, the FMC will alert maintenance personnel to the status of the
 4577 specific system components, either as a displayed list, or on request.

4578 System faults should be classified based on their effect on the system as
 4579 debilitating or non-debilitating. Fault displays should also indicate the most probable
 4580 correction of the problem.

4581 A system debilitating failure is any non-recoverable failure which prohibits the FMC
 4582 from performing any basic required function: navigation, performance computations,
 4583 flight planning, etc. Cockpit and/or LRU failure annunciation is provided for a system
 4584 debilitating failure. A system debilitating failure will be logged in BITE memory. If
 4585 recoverable, crew action may be necessary.

4586 A non-system-debilitating failure is any BITE-detected failure which is auto-
 4587 recoverable within specified/acceptable operational limitations (of short duration and
 4588 requiring no crew action for recovery) and which has no adverse impact on the
 4589 required functions of the FMC. A non-system-debilitating failure will be logged in
 4590 BITE memory, but need not be cockpit and/or LRU annunciated.

4591 **10.3 Ramp Maintenance**4592 **10.3.1 Return to Service Testing**

4593 When an FMC is installed on an air transport aircraft, some form of end to end
 4594 testing should be available for two primary reasons:

10.0 BUILT-IN TEST AND MAINTENANCE PROVISIONS

- 4595
- 4596
- 4597
- 4598
- To provide an operational verification of the system function prior to return to service.
 - To reduce unnecessary removals of the FMC when the fault was actually in another part of the system.

4599

4600

4601

4602

4603

4604

As an end-to-end test, the procedure should verify integrity of the LRU as well as interfaces with other systems. This maintenance test will provide test values on the digital outputs with the appropriate status matrix code for the test condition as defined in ARINC Specification 429. This test can also exercise internal monitoring and diagnostic routines and provide test formats on the MCDU and on a multifunction display.

COMMENTARY

4605

4606

4607

4608

4609

The airlines prefer test results to indicate the probable cause of failure. Emphasis on end to end system testing will lead to a desirable increase in the MTBUR, especially for removals that were not related to LRU faults.

4610

4611

4612

4613

4614

Means should be provided for initiating this maintenance test either through an externally supplied discrete input or an MCDU prompt. The FMC may also have the capability, via a switch on the front of the FMC, for initiating the maintenance test. If this switch is provided, an indicator should also be mounted on the FMC front panel to show the result of the test.

10.3.2 Programmable Data Bus Interface

4615

4616

4617

4618

4619

The system should provide output data to be recorded for analysis of system performance, including in-service operation. A list of available parameters, scaling, and label assignments should be determined by the manufacturer and made available for selection by the aircraft operator as required.

10.3.3 Data Loading

4620

4621

4622

4623

4624

4625

4626

4627

It is expected that operational software (manufacturer and airline controlled software or tables) and data bases (e.g., navigation data, performance data) will be on-board loadable. The FMC should accept this data from a data loader in accordance with ARINC 615 or ARINC 615A. The standard interface from the data loader to the FMC is high-speed ARINC 429. The return interface to the data loader is low-speed ARINC 429. The FMC should also support high-speed data loading via Ethernet interface defined in ARINC 615A.

COMMENTARY

4628

4629

4630

It is recognized that some minimal level of boot software must be non-loadable to provide the basic loading interface.

4631

4632

4633

The FMC should provide compatibility testing to ensure that loadable software and data are compatible with the FMC hardware configuration. Mechanisms should be provided to ensure the integrity of the loaded data.

10.3.4 Cross Loadable Software

4634

4635

4636

All loadable software and data bases should be selectively cross loadable between two FMCs in a dual installation via the intersystem bus.

10.0 BUILT-IN TEST AND MAINTENANCE PROVISIONS

4637

COMMENTARY

4638 The objective of the cross loading capability is to reduce loading
4639 times. Since mixed cases of cross loadable and non-cross loadable
4640 software present many problems, operators prefer that all of the
4641 software be cross loadable.

4642 **10.3.5 Data Loading Fault Recovery**

4643 In all cases, when loading or cross loading software or data, the procedure must
4644 provide a method for recovering from faults. The FMC should be able to abort a
4645 software or data base loading process without a major disruption of the system
4646 (disruption requiring removal of the FMC from the aircraft).

4647 **10.4 Provisions for Automatic Test Equipment**

4648 **10.4.1 General**

4649 To enable Automatic Test Equipment (ATE) to be used in the bench maintenance,
4650 internal circuit functions not available at the unit service connector and considered
4651 by the equipment manufacturer necessary for automatic test purposes may be
4652 brought to pins on an auxiliary connector of a type selected by the equipment
4653 manufacturer. This connector should be fitted an adequate number of contacts
4654 needed to support the ATE functions. The connector should be provided with a
4655 protective cover suitable to protect these contacts from damage, contamination, etc.
4656 while the unit is installed in the aircraft. The manufacturer should observe ARINC
4657 Specification 600 for unit projections, etc., when choosing the location for this
4658 auxiliary connector.

4659 **10.4.2 ATE Testing**

4660 The FMC should be ATE testable and should have a test program written using the
4661 ATLAS language specified in **ARINC Specification 626: Standard ATLAS Subset
4662 for Modular Test**. Development of the test program set should consider and apply
4663 the quality characteristics set forth in ARINC Specification 625.

4664

COMMENTARY

4665 The airlines desire that the ATLAS test procedure be demonstrated to
4666 execute without modification on Automatic Test Systems defined in
4667 **ARINC Specification 608A: Automatic Test Equipment Standards**.


4668

ATTACHMENT 1
FLIGHT MANAGEMENT SYSTEM

4669 ATTACHMENT 1 FLIGHT MANAGEMENT SYSTEM

4670 CONFIGURATION 1 – SINGLE FMC INSTALLATION


4671 CONFIGURATION 2 – SINGLE FMC/DUAL CDU INSTALLATION

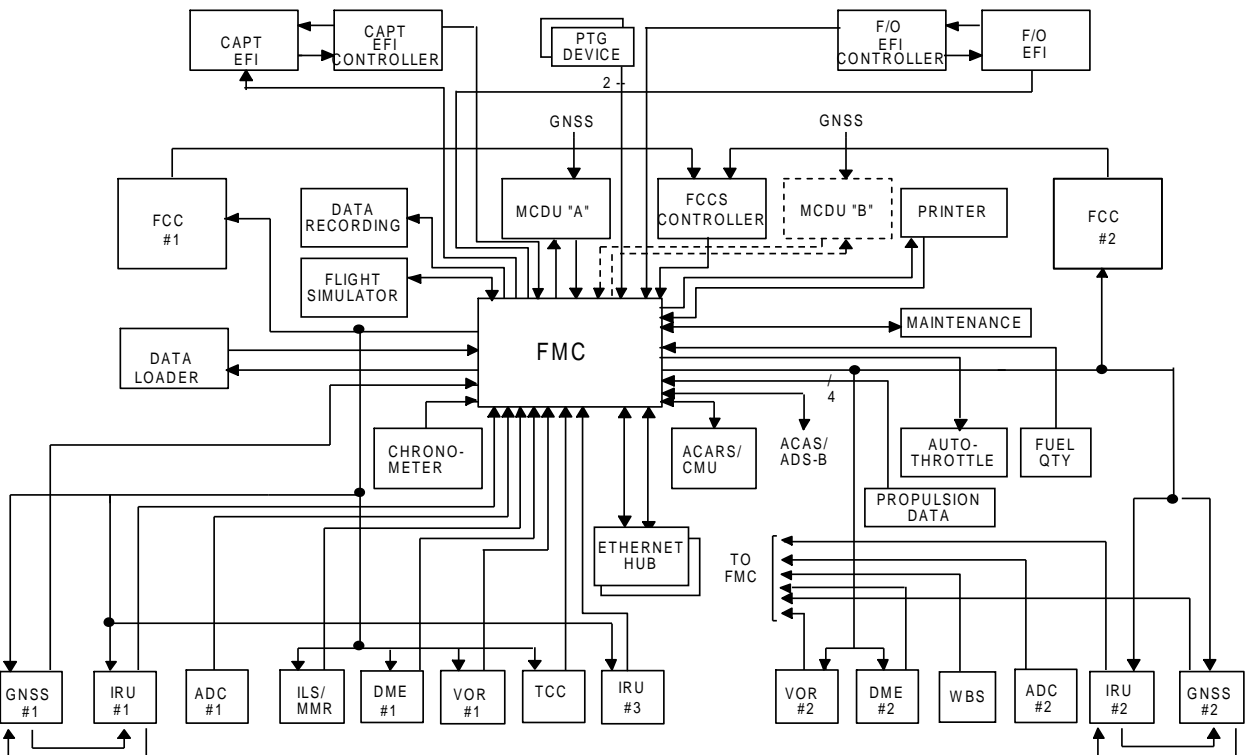

4672
4673

ATTACHMENT 1
FLIGHT MANAGEMENT SYSTEM

CONFIGURATION 3 – DUAL FMC CDU INSTALLATION

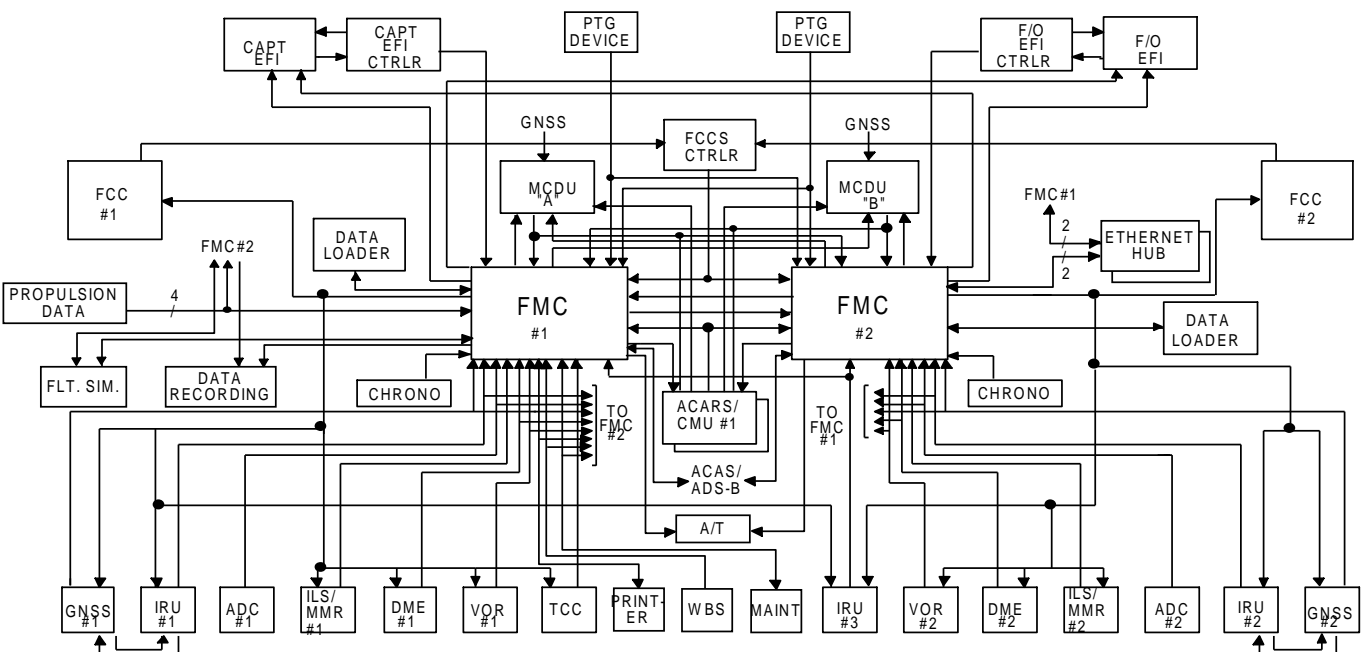


4674

4675

ATTACHMENT 2-2
STANDARD INTERWIRING

4676 ATTACHMENT 2 FMC CONNECTOR AND INTERWIRING

4677 ATTACHMENT 2-1 FMC CONNECTOR POSITIONING

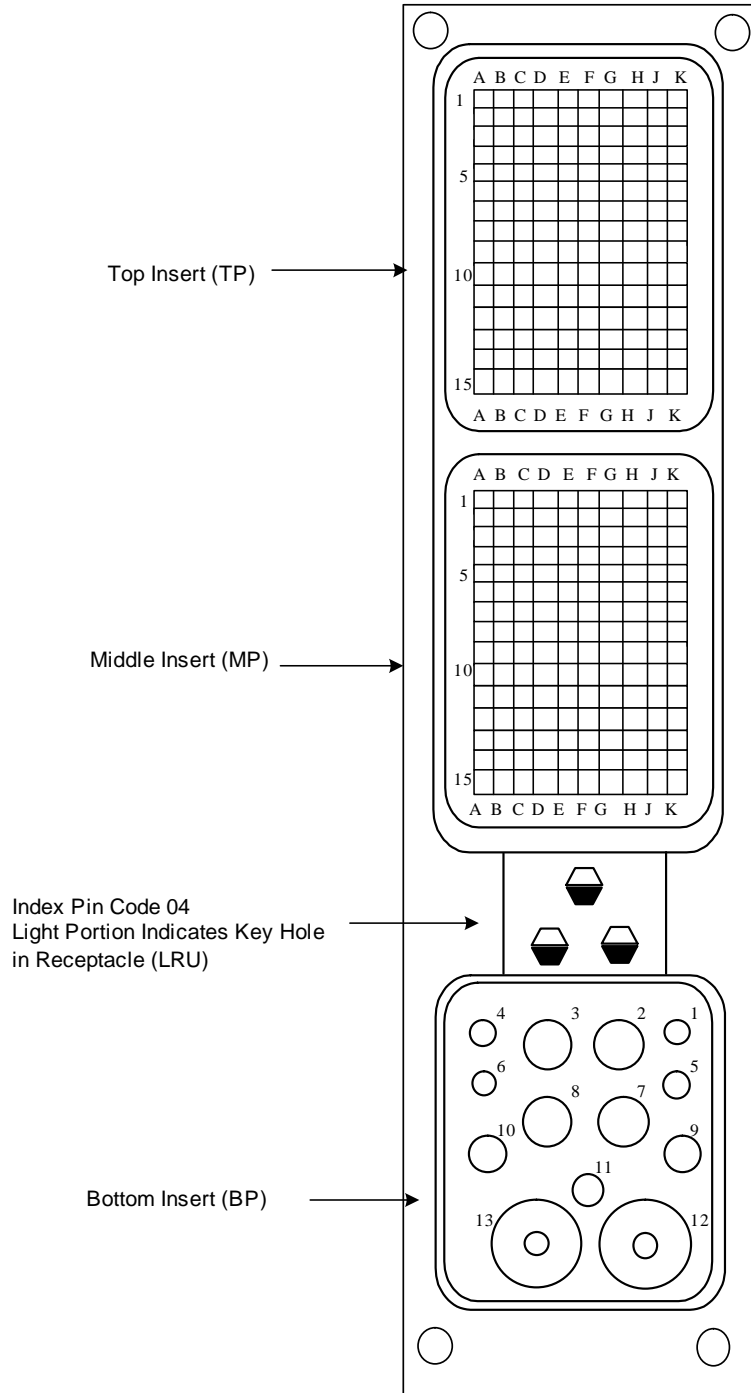

View From Rear of Connector

4678

4679

4680

ATTACHMENT 2-2
STANDARD INTERWIRING

4681

ATTACHMENT 2-2 STANDARD INTERWIRING

FUNCTION		FMC PIN	1	2	NOTES
ARINC 429 Input] A	TP1A	ARINC 711 VOR #1		
ARINC 429 Input		TP1B	ARINC 711 VOR #1		
Spare		TP1C			
ARINC 429 Input] A	TP1D	ARINC 709 DME #1		
ARINC 429 Input		TP1E	ARINC 709 DME #1		
Spare		TP1F			
ARINC 429 Input] A	TP1G	ARINC 710 ILS		
ARINC 429 Input		TP1H	ARINC 710 ILS		
Spare		TP1J			
Discrete Input		TP1K	Oleo Strut Switch		
ARINC 429 Output] A	TP2A	ARINC 758 CMU		
ARINC 429 Output		TP2B	ARINC 758 CMU		
Spare		TP2C			
ARINC 429 Output] A	TP2D	Trajectory Bus		
ARINC 429 Output		TP2E	Trajectory Bus		
Spare		TP2F			
ARINC 429 Output] A	TP2G	Spare		
ARINC 429 Output		TP2H	Spare		
Spare		TP2J			
Spare		TP2K			
ARINC 429 Input] A	TP3A	ARINC 704A IRS		
ARINC 429 Input		TP3B	or ARINC 705 AHRS #1		
Spare		TP3C			
ARINC 429 Input] A	TP3D	ARINC 743A/755 GNSS #1		
ARINC 429 Input		TP3E	ARINC 743A/755 GNSS #1		
Spare		TP3F			
ARINC 429 Input] A	TP3G	ARINC 737 Weight and Balance System		
ARINC 429 Input		TP3H	ARINC 737 Weight and Balance System		
Spare		TP3J			
Discrete Input		TP3K	Self Test Switch		
Spare		TP4A			
Spare		TP4B			
Spare		TP4C			
ARINC 429 Output] A	TP4D	Spare		
ARINC 429 Output		TP4E	Spare		
Spare		TP4F			
ARINC 429 Input] A	TP4G	ARINC 762 TAWS		
ARINC 429 Input		TP4H	ARINC 762 TAWS		
Spare		TP4J			
Discrete Input		TP4K	Mag/True Input #1		
ARINC 429 Input] A	TP5A	EFI Data Source #1		
ARINC 429 Input		TP5B	EFI Data Source #1		
Spare		TP5C			
ARINC 429 Input] A	TP5D	ARINC 611 Fuel Quantity Data Source		
ARINC 429 Input		TP5E	ARINC 611 Fuel Quantity Data Source		
Spare		TP5F			
ARINC 429 Input] A	TP5G	ARINC 703 TCC		
ARINC 429 Input		TP5H	ARINC 703 TCC		
Spare		TP5J			

ATTACHMENT 2-2
STANDARD INTERWIRING

FUNCTION		FMC PIN	SOURCE/SINKS	NOTES
ARINC 429 Output] A	TP11A	EF/Instruments	
ARINC 429 Output		TP11B	EF/Instruments	
Spare		TP11C		
ARINC 429 Input] A	TP11D	ARINC 739A Offside MCDU	
ARINC 429 Input		TP11E	ARINC 739A Offside MCDU	
Spare		TP11F		
ARINC 429 Output] A	TP11G	ARINC 615 Data Loader	6
ARINC 429 Output		TP11H	ARINC 615 Data Loader	
Spare		TP11J		
Discrete Input		TP11K	Man/Autotune Input #2	4
Spare		TP12A		
Spare		TP12B		
Spare		TP12C		
Spare		TP12D		
Spare		TP12E		
Spare		TP12F		
Spare		TP12G		
Spare		TP12H		
Spare		TP12J		
Spare		TP12K		
ARINC 429 Output] A	TP13A	Other ARINC 702A FMC	
ARINC 429 Output		TP13B	Other ARINC 702A FMC	
Spare		TP13C		
ARINC 429 Output] A	TP13D	ARINC 739A Onside MCDU	
ARINC 429 Output		TP13E	ARINC 739A Onside MCDU	
Spare		TP13F		
ARINC 429 Output] A	TP13G	Test Data Recording	
ARINC 429 Output		TP13H	Test Data Recording	
Spare		TP13J		
Discrete Output		TP13K	Alert Annunciator	
Spare		TP14A		
Spare		TP14B		
Spare		TP14C		
Ethernet ltf #1] A	TP14D	615A Data Loader, 758 CMU, 6	
Ethernet ltf #1		TP14E	and/or 744A Printer via Ethernet Hub	
Ethernet ltf #1] C	TP14F	615A Data Loader, 758 CMU, 6	
Ethernet ltf #1		TP14G	and/or 744A Printer via Ethernet Hub	
Ethernet ltf #1	E	TP14H	615A Data Loader, 758 CMU, 6	
			and/or 744A Printer via Ethernet Hub	
Spare		TP14J		
Spare		TP14K		

**ATTACHMENT 2-2
STANDARD INTERWIRING**

FUNCTION		FMC PIN	SOURCE/SINKS	NOTES
ARINC 429 Input] A	TP15A	ARINC 758 CMU #1	
ARINC 429 Input		TP15B	ARINC 758 CMU #1	
Spare		TP15C		
ARINC 429 Input] A	TP15D	ARINC 704A IRS or	
ARINC 429 Input		TP15E	ARINC 705 AHRS #3	
Spare		TP15F		
ARINC 429 Input] A	TP15G	Propulsion Data Source #1	
ARINC 429 Input		TP15H	Propulsion Data Source #1	
Spare		TP15J		
Discrete Output		TP15K		
ARINC 429 Input] A	MP1A	Propulsion Data	
ARINC 429 Input		MP1B	Source #4	
Spare		MP1C		
ARINC 429 Input] A	MP1D	ARINC 711 VOR #2	
ARINC 429 Input		MP1E	ARINC 711 VOR #2	
Spare		MP1F		
ARINC 429 Input] A	MP1G	Other ARINC 702A FMC	
ARINC 429 Input		MP1H	Other ARINC 702A FMC	
Spare		MP1J		
Discrete Input		MP1K	SDI Code Input #1 [5]	
ARINC 429 Output		MP2A	Autothrottle System	
ARINC 429 Output		MP2B	Autothrottle System	
Spare		MP2C		
ARINC 429 Output		MP2D	ARINC 624 Maintenance System	
ARINC 429 Output		MP2E	ARINC 624 Maintenance System	
Spare		MP2F		
ARINC 429 Output		MP2G	ARINC 740/744A Printer	
ARINC 429 Output		MP2H	ARINC 740/744A Printer	
Spare		MP2J		
Discrete Input		MP2K		
ARINC 429 Input] A	MP3A	ARINC 704A IRS or	
ARINC 429 Input		MP3B	ARINC 705 AHRS #2	
Spare		MP3C		
ARINC 429 Input] A	MP3D	ARINC 731 Digital Clock	
ARINC 429 Input		MP3E	ARINC 731 Digital Clock	
Spare		MP3F		
ARINC 429 Input] A	MP3G	ARINC 724B ACARS	
ARINC 429 Input		MP3H	ARINC 724B ACARS	
Spare		MP3J		
Discrete Input		MP3K	SDI Input #2	5
Spare		MP4A		
Spare		MP4B		
Spare		MP4C		
ARINC 429 Output] A	MP4D	Spare	
ARINC 429 Output		MP4E	Spare	
Spare		MP4F		
ARINC 429 Input] A	MP4G	ASAS Bus	
ARINC 429 Input		MP4H	ASAS Bus	
Spare		MP4J		
Spare		MP4K		

ATTACHMENT 2-2
STANDARD INTERWIRING

FUNCTION		FMC PIN	SOURCE/SINKS	NOTES
ARINC 429 Input] A	MP5A	Propulsion Data Source #2	
ARINC 429 Input		MP5B		
Spare		MP5C		
ARINC 429 Input] A	MP5D	ARINC 706 Air Data System #2	
ARINC 429 Input		MP5E		
Spare		MP5F		
ARINC 429 Input] A	MP5G	ARINC 740/744A Printer ARINC 740/744A Printer	
ARINC 429 Input		MP5H		
Spare		MP5J		
Discrete Input		MP5K	SDI Code Input #3	5
ARINC 429 Input] A	MP6A	ARINC 624 Maintenance System ARINC 624 Maintenance System	
ARINC 429 Input		MP6B		
Spare		MP6C		
ARINC 429 Input] A	MP6D	ARINC 758 CMU #2 ARINC 758 CMU #2	
ARINC 429 Input		MP6E		
Spare		MP6F		
ARINC 429 Input] A	MP6G	ARINC 724B ACARS #2 ARINC 724B ACARS #2	
ARINC 429 Input		MP6H		
Spare		MP6J		
Discrete Output		MP6K		
ARINC 429 Input] A	MP7A	ARINC 743A/755 GNSS #2 ARINC 743A/755 GNSS #2	
ARINC 429 Input		MP7B		
Spare		MP7C		
ARINC 429 Output] A	MP7D	Data Utilization Devices	
ARINC 429 Output		MP7E		
Spare		MP7F		
ARINC 429 Input] A	MP7G	ARINC 709 DME #2 ARINC 709 DME #2	
ARINC 429 Input		MP7H		
Spare		MP7J		
Discrete Output		MP7K		
ARINC 429 Input] A	MP8A	Spare Spare	
ARINC 429 Input		MP8B		
Spare		MP8C		
ARINC 429 Input] A	MP8D	Spare Spare	
ARINC 429 Input		MP8E		
Spare		MP8F		
ARINC 429 Input] A	MP8G	Spare Spare	
ARINC 429 Input		MP8H		
Spare		MP8J		
Spare		MP8K		
ARINC 429 Output] A	MP9A	ARINC 724B ACARS Data Link ARINC 724B ACARS Data Link	
ARINC 429 Output		MP9B		
Spare		MP9C		
ARINC 429 Input] A	MP9D	EFIS EFIS	
ARINC 429 Input		MP9E		
Discrete Input		MP9F		
ARINC 429 Output] A	MP9G	EFI Instrumentation EFI Instrumentation	
ARINC 429 Output		MP9H		
Spare		MP9J		
Spare		MP9K		

**ATTACHMENT 2-2
STANDARD INTERWIRING**

FUNCTION	FMC PIN	SOURCE/SINKS		NOTES
		1	2	
Spare	MP10A			
Spare	MP10B			
Spare	MP10C			
Ethernet Interface #2	A MP10D	615A Data Loader, 758 CMU, and/or 744A Printer via Ethernet Hub		
Ethernet Interface #2	B MP10E			
Ethernet Interface #2	C MP10F	615A Data Loader, 758 CMU, and/or 744A Printer via Ethernet Hub		
Ethernet Interface #2	D MP10G			
Ethernet Interface #2	E MP10H			
Spare	MP10J			
Spare	MP10K			
Discrete Input	MP11A	Data Loader Interface		6
Discrete Input	MP11B	Connector		
Discrete Input	MP11C	Reserved for Application-		
Discrete Input	MP11D	Unique Discrete Inputs		
Discrete Input	MP11E	Reserved for Application-		
Discrete Input	MP11F	Unique Discrete Inputs		
Discrete Input	MP11G	Reserved for Application-		
Discrete Input	MP11H	Unique Discrete Inputs		
Discrete Input	MP11J	Reserved for Application-		
Discrete Input	MP11K	Unique Discrete Inputs		
Spare	MP12A			
Spare	MP12B			
Spare	MP12C			
Spare	MP12D			
Spare	MP12E			
Spare	MP12F			
Spare	MP12G			
Spare	MP12H			
Spare	MP12J			
Spare	MP12K			
Discrete Input	MP13A	Reserved for Application-		
Discrete Input	MP13B	Unique Discrete Inputs		
Discrete Input	MP13C	Reserved for Application-		
Discrete Input	MP13D	Unique Discrete Inputs		
Discrete Input	MP13E	Reserved for Application-		
Discrete Input	MP13F	Unique Discrete Inputs		
Discrete Input	MP13G	Reserved for Application-		
Discrete Input	MP13H	Unique Discrete Inputs		
Discrete Input	MP13J	Reserved for Application-		
Discrete Input	MP13K	Unique Discrete Inputs		
Spare	MP14A			
Spare	MP14B			
Spare	MP14C			
Spare	MP14D			
Spare	MP14E			
Spare	MP14F			
Spare	MP14G			
Spare	MP14H			
Spare	MP14J			
Spare	MP14K			

ATTACHMENT 2-2
STANDARD INTERWIRING

FUNCTION	FMC PIN	1 2		NOTES
		SOURCE/SINKS		
Discrete Input	MP15A	Reserved for Application-		
Discrete Input	MP15B	Unique Discrete Inputs		
Discrete Input	MP15C	Reserved for Application-		
Discrete Input	MP15D	Unique Discrete Inputs		
Discrete Input	MP15E	Reserved for Application-		
Discrete Input	MP15F	Unique Discrete Inputs		
Discrete Input	MP15G	Reserved for Application-		
Discrete Input	MP15H	Unique Discrete Inputs		
Reserved	MP15J			
Reserved	MP15K			
115 VAC Primary Power (Hot)				
Spare	BP2			
Spare	BP3			
Spare	BP4			
Spare	BP5			
Spare	BP6			
115 VAC Primary Power (Cold)	BP7			
Chassis Ground	BP8			AC Ground
Spare	BP9			DC Ground
Spare	BP10			
Spare	BP11			
Spare	BP12			
Spare	BP13			

**ATTACHMENT 2-3
NOTES APPLICABLE TO THE STANDARD INTERWIRING**

4683 ATTACHMENT 2-3 NOTES APPLICABLE TO THE STANDARD INTERWIRING

4684 1. Standard Interwiring

4685 The standard interwiring shown in this Attachment is for a single FMC installation comprised
4686 of one FMC and one CDU. For the sake of completeness, however, wiring is also shown to
4687 enable the FMC to operate with a second CDU and one for a cross-talk bus between this
4688 FMC and another one.

4689 Because of the variety of interwiring characteristics of aircraft installations utilizing the 702A
4690 FMC, this attachment does not standardize detailed interwiring in the traditional sense.
4691 Connector pin assignments are standardized with respect to input/output signal types only.
4692 While nominal signal functions are provided, manufacturers are encouraged to utilize
4693 programmable I/O design approaches which allow for variations in aircraft interfaces and
4694 installations.

4695 2. Shield Grounds

4696 Digital data bus shield grounds should be grounded to aircraft structure at both ends.

4697 3. Off-Side CDU Enable Discrete

4698 This discrete tells the FMC which CDU has control of data entry in dual CDU installations in
4699 which either may perform this function. When an open circuit is sensed by the FMC, its prime
4700 CDU has control. When the wire is connected to ground by means of a cockpit-located
4701 switch, or equivalent, the other CDU has control.

4702 4. FMC Master/Slave and Manual Autotune Discrete

4703 The Master/Slave discrete may be used in dual FMC installations to tell the FMCs which unit
4704 should be considered as master for dual system synchronism and redundancy management
4705 purposes as described in Section 3.5. The manual/autotune discrettes provide information to
4706 the FMCs on VOR/DME turning status. When in autotune mode, these radios accept tuning
4707 commands from the FMC.

4708 5. Source/Destination Identifier (SDI) Encoding

4709 Pins MP1K, MP3K, and MP5K are assigned for encoding the location of the FMC in the
4710 aircraft (i.e., system number) per Section 2.1.4 of ARINC Specification 429. If the SDI
4711 function is used, the following encoding scheme should be employed, the pins designated
4712 being either left open circuit or connected, on the aircraft-mounted half of the connector, to
4713 pin MP5K. The wiring of these pins should cause bit numbers 9 and 10 of each digital word
4714 transmitted by the FMC to take on the binary states defined in ARINC Specification 429.
4715 When the SDI function is not used, both pins MP1K and MP3K should be left open circuit
4716 such that bit numbers 9 and 10 are always binary zeros.

FMC No.	Connector Pin	
	MP1K	MP3K
Not Applicable	Open	Open
1	Open	To MP5K
2	To MP5K	Open
3	To MP5K	To MP5K

4717 The foregoing describes the SDI function performed by a data source. ARINC Specification
4718 429 also discusses the data identification function to be performed by sinks whose system
4719 numbers are encoded in this way. In summary, the FMC should recognize and accept data

**ATTACHMENT 2-3
NOTES APPLICABLE TO THE STANDARD INTERWIRING**

4720 words in which bit numbers 9 and 10 are either both zeros or form the code defined by pins
4721 MP1K and MP3K. All other data may be discarded.

4722 6. Data Loader Interface

4723 It is expected that the airframe manufacturers will provide, at some convenient location on the
4724 aircraft, a connection point for an external data loader of the type described in ARINC 615
4725 and 615A.

4726

ATTACHMENT 2-4
CONNECTOR INSERT LAYOUT

4727
4728

ATTACHMENT 2-4
TOP INSERT
CONNECTOR INSERT LAYOUT

	A	B	C	D	E	F	G	H	J	K
1	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC INPUT
2	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	o SPARE INPUT
3	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC INPUT
4	SPARE o	SPARE o	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC INPUT
5	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC INPUT
6	SPARE o	SPARE o	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	o DISC INPUT
7	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC INPUT
8	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o
9	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	o DISC INPUT	ARINC 429 OUTPUT o A	o B	SPARE o	o DISC INPUT
10	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o
11	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 615 OUTPUT o A	o B	SPARE o	o DISC INPUT
12	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o
13	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	o DISC OUTPUT
14	SPARE o	SPARE o	SPARE o	ETHERNET INTERFACE #1 o A o B o C o D o E					SPARE o	SPARE o
15	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC OUTPUT

4729
4730

ATTACHMENT 2-4
CONNECTOR INSERT LAYOUT

4731

MIDDLE INSERT

	A	B	C	D	E	F	G	H	J	K
1	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	SDI CODE INPUT #1 o
2	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	o DISC INPUT
3	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC INPUT
4	SPARE o	SPARE o	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	SPARE o
5	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC INPUT
6	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC OUTPUT
7	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	o DISC INPUT
8	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	SPARE o	SPARE o
9	ARINC 429 OUTPUT o A	o B	SPARE o	ARINC 429 INPUT o A	o B	o DISC INPUT	ARINC 429 OUTPUT o A	o B	SPARE o	SPARE o
10	SPARE o	SPARE o	SPARE o	ETHERNET INTERFACE #2 o A o B o C o D o E					SPARE o	SPARE o
11	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT
12	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o
13	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT	o DISC INPUT
14	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o	SPARE o
15	o DISC	o DISC	o DISC	o DISC	o DISC	o DISC	o DISC	o DISC	o RSVD	o RSVD

**ATTACHMENT 2-4
CONNECTOR INSERT LAYOUT**

	INPUT	INPUT	INPUT	INPUT	INPUT	INPUT	INPUT	INPUT		
--	-------	-------	-------	-------	-------	-------	-------	-------	--	--


4732

4733

ATTACHMENT 2-4
CONNECTOR INSERT LAYOUT

4734

BOTTOM INSERT

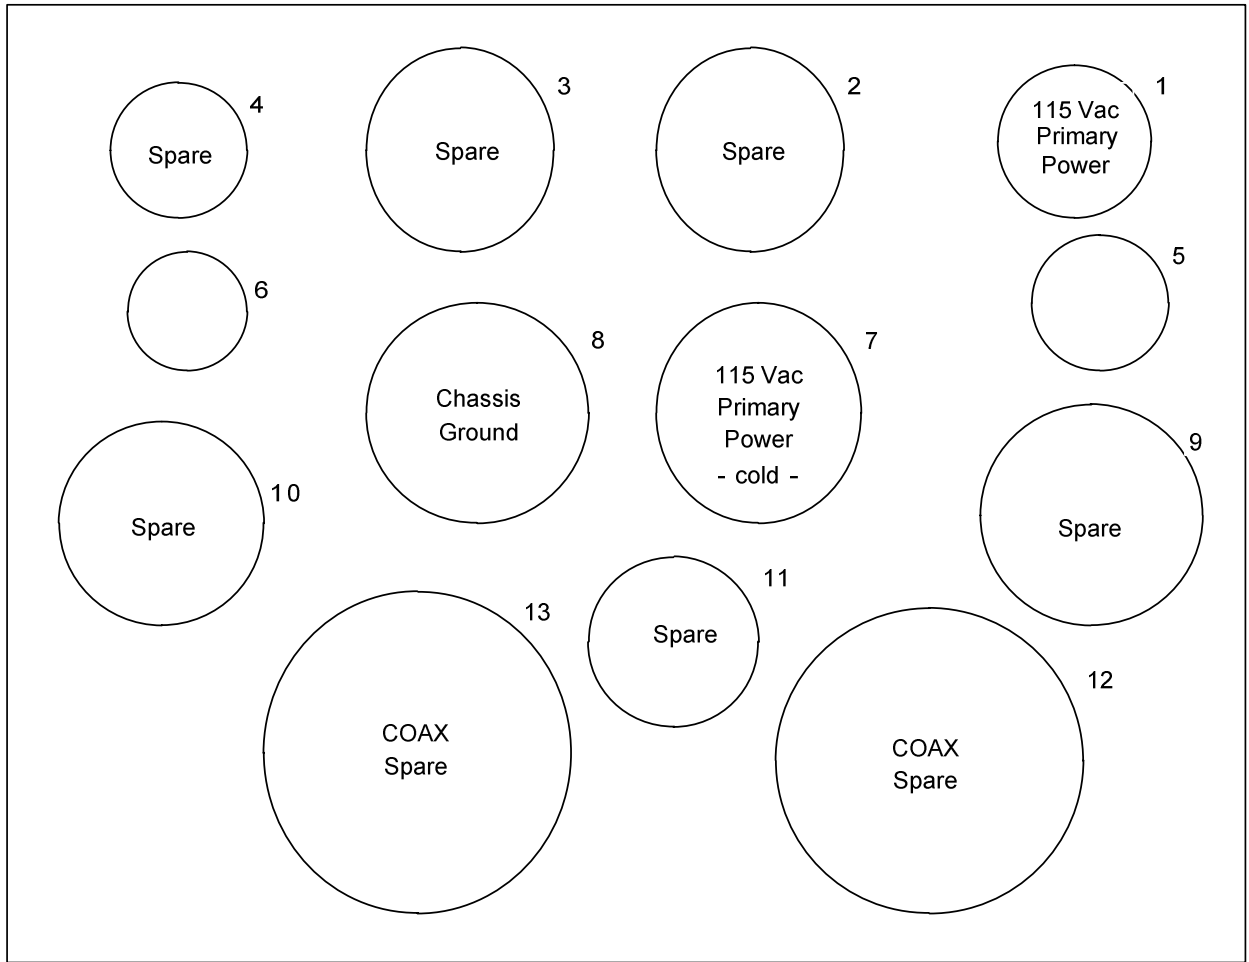

4735

4736

ATTACHMENT 3

4737 **ATTACHMENT 3**

4738

4739

4740

4741

4742

4743

THIS SECTION INTENTIONALLY LEFT BLANK

4744

ATTACHMENT 4
DATA INPUT/OUTPUT FMC OUTPUTS

4745 ATTACHMENT 4 DATA INPUT/OUTPUT FMC OUTPUTS

FUNCTION	LABEL		MCDU	GENERAL	EFI	ACARS	PRINTER	AUTO THROTTLE	TRAJECTORY
DISTANCE TO GO	001	BCD		X	X				
TIME TO GO	002	BCD			O				
PRESENT POSITION LATITUDE	010	BCD		O					
PRESENT POSITION LONGITUDE	011	BCD		O					
GROUND SPEED	012	BCD		O	X				
SELECTED RUNWAY HEADING	017	BCD		O					
SELECTED N1/EPR (BCD)	021	BCD							
TACAN SELECTED COURSE (BCD)	027	BCD		O					
ILS FREQUENCY	033	BCD		O					
VOR/ILS FREQUENCY #1	034	BCD		O					
VOR/ILS FREQUENCY #2	034	BCD		O					
DME FREQUENCY #1	035	BCD		O					
DME FREQUENCY #2	035	BCD		O					
MLS FREQUENCY/CHANNEL	036	BCD		O					
SET LATITUDE	041	BCD		X					
SET LONGITUDE	042	BCD		X					
SET MAGNETIC HEADING	043	BCD		X					
FAS DATA BLOCK MESSAGE START (see ARINC 743B/755 for details)	045	BLK		O					
FAS DATA BLOCK MESSAGE DATA	046	BLK		O					
ETA (ACTIVE WAYPOINT)	056	BCD			X				
ACMS INFORMATION	061	BNR		O					
ACMS INFORMATION	062	BNR		O					
ACMS INFORMATION	063	BNR		O					
LONGITUDINAL (ACTIVE WAYPOINT) CENTER OF GRAVITY (BCD)	066	BCD		O					
REFERENCE AIRSPEED (VREF)	070	BNR		O	O				
TAKE-OFF CLIMB AIRSPEED (V2)	071	BNR		O	O				
ROTATION SPEED (VR)	072	BNR		O	X				
CRITICAL ENGINE FAILURE SPEED VI	073	BNR		X					
ZERO FUEL WEIGHT	074	BNR		O					
GROSS WEIGHT	075	BNR		X				O	
TARGET AIRSPEED	077	BNR		O					
SELECTED COURSE #1	100	BNR		O					
SELECTED ALTITUDE	102	BNR		O					X
SELECTED AIRSPEED	103	BNR		O				O	X
SELECTED VERTICAL SPEED	104	BNR		O					
SELECTED RUNWAY HEADING	105	BNR		O					
SELECTED MACH	106	BNR		O					X
SELECTED CRUISE ALTITUDE	107	BNR		O					
DESIRED TRACK	114	BNR		O	X				X

**ATTACHMENT 4
DATA INPUT/OUTPUT FMC OUTPUTS**

FUNCTION	LABEL		MCDU	GENERAL	EFI	ACARS	PRINTER	AUTO THROTTLE	TRAJECTORY
WAYPOINT BEARING	115	BNR		X	X				
CROSS TRACK DISTANCE	116	BNR		O	X				
VERTICAL DEVIATION	117	BNR		O	O				
RANGE TO ALTITUDE	120	BNR			X				
HORIZONTAL COMMAND SIGNAL	121	BNR		X					
VERTICAL COMMAND SIGNAL	122	BNR		O					
THROTTLE COMMAND SIGNAL	123	BNR					O	O	
UNIVERSAL COORDINATED TIME (UTC)	125	BCD		X					
VERTICAL DEVIATION (WIDE)	126	BNR		O					
SELECTED LANDING ALTITUDE	127	BNR		X					
CURRENT VERTICAL PATH PERF LIMIT	135	BNR							X
CURRENT VERTICAL PATH PERF	136	BNR							X
GREENWICH MEAN TIME (UTC)	150	BNR		X	X			O	X
LOCALIZER BEARING (TRUE)	151	BNR		O					
MAXIMUM ALTITUDE	153	BNR		X					
RUNWAY HEADING (TRUE)	154	BNR		X					
ESTIMATED POSITION UNCERTAINTY	167	BNR							X
CURRENT RNP	171	BNR							X
DRIFT ANGLE	200	BCD		O					
ENERGY MANAGEMENT (CLEAN)	202	BNR			O				
ENERGY MANAGEMENT SPEED BRAKES	203	BNR			O				
UTILITY AIRSPEED	204	BNR		O	O				
BARO ALTITUDE	204	BNR							
SBAS FAS DATABLOCK WORD #1 (see ARINC755 for details)	205	BLK		O					
COMPUTED AIRSPEED	206	BNR							
SBAS FAS DATABLOCK WORD #2	206	BLK		O					
SBAS FAS DATABLOCK WORD #3	207	BLK		O					
TOTAL AIR TEMPERATURE	211	BNR					O	O	
SBAS FAS DATABLOCK WORD #4	211	BLK		O					
ALTITUDE RATE	212	BNR							
STATIC AIR TEMPERATURE	213	BNR					O	O	
SBAS FAS DATABLOCK WORD #5	213	BLK		O					
SBAS FAS DATABLOCK WORD #6	215	BLK		O					
GEOMETRIC VERTICAL RATE	217	BNR							
SBAS FAS DATABLOCK WORD #7	217	BLK		O					
MCDU #1 ADDRESS LABEL	220		X						
SBAS FAS DATABLOCK WORD #8	220	BLK		O					
MCDU #2 ADDRESS LABEL	221		X						
SBAS FAS DATABLOCK WORD #9	221	BLK		O					

ATTACHMENT 4
DATA INPUT/OUTPUT FMC OUTPUTS

FUNCTION	LABEL		MCDU	GENERAL	EFI	ACARS	PRINTER	AUTO THROTTLE	TRAJECTORY
MCDU #3 ADDRESS LABEL	222		O						
CDU DATA (PER ARINC 739)			X						
PRINTER #1 ADDRESS LABEL	223						O		
SBAS FAS DATABLOCK WORD #10	223	BLK		O					
PRINTER #2 ADDRESS LABEL	224						O		
SBAS FAS DATABLOCK WORD #11	224	BLK		O					
MINIMUM MANEUVERING AIR SPEED	225	BNR			O				
SBAS FAS DATABLOCK WORD #12	225	BLK		O					
MINIMUM OPERATING FUEL TEMP.	226	BNR		O					
MCDU #4 ADDRESS LABEL	230			X					
SBAS FAS DATABLOCK WORD #13	225	BLK		O					
ACTIVE TRAJ INTENT DATA BLOCK	232								X
ACMS INFORMATION	233								X
ACMS INFORMATION	234								X
ACMS INFORMATION	235								X
ACMS INFORMATION	236								X
ACMS INFORMATION	237								X
MIN. AIRSPEED FOR FLAP EXTENSION	241	BNR			O				
MODIFIED INTENT DATA BLOCK	242								X
SBAS FAS DATABLOCK WORD #14	242	BLK		O					
SBAS FAS DATABLOCK WORD #15	244	BLK		O					
MINIMUM AIRSPEED	245	BNR		O					
GENERAL MAX SPEED (VCMAX)	246	BNR		O					
SBAS FAS DATABLOCK WORD #16	246	BLK		O					
CONTROL MINIMUM SPEED (VCMIN)	247	BNR		O					
CONTINUOUS N1 SPEED	250	BNR	O				O		
GO-AROUND N1 LIMIT	253	BNR		X					
CRUISE N1 LIMIT	254	BNR		X					
CLIMB N1 LIMIT	255	BNR		X					
TIME FOR CLIMB	256	BNR		O					
TIME FOR DESCENT	257	BNR		O					
DATE/FLIGHT LEG	260	BCD		X				O	
FLIGHT NUMBER (BCD)	261	BCD		O					
DOCUMENTARY DATA (PER ARINC 619)	262	BNR				O			
MIN. AIRSPEED FOR FLAP RETRACTION	263	BNR			O				
NDB EFFECTIVITY	263			O					
TIME TO TOUCHDOWN	264	BNR		O	O				
MIN. BUFFET AIRSPEED	265	BNR		O					
MAX. MANEUVER AIRSPEED	267	BNR		O	O				

**ATTACHMENT 4
DATA INPUT/OUTPUT FMC OUTPUTS**

FUNCTION	LABEL		MCDU	GENERAL	EFI	ACARS	PRINTER	AUTO THROTTLE	TRAJECTORY
INTENT STATUS	270	DISC							X
STATUS DISCRETES	270	DISC		X					
DISCRETE DATA #1	270	DISC			X				
DISCRETE DATA #2	271	DISC		X	X				
DISCRETE DATA #3	272	DISC		O	O				
DISCRETE DATA #6	275	DISC		O	O				
DISCRETE DATA #7	276	DISC		O	O				
APPLICATION DEPENDENT	301				O				
APPLICATION DEPENDENT	302				O				
APPLICATION DEPENDENT	303				O				
PRESENT POSITION LATITUDE	310	BNR		O	X				X
PRESENT POSITION LONGITUDE	311	BNR		O	X				X
GROUND SPEED	312	BNR		O	X				X
TRACK ANGLE TRUE	313	BNR		O	X				X
TRUE HEADING	314	BNR							X
WIND SPEED	315	BNR			X				X
WIND DIRECTION (TRUE)	316	BNR			X				X
TRACK ANGLE MAGNETIC	317	BNR		O	X				
MAGNETIC HEADING	320	BNR							X
DRIFT ANGLE	321	BNR		O	X				
FLIGHT PATH ANGLE	322	BNR			O				
GEOMETRIC ALTITUDE	323	BNR							
TRACK ANGLE RATE	335	BNR							X
N1 OR EPR COMMAND	341	BNR		X			O	O	
N1 BUG DRIVE	342	BNR		X			O	O	
MAINTENANCE DATA #5	354			O					
ISO ALPHABET #5 MESSAGE	357	ISO-5			O				
FLIGHT INFORMATION	360	BNR		O	O				
N/S VELOCITY	366	BNR							X
E/W VELOCITY	367	BNR							X
EQUIPMENT ID	377			X					

4746

Notes:

4747

4. X = Basic or Baseline

4748

5. O = Optional

4749

4750

**ATTACHMENT 5
ENVIRONMENTAL TEST CATEGORIES**

4751 **ATTACHMENT 5 ENVIRONMENTAL TEST CATEGORIES**


ENVIRONMENT	RTCA DO-160 SECTION	CATEGORY RTCA DO-160C/D
Temperature and Altitude	4	Category A2/W
Temperature Variation	5	Category A
Humidity	6	Category B
Shock	7	
Vibration	8	Category B'
Explosion	9	Category X
Waterproofness	10	Category X
Hydraulic Fluid	11	Category X
Sand and Dust	12	Category X
- Fungus	13	Category F
- Salt Spray	14	Category X
Magnetic Effects	15	Category Z
Power Input	16	Category A
Voltage Spikes	17	Category A
Audio Frequency		
- Conducted Susceptibility	18	Category Z
Electromagnetic Compatibility		Category A
- Induced Signal Susceptibility	19	Category Z
- Radio Frequency Susceptibility	20	Category W
- Emission of Radio Frequency Energy	21	Category Z
- Lightning	22	600v/120a

4752

4753

ATTACHMENT 6
FMC/EFI INTERFACE


4754 ATTACHMENT 6 FMC/EFI INTERFACE

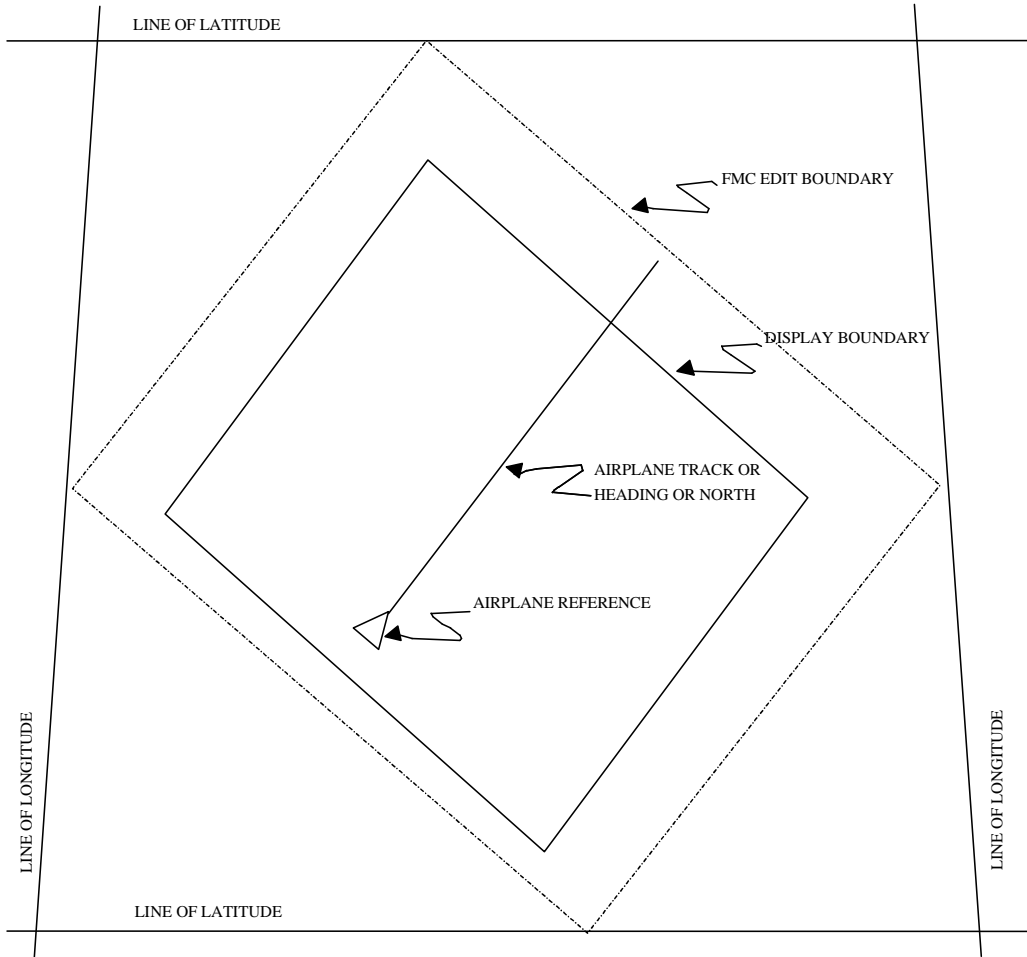

4755
4756
4757
4758
4759

Figure 6-1 – Map Edit Area
North-Up Orientation Used in Plan Mode

ATTACHMENT 6
FMC/EFI INTERFACE

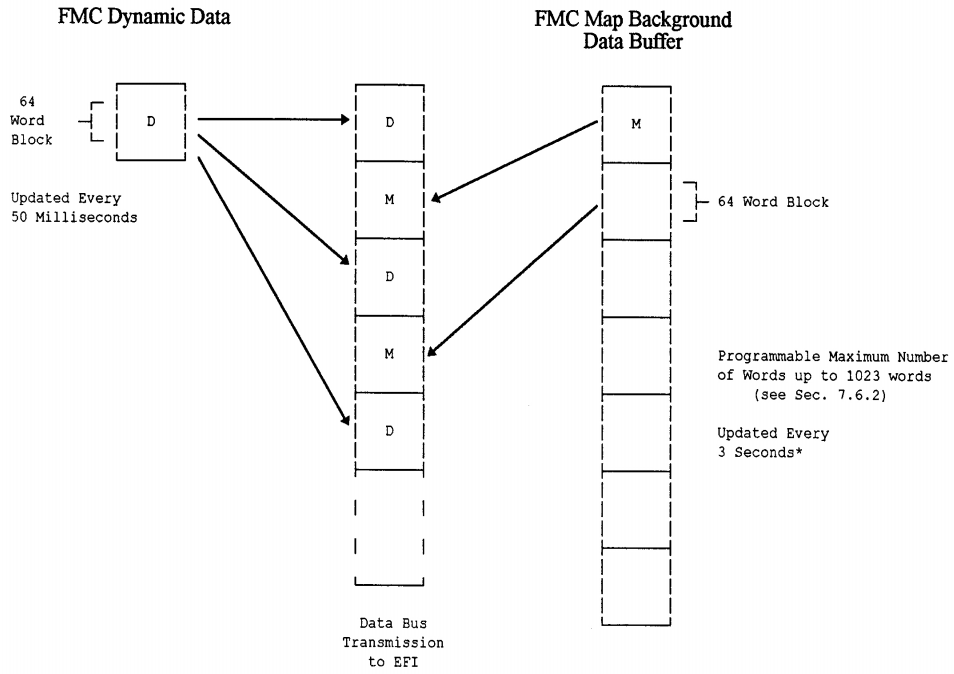

4760
4761
4762
4763
4764
4765
4766

Note: Updated and transmitted within 1 second after either a mode, scale or option change.

Figure 6-2 – FMC/EFI Data Transmission Format

**ATTACHMENT 6
FMC/EFI INTERFACE**

4767 **Table 6-1 – FMC/EFI Data Type Identification Codes**

OCTAL LABEL	BIT POSITION								PARAMETER
	1	2	3	4	5	6	7	8	
301	1	1	0	0	0	0	0	1	START OF TRANSMISSION (SOT) (BACKGROUND)
303	1	1	0	0	0	0	1	1	START OF TRANSMISSION (SOT) (DYNAMIC)
100	0	1	0	0	0	0	0	0	VECTOR - Active Flight Plan
300	1	1	0	0	0	0	0	0	- Active Flight Plan Changes
040	0	0	1	0	0	0	0	0	- Inactive Flight Plan
240	1	0	1	0	0	0	0	0	- Inactive Flight Plan Changes
140	0	1	1	0	0	0	0	0	- Radial
340	1	1	1	0	0	0	0	0	- Runway Center Line
020	0	0	0	1	0	0	0	0	- Offset Path
220	1	0	0	1	0	0	0	0	undefined
120	0	1	0	1	0	0	0	0	undefined
320	1	1	0	1	0	0	0	0	undefined
060	0	0	1	1	0	0	0	0	undefined
260	1	0	1	1	0	0	0	0	undefined
160	0	1	1	1	0	0	0	0	VECTOR IDENTIFIERS
360	1	1	1	1	0	0	0	0	undefined
010	0	0	0	0	1	0	0	0	undefined
210	1	0	0	0	1	0	0	0	undefined
110	0	1	0	0	1	0	0	0	undefined
310	1	1	0	0	1	0	0	0	undefined
050	0	0	1	0	1	0	0	0	undefined
250	1	0	1	0	1	0	0	0	SYMBOLS - VORTAC + Identifier
150	0	1	1	0	1	0	0	0	- Tuned VORTAC + Identifier
350	1	1	1	0	1	0	0	0	- VOR + Identifier
030	0	0	0	1	1	0	0	0	- Tuned VOR + Identifier
230	1	0	0	1	1	0	0	0	- DME/TACAN + Identifier
130	0	1	0	1	1	0	0	0	- Tuned DME/TACAN + Identifier
330	1	1	0	1	1	0	0	0	- Waypoint + Identifier
070	0	0	1	1	1	0	0	0	- Active Waypoint + Identifier
270	1	0	1	1	1	0	0	0	- Airfield + Identifier
170	0	1	1	1	1	0	0	0	- Origin/Destination Airfield Ident
370	1	1	1	1	1	0	0	0	- GRP + Identifier
004	0	0	0	0	0	1	0	0	- Altitude Profile Point + Identifier
204	1	0	0	0	0	1	0	0	- Selected Reference Point
104	0	1	0	0	0	1	0	0	undefined
304	1	1	0	0	0	1	0	0	undefined
044	0	0	1	0	0	1	0	0	undefined
244	1	0	1	0	0	1	0	0	undefined
144	0	1	1	0	0	1	0	0	undefined
344	1	1	1	0	0	1	0	0	undefined
024	0	0	0	1	0	1	0	0	undefined
224	1	0	0	1	0	1	0	0	TEXT - Type 1: Navigation Advisory
124	1	0	0	1	0	1	0	0	- Type 2: Maintenance Test
324	1	1	0	1	0	1	0	0	- Type 3
064	0	0	1	1	0	1	0	0	- Type 4
264	1	0	1	1	0	1	0	0	MAP REFERENCE GROUP - Latitude

ATTACHMENT 6
FMC/EFI INTERFACE

OCTAL LABEL	BIT POSITION								PARAMETER
	1	2	3	4	5	6	7	8	
164	0	1	1	1	0	1	0	0	-Longitude
364	1	1	1	1	0	1	0	0	DISCRETE WORD - Map Mode
014	0	0	0	0	1	1	0	0	- Range
214	1	0	0	0	1	1	0	0	undefined
114	0	1	0	0	1	1	0	0	undefined
314	1	1	0	0	1	1	0	0	undefined
054	0	0	1	0	1	1	0	0	ROTATED SYMBOLS - Runway + Identifier
254	1	0	1	0	1	1	0	0	- Airport + Runway + Identifier
154	0	1	1	0	1	1	0	0	- Marker Beacon
354	1	1	1	0	1	1	0	0	- Holding Pattern – R
034	0	0	0	1	1	1	0	0	- Holding Pattern – L
234	1	0	0	1	1	1	0	0	- Procedure Turn – R
134	0	1	0	1	1	1	0	0	- Procedure Turn – L
334	1	1	0	1	1	1	0	0	undefined
074	0	0	1	1	1	1	0	0	undefined
274	1	0	1	1	1	1	0	0	undefined
174	0	1	1	1	1	1	0	0	undefined
374	1	1	1	1	1	1	0	0	undefined
302	1	1	0	0	0	0	1	0	END OF TRANSMISSION (EOT)
000	0	0	0	0	0	0	0	0	FILL-IN WORDS

4768

Table 6-2 Symbol Word Group

4769

The symbol group is comprised of the following:

4770

Table 6-2A – Latitude Symbol Word

4771

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	SSM	NS	Latitude (Degrees)																				SYMBOL TYPE								

4772

Table 6-2A-1 – Latitude

BIT	VALUE	NOTES
9	0.00008	
10	0.00017	
11	0.0003	
12	0.0006	
13	0.0013	
14	0.0027	
15	0.0054	
16	0.0109	
17	0.0219	
18	0.0439	
19	0.0878	
20	0.1757	
21	0.3515	
22	0.7031	
23	1.406	
24	2.812	
25	5.625	

**ATTACHMENT 6
FMC/EFI INTERFACE**

26	11.25	
27	22.5	
28	45.0	

4773

Table 6-2A-2 – NS Bit

BIT 29	VALUE	NOTES
0	North	
1	South	

4774

Table 6-2A-3 – Sign/Status its

BIT 31 30		WORD DESCRIPTION
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control word (symbol rotation and vector conics)
1	0	Last word of data type group

4775

Table 6-2B – Longitude Symbol Word

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	SSM	EW	Longitude (Degrees)																			SYMBOL TYPE									

4776

Table 6-2B-1 – Longitude

BIT	VALUE	NOTES
9	0.00017	
10	0.0003	
11	0.0006	
12	0.0013	
13	0.0027	
14	0.0054	
15	0.0109	
16	0.0219	
17	0.0439	
18	0.0878	
19	0.1757	
20	0.3515	
21	0.7031	
22	1.406	
23	2.812	
24	5.625	
25	11.25	
26	22.5	
27	45.0	
28	90.0	

ATTACHMENT 6
FMC/EFI INTERFACE

4777

Table 6-2B-2 – EW

BIT 29	VALUE	NOTES
0	East	
1	West	

4778

Table 6-2B-3 – Sign/Status Bits

BIT 31	BIT 30	WORD DESCRIPTION
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control words (symbol rotation and vector conics)
1	0	Last word of data type group

4779

Table 6-2C-1 – Azimuth

BIT	VALUE	NOTES
9	0.00017	
10	0.0003	
11	0.0006	
12	0.0013	
13	0.0027	
14	0.0054	
15	0.0109	
16	0.0219	
17	0.0439	
18	0.0878	
19	0.1757	
20	0.3515	
21	0.7031	
22	1.406	
23	2.812	
24	5.625	
25	11.25	
26	22.5	
27	45.0	
28	90.0	

4780

4781

Table 6-2C-2 – Sign

BIT 29	VALUE	NOTES
0	Plus	
1	Minus	

4782

Table 6-2C-3 – Sign/Status Bits

BIT 31	BIT 30	WORD DESCRIPTION
0	1	First word of data type group

**ATTACHMENT 6
FMC/EFI INTERFACE**

0	0	Intermediate positional, character words
1	1	Control words (symbol rotation and vector conics)
1	0	Last word of data type group

4783

4784

ATTACHMENT 6
FMC/EFI INTERFACE

4785

Table 6-2D – Symbol Identifier Word(s)

32	31 30	29 28 27 26 25 24 23	22 21 20 19 18 17 16	15 14 13 12 11 10 9	8 7 6 5 4 3 2 1
P	SSM	CHARACTER #3	CHARACTER #2	CHARACTER #1	SYMBOL TYPE
		b7 b1	b7 b1	b7 b1	

4786

Table 6-2D-1 – Sign/Status Bits

BIT		WORD
31	30	DESCRIPTION
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control words (symbol rotation and vector conics)
1	0	Last word of data type group

4787

Note: Character data is encoded per ISO #5 format with bit 1 transmitted first. See Section 2 of Attachment 7.

4788

4789

Table 6-2E – Length (Runway Symbols Only)

32	31 30	29	28 27 26 25 24 23 22 21 20 19 18 17 16 15 14	13 12 11 10 9	8 7 6 5 4 3 2 1
P	SSM	±	Runway Length (Feet)	Pad	SYMBOL TYPE
				(all 0's)	

4790

Table 6-2E-1 – Runway Length

BIT	VALUE	NOTES
14	1	
15	2	
16	4	
17	8	
18	16	
19	32	
20	64	
21	128	
22	256	
23	512	
24	1024	
25	2048	
26	4096	
27	8192	
28	16384	

4791

Table 6-2E-2 – Sign Bit

BIT 29	VALUE	NOTES
0	Plus	
1	Minus	

4792

Table 6-2E-3 – Sign/Status Bits

--	--

**ATTACHMENT 6
FMC/EFI INTERFACE**

BIT		WORD DESCRIPTION
31	30	
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control words (symbol rotation and vector conics)
1	0	Last word of data type group

4793

4794

4795

ATTACHMENT 6
FMC/EFI INTERFACE

4796 **Table 6-2C – Azimuth Symbol Word (Rotated Symbols Only)**

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	SSM		±	Azimuth (Degrees)																			SYMBOL TYPE								

4797
4798 **Table 6-3 Vector Word Group**

4799 The Vector Word Group is comprised of the following:

4800 **Table 6-3A – Latitude Vector Word**

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	SSM		NS	Latitude (Degrees)																			VECTOR TYPE								

4801
4802 **Table 6-3A-1 – Latitude**

BIT	VALUE	NOTES
9	0.00008	
10	0.00017	
11	0.0003	
12	0.0006	
13	0.0013	
14	0.0027	
15	0.0054	
16	0.0109	
17	0.0219	
18	0.0439	
19	0.0878	
20	0.1757	
21	0.3515	
22	0.7031	
23	1.406	
24	2.812	
25	5.625	
26	11.25	
27	22.5	
28	45.0	

4803 **Table 6-3A-2 – NS Bit**

BIT 29	VALUE	NOTES
0	North	
1	South	

4804 **Table 6-3A-3 – Sign/Status Bits**

BIT		WORD DESCRIPTION
31	30	
0	1	First word of data type group
0	0	Intermediate positional, character words

**ATTACHMENT 6
FMC/EFI INTERFACE**

1	1	Control word (symbol rotation and vector conics)
1	0	Last word of data type group

4805

4806

Table 6-3B – Longitude Vector Word

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	SSM	EW	Longitude (Degrees)																				VECTOR TYPE								

4807

Table 6-3B-1 – Longitude

BIT	VALUE	NOTES
9	0.00017	
10	0.0003	
11	0.0006	
12	0.0013	
13	0.0027	
14	0.0054	
15	0.0109	
16	0.0219	
17	0.0439	
18	0.0878	
19	0.1757	
20	0.3515	
21	0.7031	
22	1.406	
23	2.812	
24	5.625	
25	11.25	
26	22.5	
27	45.0	
28	90.0	

4808

Table 6-3B-2 – EW Bit

BIT	VALUE	NOTES
29		
0	East	
1	West	

4809

Table 6-3B-3 – Sign/Status Bits

BIT 31 30		WORD DESCRIPTION
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control word (symbol rotation and vector conics)
1	0	Last word of data type group

ATTACHMENT 6
FMC/EFI INTERFACE

4810 **Table 6-3C – Conic Definition Word (Subtended Angle)**

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
P	SSM		±	Subtended Angle (Degrees)												Pad (all 0's)									VECTOR TYPE							

4811 **Table 6-3C-1 – Subtended Angle**

BIT	VALUE	NOTES
17	0.0439	
18	0.0879	
19	0.1758	
20	0.3515	
21	0.7031	
22	1.406	
23	2.812	
24	5.625	
25	11.25	
26	22.5	
27	45.0	
28	90.0	

4812 **Table 6-3C-2 – Sign Bit**

BIT	VALUE	NOTES
29		
0	Plus	
1	Minus	

4813 **Table 6-3C-3 – Sign/Status Bits**

BIT		WORD DESCRIPTION
31	30	
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control word (symbol rotation and vector conics)
1	0	Last word of data type group

4814

ATTACHMENT 6
FMC/EFI INTERFACE

4815

Table 6-3D – Conic Definition Word (Radius)

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	SSM		Sign	Radius (NM)																Pad				VECTOR TYPE							
																				(all 0's)											

4816

Table 6-3D-1 – Radius

BIT	VALUE	NOTES
14	2 ⁻⁷	
15	2 ⁻⁶	
16	2 ⁻⁵	
17	2 ⁻⁴	
18	2 ⁻³	
19	2 ⁻²	
20	2 ⁻¹	
21	2 ⁰	
22	2 ¹	
23	2 ²	
24	2 ³	
25	2 ⁴	
26	2 ⁵	
27	2 ⁶	
28	2 ⁷	

4817

Table 6-3D-2 – Sign Bit

BIT	VALUE	NOTES
29		
0	Plus	
1	Minus	

4818

Table 6-3D-3 – Sign/Status Bits

BIT	WORD DESCRIPTION
31 30	
0 1	First word of data type group
0 0	Intermediate positional, character words
1 1	Control words (symbol rotation and vector conics)
1 0	Last word of data type group

4819

4820

Table 6-3E – Conic Definition Word (Initial Angle)

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	SSM		Sign	Initial Angle (Degrees)																Pad				VECTOR TYPE							
																				(all 0's)											

4821

Table 6-3E-1 – Initial Angle

BIT	VALUE	NOTES
-----	-------	-------

**ATTACHMENT 6
FMC/EFI INTERFACE**

17	0.0439	
18	0.0879	
19	0.1758	
20	0.3515	
21	0.7031	
22	1.406	
23	2.812	
24	5.625	
25	11.25	
26	22.5	
27	45.0	
28	90.0	

4822

Table 6-3E-2 – Sign Bit

BIT	VALUE	NOTES
29		
0	Plus	
1	Minus	

4823

Table 6-3E-3 – Sign/Status Bits

BIT	31	30	WORD DESCRIPTION
0	1		First word of data type group
0	0		Intermediate positional, character words
1	1		Control word (symbol rotation and vector conics)
1	0		Last word of data type group

4824

Table 6-4 Map References Position Word Group

The Map Reference Position Word Group consists of the following:

Table 6-4A – Latitude (Plan Mode) Word (Label 264)

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
P	SSM	NS	Latitude (Degrees)																						0	0	1	0	1	1	0	1

4828

Table 6-4A-1 – Latitude

BIT	VALUE	NOTES
9	0.00008	
10	0.00017	
11	0.0003	
12	0.0006	
13	0.0013	
14	0.0027	
15	0.0054	
16	0.0109	
17	0.0219	

**ATTACHMENT 6
FMC/EFI INTERFACE**

18	0.0439	
19	0.0878	
20	0.1757	
21	0.3515	
22	0.7031	
23	1.406	
24	2.812	
25	5.625	
26	11.25	
27	22.50	
28	45.0	

4829

Table 6-4A-2 – NS Bit

BIT	VALUE	NOTES
29		
0	North	
1	South	

4830

Table 6-24-3 – Sign/Status Bits

BIT		WORD DESCRIPTION
31	30	
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control word (symbol rotation and vector conics)
1	0	Last word of data type group

4831

4832

ATTACHMENT 6
FMC/EFI INTERFACE

4833

Table 6-4B – Longitude (Plan Mode) Word (Label 164)

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1										
P	SSM	EW	Longitude (Degrees)																				0	0	1	0	1	1	1	0											

4834

Table 6-4B-1 – Longitude

BIT	VALUE	NOTES
9	0.00017	
10	0.0003	
11	0.0006	
12	0.0013	
13	0.0027	
14	0.0054	
15	0.0109	
16	0.0219	
17	0.0439	
18	0.0878	
19	0.1757	
20	0.3515	
21	0.7031	
22	1.406	
23	2.812	
24	5.625	
25	11.25	
26	22.5	
27	45.0	
28	90.0	

4835

Table 6-4B-2 – EW Bit

BIT 29	VALUE	NOTES
0	East	
1	West	

4836

Table 6-4B-3 – Sign/Status Bits

BIT 31	30	WORD DESCRIPTION
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control word (symbol rotation and vector conics)
1	0	Last word of data type group

4837

Table 6-4C – Map Mode Discrete Word (Label 364)

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
P	SSM	0	0	0	0						0	0	0						0	0	1	0	1	1	1	1	1					

4838

Table 6-4C-1

BIT	NAME	ZERO	ONE	NOTES
11	MAP			1

**ATTACHMENT 6
FMC/EFI INTERFACE**

12	VOR			1
13	ILS			1
14	PLAN			1
15	SPARE			1
16	SPARE			1
17	EFIS S/T			
20	NAV AIDS			
21	GPS			
22	WAYPOINT DATA			
23	AIRPORTS			
24	MAP ORIENT			
25	VOR/ILS ORIENT			
26	RA ALERT RESET			

4839

Table 6-4C-2 – Sign/Status Bits

BIT		WORD DESCRIPTION
31	30	
0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control word (symbol rotation and vector conics)
1	0	Last word of data type group

4840

Note:

4841

1. For bits 11 through 16, only 1 bit should be set at a time.

4842

4843

Table 6-4D – Map Range Discrete Word (Label 014)

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	SSM		Range (Miles)						PAD										0 0 1 1 0 0 0 0												
			Note 1						(all 0's)																						

4844

Table 6-4D-1 – Range

BIT	VALUE	NOTES
24	5.0	
25	10.0	
26	20.0	
27	40.0	
28	80.0	
29	160.0	

4845

Table 6-4D-2 – WXR Data

BIT	VALUE	NOTES
23		
0		
1		

4846

Table 6-4D-3 – Sign/Status Bits

BIT		WORD DESCRIPTION
31	30	

**ATTACHMENT 6
FMC/EFI INTERFACE**

0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control word (symbol rotation and vector conics)
1	0	Last word of data type group

4847

Note:

4848

1. All bits set to zero represents 320 mile range

4849

4850 Table 6-5 Dynamic Symbol Word Group

4851

The Dynamic Symbol Word Group consists of the following:

4852

Table 6-5A – Altitude Range Arc Word (Label 157)

32	31 30	29	28 27 26 25 24 23 22 21 20 19 18 17 16 15 14	13 12 11 10 9	8 7 6 5 4 3 2 1
P	SSM	±	Altitude Range (NM)	Pad	1 1 1 1 0 1 1 0
				(all 0's)	

4853

4854

Table 6-5A-1 – Altitude Range

BIT	VALUE	NOTES
14	2 ⁻⁶	
15	2 ⁻⁵	
16	2 ⁻⁴	
17	2 ⁻³	
18	2 ⁻³	
19	2 ⁻¹	
20	2 ⁰	
21	2 ¹	
22	2 ²	
23	2 ³	
24	2 ⁴	
25	2 ⁵	
26	2 ⁶	
28	2 ⁷	
28	2 ⁸	

4855

Table 6-5A-2 – Sign Bit

BIT 29	VALUE	NOTES
0	Plus	
1	Minus	

4856

Table 6-5A-3 – Sign/Status Bits

BIT	WORD DESCRIPTION
31 30	

**ATTACHMENT 6
FMC/EFI INTERFACE**

0	1	First word of data type group
0	0	Intermediate positional, character words
1	1	Control words (symbol rotation and vector conics)
1	0	Last word of data type group

4857

4858 **Table 6-6 Bus Control Words**

4859 The following Bus Control Word Group consists of the following:

4860 **Table 6-6A – SOT (Start of Transmission) Word (Background Data) (Label 301)**

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
P	1	1	WORD COUNT (Note 1)										BLOCK NUMBER						1	0	0	0	0	0	1	1					

4861

4862

Table 6-6A-1 – Block Number

BIT	VALUE	NOTES
9	1.0	
10	2.0	
11	4.0	
12	9.0	
13	16.0	

4863

Table 6-6A-2 – Word Count

BIT	VALUE	NOTES
20	1.0	
21	2.0	
22	4.0	
23	8.0	
24	16.0	
25	32.0	
26	64.0	
27	128.0	
28	256	
29	512	

4864

4865

4866

Note: The word count is the number of usable words being transmitted in the background data transfer. This count is only coded in the 301 label of the first 64 block.

4867

4868 **Table 6-6B – SOT (Start of Transmission) Word (Dynamic Data) (Label 303)**

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
P	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

4869

Table 6-6C – SOT (End of Transmission) Word Label 302)

32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

ATTACHMENT 6
FMC/EFI INTERFACE

P	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	1	1
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

4870

**ATTACHMENT 6
FMC/EFI INTERFACE**

4871

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

4872 **ATTACHMENT 7 FMC/DATALINK INTERFACE**

4873 **Part A**

4874 **Text-Imbedded Error Check For Ground Computer/Airborne Computer Messages**

4875 **Section 1**

4876 **End-to-End Error Check**

4877 The FMC should provide the facility to perform an “end-to-end” error check on
4878 messages received and transmitted via ACARS. This is accomplished by
4879 designating the four characters preceding the suffix character (ETX) of the final
4880 block of the message as the “text-imbedded” error control field. This field will be
4881 used to verify successful transfer of each message to which the end-to-end error
4882 check applies.

4883 The allowable character set on which the end-to-end check is performed is defined
4884 in Attachment 10 to this Characteristic, entitled “ISO Alphabet No. 5 Subset for
4885 Ground Computer/Airborne Computer Message Exchange Via ACARS.” In addition,
4886 bit patterns of the characters appended to the message by the error checking
4887 procedure should be encoded per this ISO subset.

4888 The pad bit for each 7-bit character in the message is set to a binary zero prior to
4889 encoding or decoding of the error check.

4890 The error check to be used in the verification of end-to-end message integrity is a
4891 Cyclic Redundancy Check (CRC), described in Section 3 of this attachment,
4892 “Character-oriented CRC Calculation.” The CRC generator polynomial is the same
4893 CCITT polynomial introduced into ARINC Specification 429 by Supplement 12.

4894 **COMMENTARY**

4895 The end-to-end error check provides an assurance that a message
4896 composed on the ground has been correctly reconstructed by the
4897 FMC (and vice versa for messages originated by the FMC). It
4898 supplements the message integrity assurance provisions which are
4899 employed at various levels during the transfer of data from originator
4900 (e.g., the host airline computer) to the FMC. The normal message
4901 integrity checks which, onboard the aircraft, include BCS, word count
4902 check, parity check, etc., should continue to be exercised in
4903 accordance with ARINC 724() and this Characteristic.

4904 **Encoding the CRC at the Message Source**

4905 The procedure specifying the application of the CRC by the source on the message
4906 text is as follows. (See Section 3 of this attachment, Character-Oriented CRC
4907 Calculation, for a detailed description and example of this procedure.)

- 4908 • The CRC is to be applied to the message text beginning with the first
4909 character of the IMI, and ending with the last text character of the message.
- 4910 • When ordering bits in the message to be CRC'd, the Most Significant Bit
4911 (MSB) of the message is the least significant bit of the first character of the
4912 IMI. The Least Significant Bit (LSB) of the message is the most significant bit
4913 of the last text character of the message (excluding the ETX character).
- 4914 • After the source has been determined the CRC code from the 16-bit
4915 “remainder,” four hexadecimal characters representing these 4-bit bytes will

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

- 4916 be encoded as ISO #5 characters for the CRC field. The hexadecimal
4917 characters are determined by assigning 4 bits at a time in the order specified
4918 by the table in Section 2 of this attachment. The resulting four characters
4919 are placed at the end of the original message text to be transmitted, in the
4920 same transmission order as message text characters; i.e., the LSB of each
4921 character is transmitted first.
- 4922 • For character-oriented file transfer protocols, an ETX character follows the
4923 last character of the CRC code.

4924 **Decoding the CRC at the Message Sink**

- 4925 • Upon the receipt of a message which is error-free in accordance with the link
4926 level protocol, the sink will begin verification of the received message.
- 4927 • In order to verify the value of the CRC, the sink should first ensure each 7-bit
4928 ISO #5 character of the message text has the associated pad bit set to a
4929 binary zero, such that each character can be assumed to be 8 bits in length.
4930 The sink should also ensure any intermediate “end-of-block” characters
4931 have been deleted from the message text.
 - 4932 ○ The sink then operates on the four characters representing the CRC
4933 code to translate them back to the original 16-bit binary value calculated
4934 by the source; i.e., the reverse of the procedure specified above is
4935 performed. Finally, the sink verifies the integrity of the message text by
4936 applying either of the verification procedures specified for the receiving
4937 system in the following section on Character-Oriented CRC Calculation.
- 4938 • If the CRC confirms message integrity, the sink should accept the message.
4939 If message integrity is not confirmed (the CRC fails), the sink should discard
4940 the message. Further action will be defined by the user and will depend on
4941 the application of the message.

4942 **COMMENTARY**

4943 This CRC scheme is only compatible with uncorrupted messages
4944 from the host airline computer to the FMC and vice versa. No
4945 intermediate systems may be allowed to modify the message text
4946 portion of the transmission by character substitution or insertion (such
4947 as line feeds, carriage returns, etc.).

4948

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

4949 **Section 2**
4950 **ISO #5 Representation of Hexadecimal Characters for Binary Data Transmission**

4951 This document states that ISO #5 representation of hexadecimal characters should
4952 be used for the interchange of binary information between ground-based and
4953 airborne computers via ACARS. The following example illustrates the binary-to-ISO
4954 character conversion process.

TRANSMISSION ORDER ==>								
LSB				MSB				
1. BINARY DATA STREAM	1 0 1 1		0 1 0 0		0 0 0 0		0 0 1 1	
2. 4 BIT BYTES STREAM	1 0 1 1		0 1 0 0		0 0 0 0		0 0 1 1	
3. HEX CHARACTER VALUE	B		4		0		3	
4. ISO CHARACTER (COLUMN, ROW)	4,2		3,4		3,0		3,3	
5. ISO BIT VALUES (P = PAD BIT)	P	1 0 0 0 1 0	P	0 1 1 0 1 0 0	P	0 1 1 0 0 0 0	P	0 1 1 0 0 1 1
6. ISO BITS TRANSMITTED (PAD BITS set to 0)	0	1 0 0 0 1 0	0	0 1 1 0 1 0 0	0	0 1 1 0 0 0 0	0	0 1 1 0 0 1 1
7. CHARACTER TX ORDER	CHAR 4		CHAR 3		CHAR 2		CHAR 1	

4955

4956

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

4957
4958

Binary representation of ISO #5 hexadecimal characters is illustrated in the table below.

					BIT 7 ----->	0	0	0	0	1	1	1	1
					BIT 6 ----->	0	0	1	1	0	0	1	1
					BIT 5 ----->	0	1	0	1	0	1	0	1
BIT 4	BIT 3	BIT 2	BIT 1	Col → Row ↓	0	1	2	3	4	5	6	7	
0	0	0	0	0	00	10	20	30	40	50	60	70	
					NUL	DLE	SP	0	@	P	'	p	
0	0	0	1	1	01	11	21	31	41	51	61	71	
					SOH	DC1	!	1	A	Q	a	q	
0	0	1	0	2	02	12	22	32	42	52	62	72	
					STX	DC2	"	2	B	R	b	r	
0	0	1	1	3	03	13	23	33	43	53	63	73	
					ETX	DC3	#	3	C	S	c	s	
0	1	0	0	4	04	14	24	34	44	54	64	74	
					EOT	DC4	\$	4	D	T	d	t	
0	1	0	1	5	05	15	25	35	45	55	65	75	
					ENQ	NAK	%	5	E	U	e	u	
0	1	1	0	6	06	16	26	36	46	56	66	76	
					ACK	SYN	&	6	F	V	f	v	
0	1	1	1	7	07	17	27	37	47	57	67	77	
					EL	ETB	'	7	G	W	g	w	
1	0	0	0	8	08	18	28	38	48	58	68	78	
					BS	CAN	(8	H	X	h	x	
1	0	0	1	9	09	19	29	39	49	59	69	79	
					HT	EM)	9	I	Y	i	y	
1	0	1	0	10	0A	1A	2A	3A	4A	5A	6A	7A	
					LF	SUB	*	:	J	Z	j	z	
1	0	1	1	11	0B	1B	2B	3B	4B	5B	6B	7B	
					VT	ESC	+	;	K	[k	{	
1	1	0	0	12	0C	1C	2C	3C	4C	5C	6C	7C	
					FF	FS	,	<	L	\	l		
1	1	0	1	13	0D	1D	2D	3D	4D	5D	6D	7D	
					CR	GS	/	=	M]	m	}	
1	1	1	0	14	0E	1E	2E	3E	4E	5E	6E	7E	
					SO	RS	.	>	N	^	n	~	
1	1	1	1	15	0F	1F	2F	3F	4F	5F	6F	7F	
					SI	US	/	?	O	_	o	DEL	

4959

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

4960 **Section 3**
4961 **Character-Oriented CRC Calculation**

4962 **Generation of the CRC Code**

4963 This CRC calculation method is based on the premise that a message may be
4964 represented as the coefficients of a polynomial, $G(x)$, having k terms, where k is the
4965 number of bits in the message.

COMMENTARY

4967 The notation used to describe the CRC is based on the property of
4968 cyclic codes that a code vector such as 1000000100001 can be
4969 represented by a polynomial $G(x) = x^{12} + x^5 + 1$. The elements of a k
4970 element code vector are thus the coefficients of a polynomial of order
4971 $k - 1$. In this application, these coefficients can have the value 0 or 1,
4972 and all polynomial operations are performed modulo 2.

4973 To create the polynomial $G(x)$ representing the message, the terms are ordered as
4974 follows:

- The coefficient of the most significant bit of $G(x)$, (x^{k-1}), is the LSB of the first character of the message.
- The coefficient of the least significant bit of $G(x)$, (x^0), is the MSB of the last character of the message.

4979 For example, if the message, $G(x)$, is 'FPR', the first character is 'F' which is
4980 represented by the code 46 hex or 01000110 binary. The rightmost bit of 'F', 0 in
4981 this example, is therefore the most significant bit of $G(x)$. Similarly, the last
4982 character, 'R', is represented by the code 52 hex or 01010010 and the least
4983 significant bit of $G(x)$ is the leftmost bit of 'R', which is 0. The message FPR has 24
4984 bits so k has a value of 24.

4985 The actual transmission order for the message is MSB to LSB as follows:

4986 Note slashes (/) are used for octet separation only.

Transmission Order ==>		
LSB		MSB
01010010	01010000	01000110
R	P	F

4987 In order to illustrate the mathematical procedure, the entire message is transposed
4988 for representation as a bit stream with the MSB at the left and the LSB at the right to
4989 yield:

Transmission Order ==>		
MSB		LSB
01100010	00001010	01001010

4990

4991

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

4992 Expressing the bit stream for this example as a polynomial, $G(x)$, yields:

$$G(x) = x^{22} + x^{21} + x^{17} + x^{11} + x^9 + x^6 + x^3 + x^1$$

4993

4994 To generate the CRC code the generator polynomial is defined as:

$$P(x) = x^{16} + x^{12} + x^5 + 1$$

4995 The CRC code is the one's complement of the remainder obtained from the modulo
4996 2 division of:

$$\frac{x^{16} G(x) + x^k (x^{15} + x^{14} + x^{13} + \dots + x^2 + x + 1)}{P(x)} = Q(x) + \frac{R(x)}{P(x)}$$

4997 where $Q(x)$ is the quotient and $R(x)$ is the remainder.

4998 Note: The addition of $X^{16}G(x)$ and $x^k(x^{15} + x^{14} + x^{13} + \dots + x^2 + x + 1)$ is
4999 modulo 2 and is equivalent to inverting the 16 most significant
5000 bits of $G(x)$ and appending a bit string of 16 zeroes to the
5001 lower order end of $G(x)$.

5002 If the 16-bit binary CRC code were appended to the original $G(x)$ the resulting
5003 message, $M(x)$, would be of length n , where $n = k + 16$. This is equivalent to the
5004 following operation:

$$M(x) = x^{16} G(x) + (16\text{-bit})\text{CRC}(\text{Modulo } 2).$$

5005 When the 16-bit binary CRC is transformed into four ISO #5 characters (8 bits
5006 each), the final message to be transmitted, $M^*(x)$ is now of length $N^* = k + 32$, and
5007 so

$$M^*(x) = x^{32} G(x) + (32\text{-bit})\text{CRC}(\text{Modulo } 2).$$

5008

5009

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5010 Using the above example with 'FPR' as $G(x)$, the CRC calculation gives a
5011 remainder of 00111111/11010010, where the left-hand 0 is the most significant bit
5012 and the right-hand 0 is the least significant bit (see Appendix 7 of ARINC
5013 Specification 429, Mathematical Example of CRC Encoding/Decoding, for a detailed
5014 example of the mathematical operations involved to arrive at this remainder).

5015 The CRC code is the one's complement of the remainder, or 11000000/00101100.
5016 This CRC code is converted to a four character (ISO #5) code and appended to the
5017 end of the message over which the CRC code was calculated by applying steps 1
5018 through 7 in Section 2 as follows:

- 5019 1. Because the message was transposed in this illustration to generate the
5020 CRC code, the resultant CRC code should also be transposed from left
5021 to right. Transposing 11000000/00101101 yields 10110100/00000011.
5022 This operation returns the CRC code to the same transmission order as
5023 the original message, with the MSB to the right and the LSB to the left.
- 5024 2-3. Separating the 16-bit transposed value into 4-bit segments and
5025 expressing it in hex yields B403.
- 5026 4-7. The four characters representing this value are coded as ISO #5
5027 characters and appended to the message in the order: MS to LS
5028 character. For this example, the order is 3, 0 4, B.

5029 The complete message plus CRC code for this example (read left to right) is:

5030 FPR304B

5031 The transmission order of this message is right to left, as:

5032 B403RPF ==>

5033 **Section 4**
5034 **Verification (Decoding) of the CRC Code**

5035 At the receiving system, the four characters representing the CRC code are
5036 converted back into the original binary CRC code; i.e., the steps in Section 2 are
5037 performed in reverse order. At this point, verification (decoding) of the CRC is
5038 accomplished by either of the following methods:

- 5039 1. After conversion back to the binary CRC code, the 16-bit binary CRC is
5040 appended to the message $G(x)$ (in the same transmission order as the
5041 message) resulting in the message $M(x)$, of length n , where $n = k + 16$ and

$$M(x) = x^{16} G(x) + (16\text{-bit})\text{CRC (Modulo 2)}.$$

5042 $M(x)$ is multiplied by X^{16} , added to the product $x^n(x^{15} + x^{14} + x^{13} + \dots + x^2 + x + 1)$, and
5043 divided by $P(x)$ as follows (where $n = k + 16$):

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5044 This CRC procedure is designed to create a constant remainder for error free
5045 messages. If the transmission of the serial incoming bits plus CRC code (i.e., $M(x)$)
5046 is error free, then the remainder, $Rr(x)$ is always:

Transmission Order ==>	
MSB	LSB
00011101	00001111

5047 (coefficients of x^{15} through x^0 , respectively).

5048 2. An alternate procedure for the receiving system, which will ensure the same
5049 data integrity, is to recompute the CRC code on the received message less
5050 the four CRC characters (using the same generator polynomial). The
5051 generated CRC code is then compared with the one received. The following
5052 steps are performed:

- The received message, $M^*(x)$, is stripped of the four CRC characters, leaving only $G(x)$. The four characters representing the CRC code are converted back into the original binary 16-bit CRC code; that is, the steps in Section 2 are performed in reverse order.
- A binary CRC code is generated for $G(x)$ using the same encoding method described for the message source.
- The generated binary CRC code is compared with the 16-bit binary CRC code stripped from the message and if they are identical, the message is assumed to be free of errors and exactly represents the message transmitted by the source.

5063

5064

ATTACHMENT 7
FMC/DATALINK INTERFACE

5065 **Part B**
5066 **Table-Based Formats for FMC IMI/IEI Messages**

5067 **Section 1**
5068 **Definition of Terms Used In Data Link Messages**

5069 All uplink and downlink messages are formatted using a consistent set of syntax
5070 rules. The following definitions are used to describe parts of a message:

5071 **IMI (Imbedded Message Identifier)**

5072 The IMI is a three alphanumeric character identifier. An IMI is placed at the
5073 beginning of the text to identify the relative message content. Only one IMI is used
5074 per message. The same IMI can be used for both uplinks and downlinks.

5075 Examples of IMIs are: FPN, PER, LDI, POS, REJ, etc.

5076 **IEI (Imbedded Element Identifier)**

5077 The IEI is a two alpha character identifier that is used to group one or more
5078 elements.

5079 Examples of IEIs are: FN, RP, RM, CG, RW, etc.

5080 **Element**

5081 An element is the smallest omissible part of an uplink or downlink message. It can
5082 be a single parameter, or a number of parameters. A single parameter element is
5083 defined as either fixed length or variable length with a defined maximum number of
5084 characters. Directional elements are single parameter elements that must contain
5085 either a single alpha character preceding one or more numeric characters, or one or
5086 more numeric characters followed by an alpha character. The alpha character
5087 indicates the direction (or qualifier) that is associated with the numeric value.
5088 Directional elements can be fixed or variable length.

5089 A multi-parameter element is used to group similar or related information. Multi-
5090 parameter elements can be fixed length, variable length or a combination of fixed
5091 and variable length. However, only one field within a multi-parameter element can
5092 be of variable length. There is no delimiter between single data elements within a
5093 multi-parameter element.

5094 Example:

5095 OAT: P23 Single parameter element OAT is +23 °C.

5096 V1VRV2: 131139147 Multi-parameter element is composed of:

5097 V1 = 131 knots

5098 VR = 139 knots

5099 V2 = 147 knots

5100

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5101 **Parameter**

5102 A parameter is an element or part of an element that has the following attributes:

- 5103 1. Type - Variable or Fixed
- 5104 2. Element Type - Alpha (A - Z)
- 5105 3. Alphanumeric (A - Z, 0 - 9, dash)
- 5106 4. Numeric (0 - 9)
- 5107 5. Character Length - Number of Characters
- 5108 6. Scaling Factor - Identifies the multiplication factor
- 5109 7. Units - Identifies The Parameter Units

5110 **List**

5111 A list is a repeatable group of elements within a data link message. Each list
5112 contains one or more elements.

5113 **Message Format Example**

5114 The following is an example of a Predicted Wind Information uplink message (the
5115 IMI for this message is PWI, the IEI is DD for Descent Wind Data and the IEI DS is
5116 for Descent Wind Temperature).

5117 Example:

5118 PWI/DD350270060.310270045.140260040/DS320M50.250M30.100M10.010P10:0
5119 60,,M04,1013

Altitude/Wind List (up to ten allowed):	
Altitude	Wind
FL350	270/060 kts
FL310	270/045 kts
14000	260/040 kts

5120

Altitude/Temperature List (up to ten allowed):	
Altitude	Temperature
FL320	- 50 °C
FL250	- 30 °C
FL100	- 10 °C
1000ft	+10 °C

5121

Remaining Elements:	
TAI On Altitude	6000 ft
TAI On/Off Altitude	(Missing Data)
Des Transition Altitude	(Missing Data)
Descent ISA Deviation	-4 °C
QNH	1013 Hectopascals

5122 **Flight Plan Definition**

5123 Each independent part of a flight plan is called a Flight Plan Element (FPE). Each
5124 FPE is preceded by a Flight Plan Element Identifier (FPEI) which identifies the

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5125 group of data that follows. These FPEs are used in combination to fully define the
5126 FMC flight plan in both the uplinks and downlinks. The flight plan definition is used
5127 to create a flight plan (either active or inactive) or modify an existing flight plan.

5128 **FPEI (Flight Plan Element Identifier)**

5129 FPEIs are used to identify special elements, which are used in the (Flight Plan)
5130 Route IEIs of RP, RI, RM, and RA. Examples of Flight Plan Element Identifiers are
5131 :H:, :V:, “.”, “..”, “DA”, etc.

5132 **FPE (Flight Plan Element)**

5133 A Flight Plan Element (FPE) is a special type of variable or fixed length element (or
5134 group of elements) used in RP, RI, RM, or RA IEIs.

5135 Examples of FPEs (and their corresponding FPEIs) are shown below:

FPE	FPEI	Example
Departure Airport	:DA:	KJFK
Arrival Airport	:AA:	KLAX
Company Route	:CR:	JFKLAX07
Waypoint Spd/Alt/Time	:V:	N47W125,250,AT1250
Direct to Waypoint	..	BLAKO
Departure Runway	:R:	04O
Airway VIA	.	J36
Arrival Procedure	:A:	DOWNE
Arrival Transition	.	HECTR
Arrival Runway	(XXX)	(04O)

5136 The last four items in the table illustrate the dual role of the special character “.”
5137 which is context dependent. It can be used as a “VIA” indicator for an airway, or as
5138 a transition indicator if it is preceded by an “:A:” (or an “:AP:” or a :D:), as in
5139 DOWNE.HECTR(04O).

5140 Example: FPN/RM..NIA.J48.BENNY,N33240W116250:AT
5141 :NIA-M0400,280,AT1400:A:BENE3.NIA:AP:ILS32R.EDD

- 5142 • IMI (FPN) followed by
- 5143 • IEI (RM) followed by
- 5144 • Direct to waypoint NIA
- 5145 • Followed by a via airway J48
- 5146 • To waypoint BENNY with optional lat/lon definition
- 5147 • Then an along track offset definition of NIA -40.0 with an associated speed
5148 restriction of 280 at 14,000 feet
- 5149 • Followed by a standard arrival BENE3 with a NIA transition and the standard
5150 approach of ILS32R with an EDD transition.

5151 **Uplink and Downlink Delimiters**

5152 When constructing an uplink or a downlink message, delimiters are used to
5153 consistently identify the information in the message. The delimiters supersede each
5154 other in the order given (i.e., ‘/’ has the highest priority).

5155

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

- 5156 **IEI Delimiter ‘/’ solidus, Character 2/15**
- 5157 This character precedes each Imbedded Element Identifier which identifies the
5158 beginning of predefined group of elements. This delimiter is always followed by two
5159 alpha characters.
- 5160 **List Terminator ‘:’ colon, Character 3/10**
- 5161 The colon is an end of list control character. This character is used to terminate a
5162 repetitive list structure.
- 5163 **List Entry Terminator ‘.’ period, Character 3/11**
- 5164 The period is a list entry terminator. This character is used to terminate each list
5165 entry (group of elements). List entries are groups of parameters or elements that
5166 are repeated one or more times.
- 5167 **Element Terminator ‘,’ comma, Character 2/12**
- 5168 Commas are used to separate elements (unless they have been separated by or
5169 terminated with another control character; i.e., ‘/’, ‘:’, ‘.’ or another FPEI in the case
5170 of RI, RM, RP, or RAs). Missing elements are denoted by consecutive commas.
- 5171 **Request Messages**
- 5172 To allow the receiving system to recognize the difference between a message that
5173 is transmitting data and a message that is requesting data, a special IMI has been
5174 reserved for requests. This IMI (‘REQ’ is the default) precedes any request
5175 message. The data that follows this IMI depends on whether the message is an
5176 uplink or a downlink.
- 5177 **Uplink Request A Downlink**
- 5178 The request IMI is followed by an element which contains the IMI of the “reply.” This
5179 is optionally followed by a comma (element terminator), which is optionally followed
5180 by a list of elements that define the IEIs to be included in the downlink (all separated
5181 by a list entry terminator). An IMI, or IEIs following the REQ are considered
5182 elements in the uplink.
- 5183 Example: REQPRG,DT.FN
- 5184 This example is a request from the ground for the current destination and current
5185 flight number which results in a downlink of:
- 5186 PRG/DTKSEA/FNSFOSEA001
- 5187 **Downlink Requesting An Uplink**
- 5188 In a downlink request, the request IMI is followed by the requested information.
- 5189 Example: REQFPN/COKSEAKSFO02
- 5190 This example is a request from the FMC for a flight plan, the request includes the
5191 entered company route as a data element.
- 5192

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5193 **Section 2**
5194 **IMI/IEI Relationships**

5195 This section identifies the IEIs normally associated with IMIs that have been
5196 defined. This section will be updated as the need for new IMIs and IEIs is identified.
5197 Users are requested to advise the AEEC staff when such a need arises. The basic
5198 IEIs are listed in bold text, the dependent IEIs are listed in italics and the extended
5199 IEIs are listed as normal text.

5200

Uplink Messages										
FPN	FPC	PER	LDI	PWI	PWM	POS	REQ	ALT	LIM	NDB
RP	RP	PD	RW	WD	WM	RF	FPN	AI	PL	SD
RI	RI	SN	CG	DD	DD	SN	FPC	AE		
RM	RM		SN	CB	CB		PER	AN		
FN	FN			AW	AW		LDI	AS		
RA	RA			CS	CS		POS			
MW	GA			DS	DS		PRG			
SD	SN			SN	SN		PRF			
SN				PG	PG		TOD			
				TR	TM		XXX Report IEIs			

5201

5202 Note: XXX in 'XXX Report IEIs' is an unrecognizable IMI that is followed by
5203 recognizable IEIs. On some systems, XXX may not support all IEI's. The minimum
5204 set of IEI's supported is the following: RP, FN, PR, DT, CA, GA.

5205

ATTACHMENT 7
FMC/DATALINK INTERFACE

5206

Downlink Messages																			
Reports											Requests Required								
TOD	PRF	FPX	PER	LDI	POS	PRG	FPM	ALT	LIM	NDB	REJ	RES	FPN	PER	LDI	PWI	PWM	ALT	EFB
TD	GL	RP	PR	RR	SP	DT		AR		AP	FPN	AK	CO	PQ	PQ	DQ	DQ	AA	FR
WI	GP	FN	TS	TS	TS	FN		WR		ED	FPC	AC	FN	SP	SP	WQ	MQ	AB	PP
TS	FP	SP	GA	GA	GA	TS				NV	PER	RJ	SP	GA	GA	SP	SP	SP	
GA	FH	RA	CA	CA	CA	GA				WP	LDI	FS	GA	CA	CA	GA	GA	GA	
CA	AR	TS				CA					PWI	GA	CA	TS	TS	CA	CA	CA	
	TS	GA									PWM	SN	TS			TS	TS	TS	
	GA	CA									POS	CA	RA			CQ	DU	AQ	
	CA										REQ		PS			WR			
											NDB					PH			
											TS					CU			
											GA					DU			
											CA								

5207

Note that FPX represents FPN and FPC.

5208

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5209 **Section 3**
5210 **Uplink IMI Definitions**

5211 This section lists the currently defined uplink IMIs and provides a brief description of
5212 the associated message content. This section will be updated as the need for new
5213 IMIs is identified. Users are requested to advise the AEEC staff when such a need
5214 arises.

IMI	DESCRIPTION	DEFINITION
ALT	ALTERNATE DATA	Contains alternate airport information generated by the airline.
FPC	FLIGHT PLAN	Flight plan information supplied by ATC.
FPN	FLIGHT PLAN	Flight plan information generated by the airline.
LDI	LOAD INFORMATION	Contains load information for takeoff generated by the airline.
LIM	PERFORMANCE LIMITS DATA	Contains performance limits data that is provided by the airline.
NDB	AIRLINE DATABASE	Contains supplemental Navigation Data Base, Effectivity Date, Supplemental Navigation Airport, Navaid, and Waypoint definitions generated by the airline.
PER	PERFORMANCE INITIALIZATION	Contains performance initialization data generated by the airline.
POS	POSITION	Contains specified triggers for automatic position report information generated by the airline.
PWI	PREDICTED WIND DATA	Contains climb, alternate, enroute, descent wind and/or temperature information that is to be applied to the flight plan. Generated by the airline.
PWM	PREDICTED WIND MODIFICATION	Contains alternate, enroute, descent wind and/or temperature information that is to be applied to the modified active flight plan. Descent winds and temperatures data may be applied regardless of the route status. Generated by the airline ground station.
REQ	REQUEST	Contains a type of request (FPN/FPC, PER, LDI, POS, PRG, PRF, TOD, XXX) for information generated by the airline.
TAC	RESERVED	
TAR	RESERVED	

5215

5216

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5217 **Section 4**5218 **Downlink IMI Definitions**

5219 This section lists the currently defined downlink IMIs and provides a brief description
5220 of the associated message content. This section will be updated as the need for
5221 new IMIs is identified. Users are requested to advise the AEEC staff when such a
5222 need arises.

IMI	DESCRIPTION	DEFINITION
ALT	ALTERNATE DATA	Provides the airline with alternate airport information.
FPC	FLIGHT PLAN	Provides flight plan report to ATC.
FPM	FLIGHT PLAN	Provides flight plan modification information to the airline.
FPN	FLIGHT PLAN	Provides flight plan information to the airline.
LDI	LOAD INFORMATION	Provides the airline with a load information data report for a single runway.
LIM	PERFORMANCE LIMITS DATA	Provides the airline with the current FMC performance limits.
NDB	AIRLINE DATA BASE	Provides the contents of the supplemental data base to the airline.
PER	PERFORMANCE INITIALIZATION	Provides performance initialization data report to the airline.
POS	POSITION	Provides the airline with current position report information.
PRF	PREFLIGHT	Provides preflight report to the airline.
PRG	PROGRESS (ETA) REPORT	Provides the airline with progress report data in response to a trigger.
PWI	PREDICTED WIND DATA	Provides the airline with climb, enroute, descent wind and/or temperature information that is to be applied to the flight plan.
PWM	PREDICTED WIND MODIFICATION	Provides the airline with enroute, descent wind and/or temperature information that is to be applied to the modified active flight plan. Descent wind data may be applied regardless of the route status.
REJ	DOWNLINK REJECTION	Provides ATC or the airline with information referencing a rejected uplink message.
REQ	REQUEST	Requests (FPN/FPC, PER, LDI, PWI/PWM) information from the airline or ATC.
RES	DOWNLINK RESPONSE	Provides a response to an uplink message.
TAC	RESERVED	
TAR	RESERVED	
TOD	TOP OF DESCENT	Provides top of descent data to the airline.

5223

5224

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5225 **Section 5**
5226 **Uplink IEIs**

5227 This section lists the currently defined uplink IEIs. This section will be updated as
5228 the need for new IEIs is identified. Users are requested to advise the AEEC staff
5229 when such a need arises.

IEI	DESCRIPTION
AE	COMPANY PREFERRED ALTERNATES DATA
AI	ALTERNATE INFORMATION DATA
AN	ALTERNATES INHIBIT DATA
AW	ALTERNATE WIND DATA
AS	ALTERNATES FLIGHT LIST DATA
CA	COMPANY DISTRIBUTION
CB	CLIMB WIND DATA
CG	TAKEOFF CENTER OF GRAVITY
CS	CLIMB TEMPERATURE DATA
DD	DESCENT FORECASTS
DS	DESCENT TEMPERATURE DATA
FN	FLIGHT NUMBERS
GA	GROUND ADDRESS
MW	MEAN WIND DATA
PD	PERFORMANCE INITIALIZATION DATA
PG	PAGE INFO
PL	PERFORMANCE LIMITS
RA	ALTERNATE ACTIVE/INACTIVE ROUTE
RF	POSITION REPORT FIX
RI	INACTIVE ROUTE
RM	ROUTE MODIFICATION
RP	ACTIVE ROUTE
RT	REQUIRED TIME OF ARRIVAL
RW	RUNWAY DATA
SD	SUPPLEMENTAL NAVIGATION DATABASE
SN	MESSAGE SEQUENCE NUMBER
TR	WAYPOINT TROPOPAUSE DATA
TM	MOD WAYPOINT TROPOPAUSE DATA
TS	TIME STAMP
WD	ENROUTE WIND DATA
WE	WIND VECTOR MAGNITUDE DIFFERENCE
WL	WAYPOINT LIST
WM	ENROUTE WIND MODIFICATION

5230

5231

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5232 **Section 6**
5233 **Downlink IEIs**

5234 This section lists the currently defined downlink IEIs. This section will be updated as
5235 the need for new IEIs is identified. Users are requested to advise the AEEC staff
5236 when such a need arises.

IEI	DESCRIPTION
AA	COMPANY PREFERRED ALTERNATES REQUEST
AB	ALTERNATES FLIGHT LIST REQUEST
AC	ACCEPT
AK	ACKNOWLEDGE
AP	SUPPLEMENTAL NAV DATA BASE AIRPORTS
AQ	WEATHER REQUEST
AR	ALTERNATE INFORMATION REPORT
CA	COMPANY DISTRIBUTION
CO	COMPANY ROUTE REQUEST
CQ	CLIMB FORECAST REQUEST
CU	CLIMB TEMPERATURE REQUEST
DI	DOWNLINK TIME INFORMATION
DQ	DESCENT FORECAST REQUEST
DT	DESTINATION REPORT
DU	DESCENT TEMPERATURE REQUEST
ED	SUPPLEMENTAL EFFECTIVITY DATE
FH	FLIGHT PLAN HISTORY
FN	FLIGHT NUMBER
FP	FUEL PLANNING
FR	FORECAST REPORT
GA	GROUND ADDRESS
GL	GENERAL DATA
GP	GENERAL DIRECTIONS
MQ	MOD WIND REQUEST
NV	SUPPLEMENTAL NAV DATA BASE NAVAIDS
PH	FLIGHT PHASE
PL	PERFORMANCE LIMITS
PP	PERFORMANCE PARAMETERS REPORT
PQ	PERFORMANCE INITIALIZATION REQUEST
PR	PERFORMANCE INITIALIZATION REPORT
PS	POSITION REPORT
RA	ALTERNATE ACTIVE/INACTIVE ROUTE
RJ	REJECT
RP	ACTIVE ROUTE
RQ	RUNWAY DATA REQUEST
RR	RUNWAY DATA REPORT
SN	MESSAGE SEQUENCE NUMBER
SP	SCRATCHPAD
TD	TOP OF DESCENT REPORT
TS	TIME STAMP
WI	WAYPOINT INFORMATION
WQ	WIND REQUEST
WP	SUPPLEMENTAL NAV DATA BASE WAYPOINTS

ATTACHMENT 7
FMC/DATALINK INTERFACE

WR	ALTERNATE AIRPORT WEATHER REQUEST
----	-----------------------------------

5237

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5238 **Section 7**
5239 **IEI and Associated Elements**

5240 This section provides a guideline for relating elements to IEIs and defines the
5241 default text for all IEIs. This section is separated into basic IEIs (also dependent
5242 IEIs) and their associated elements, extended IEIs and their associated elements,
5243 and IMIs and their associated elements. The default IEI content and structure is
5244 indicated by 'IEI CONTENT'. The content and order of list entries are indicated by
5245 'LIST ENTRY'. Examples are provided to clarify the default text.
5246

BASIC IEIs AND ASSOCIATED ELEMENTS

AC	<u>ACCEPT</u> EXAMPLE: /AC12345,451 IEI CONTENT MESSAGE SEQUENCE NUMBER STIMULUS CODE	Consists of a variable length field defining the message sequence number and stimulus code.
AK	<u>ACKNOWLEDGE</u> EXAMPLE: /AK12345,451 IEI CONTENT MESSAGE SEQUENCE NUMBER STIMULUS CODE	Consists of a variable length field defining the message sequence number and stimulus code.
CA	<u>COMPANY DISTRIBUTION</u> EXAMPLE: /CAFLTOPS IEI CONTENT COMPANY DISTRIBUTION	Consists of an airline internal distribution identifier.
CG	<u>TAKEOFF CENTER OF GRAVITY</u> EXAMPLE: /CG200 IEI CONTENT TAKEOFF CENTER OF GRAVITY	Consists of a variable length field.
CO	<u>COMPANY ROUTE REQUEST</u> EXAMPLE: /COKBFIKSFO01 IEI CONTENT COMPANY ROUTE	Consists of a variable length field.
DD	<u>DESCENT FORECAST</u> EXAMPLE: /DD350270060.310270045.140260040.100230020.06030. 180.M04.1013 IEI CONTENT LIST ENTRY: ALTITUDE AND WIND TAI ON ALTITUDE TAI ON/OFF ALTITUDE DESCENT TRANSITION ALTITUDE DESCENT ISA DEVIATION QNH	Consists of a list of up to ten altitude wind entries, followed by the additional descent forecast elements.
DQ	<u>DESCENT FORECAST REQUEST</u> EXAMPLE: /DQ390 IEI CONTENT TOP OF DESCENT ALTITUDE	Consists of a single parameter element defining the top of descent altitude.
DS	<u>DESCENT TEMPERATURE</u> EXAMPLE: /DS320M50.250M30.010P10 IEI CONTENT	Consists of a list of up to ten altitude temperature entries

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

LIST ENTRY: ALTITUDE AND OAT		
DU	<u>DESCENT TEMPERATURE REQUEST</u> EXAMPLE: /DU370 IEI CONTENT TOP OF DESCENT ALTITUDE	Consists of a single parameter element defining the top of Descent Altitude.
DT	<u>DESTINATION REPORT</u> EXAMPLE: /DTKSFO,28L,0234,190023,003 IEI CONTENT ARRIVAL AIRPORT IDENT DESTINATION RUNWAY IDENT PREDICTED FUEL REMAINING ETA AT DESTINATION REPORT STIMULUS	Consists of a fixed format, fixed order field.
FN	<u>FLIGHT NUMBER</u> EXAMPLE: /FNUAL1633A IEI CONTENT FLIGHT NUMBER	Consists of a variable length field.
GA	<u>GROUND ADDRESS</u> EXAMPLE: /GATULDDAA.HEQXESA IEI CONTENT LIST ENTRY: GROUND ADDRESS	Consists of a list of addresses. A copy of the network address not directly used for message routing purposes.
PD	<u>PERFORMANCE INITIALIZATION DAT.</u> EXAMPLE: /PD2113,,270,,0150,23,,,,P12,M34 IEI CONTENT ZERO FUEL WEIGHT CRUISE CENTER OF GRAVITY CRUISE ALTITUDE PLAN OR BLOCK FUEL RESERVE FUEL COST INDEX CRUISE WIND TOC OR CRUISE TEMPERATURE CLIMB TRANSITION ALTITUDE FUEL FLOW FACTOR DRAG FACTOR PERF FACTOR IDLE FACTOR TROPopause ALTITUDE TAXI FUEL ZERO FUEL WEIGHT CENTER OF GRAVITY MINIMUM FUEL TEMPERATURE	Consists of a fixed format, fixed order field
PQ	<u>PERFORMANCE INITIALIZATION REQUEST</u> EXAMPLE: /PQ2113,,270,,0150,23,,,,P12,M34 IEI CONTENT ZERO FUEL WEIGHT CRUISE CENTER OF GRAVITY CRUISE ALTITUDE PLAN OR BLOCK FUEL RESERVE FUEL COST INDEX	Consists of a fixed format, fixed order field.

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

	CRUISE WIND	
	TOC OR CRUISE TEMPERATURE	
	CLIMB TRANSITION ALTITUDE	
	FUEL FLOW FACTOR	
	DRAG FACTOR	
	PERF FACTOR	
	IDLE FACTOR	
	TROPOPAUSE ALTITUDE	
	TAXI FUEL	
	ZERO FUEL WEIGHT CENTER OF GRAVITY	
	MINIMUM FUEL TEMPERATURE	
PR	<u>PERFORMANCE INITIALIZATION REPORT</u>	Consists of a fixed format, fixed order field.
	EXAMPLE: /PR2633,,270,0520,,0150,23,,,,P12,M34	
	<u>IEI CONTENT</u>	
	CURRENT GROSS WEIGHT	
	CRUISE CENTER OF GRAVITY	
	CRUISE ALTITUDE	
	FUEL REMAINING	
	PLAN OR BLOCK FUEL	
	RESERVE FUEL	
	COST INDEX	
	CRUISE WIND	
	TOC OR CRUISE TEMPERATURE	
	CLIMB TRANSITION ALTITUDE	
	FUEL FLOW FACTOR	
	DRAG FACTOR	
	PERF FACTOR	
	IDLE FACTOR	
	TROPOPAUSE ALTITUDE	
	TAXI FUEL	
	ZERO FUEL WEIGHT	
	ZERO FUEL WEIGHT CENTER OF GRAVITY	
	MINIMUM FUEL TEMPERATURE	
RF	<u>POSITION REPORT FIX</u>	Consists of a list of reporting points which when sequenced in flight, trigger the position report.
	EXAMPLE: /RFORTIN.SEA.N3545W090256	
	<u>IEI CONTENT</u>	
	LIST ENTRY: WAYPOINT SEQUENCE	
RI	<u>INACTIVE ROUTE</u>	A variable length field that consists of flight plan elements that replace the inactive route. These flight plan elements define a flight plan in approximately the same fashion as ATC clearance language.
	:DA: DEPARTURE AIRPORT IDENT	
	:AA: ARRIVAL AIRPORT IDENT	
	:CR: COMPANY ROUTE	
	:R: DEPARTURE RUNWAY IDENT	
	:D: DEPARTURE PROCEDURE	
	:F: FLIGHT PLAN SEGMENT	
	PUBLISHED IDENT	
	LATITUDE/LONGITUDE	
	PLACE BEARING/PLACE BEARING	
	PLACE BEARING DISTANCE	

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

:ON: START OF DESIGNATED FLIGHT PLAN SEGMENT
 :A: ARRIVAL PROCEDURE
 :AP: APPROACH PROCEDURE
 (): ARRIVAL RUNWAY IDENT
 :V: WAYPOINT SPEED/ALTITUDE/TIME
 :H: HOLD AT WAYPOINT
 :WS: WAYPOINT STEP CLIMB
 :AT: ALONG TRACK WAYPOINT
 :RP: REPORTING POINTS
 .. DIRECT FIX
 . TRANSITION OR AIRWAY VIA
 :F.: AIRWAY INTERCEPT
 :IC: INTERCEPT COURSE FROM

RJ	<u>REJECT</u>	Consists of a variable length field defining the message sequence number and the stimulus code.
	EXAMPLE: /RJ12345,451 <u>IEI CONTENT</u> MESSAGE SEQUENCE NUMBER STIMULUS CODE	
RP	<u>ACTIVE/INACTIVE ROUTE</u>	A variable length field that consists of flight plan elements. These flight plan elements define a flight plan in approximately the same fashion as ATC clearance language.
	THE FORMAT IS THE SAME AS DESCRIBED FOR THE RI IEI DESCRIPTION.	
RQ	<u>RUNWAY DATA REQUEST</u>	Consists of a fixed-list format, fixed order field consisting of data for up to two runway/intersection combinations.
	EXAMPLE: /RQKSEA,31L,A9,,,156,2613,,P15,140012,1,15,2,,P40 <u>IEI CONTENT</u> LIST ENTRY: DEPARTURE AIRPORT IDENT	TAKEOFF RUNWAY IDENT RUNWAY INTERSECTION POSITION SHIFT RUNWAY LENGTH REMAINING TAKEOFF CENTER OF GRAVITY CURRENT GROSS WEIGHT REFERENCE TAKEOFF GROSS WEIGHT OAT OR SAT TAKEOFF RUNWAY WIND TAKEOFF RUNWAY CONDITION TAKEOFF FLAPS TAKEOFF THRUST RATING VTR PERCENTAGE SELECTED TEMPERATURE BARO SETTING FLAP/SLAT CONFIGURATION THRUST REDUCTION ALTITUDE ACCELERATION ALTITUDE ENGINE-OUT ACCELERATION ALTITUDE
RT	<u>REQUIRED TIME OF ARRIVAL</u>	Consists of a fixed format, fixed order field
	EXAMPLE: /RTVAMPS,143000 <u>IEI CONTENT</u> RTA WAYPOINT IDENT RTA TIME	

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

OPTIONAL RTA CONSTRAINT		
RW	<u>RUNWAY DATA</u>	Consists of a fixed-list entry format field consisting of data for up to six runway/intersection combinations followed by a departure airport EXAMPLE: /RW13R,A9,PO9,,0,1125,2613,2850,P23,U05,250015,1,15,1,08,P38,131139147,0,15,1135,,130137145.31L,ETC:KBF1 <u>IEI CONTENT</u> LIST ENTRY: TAKEOFF RUNWAY IDENT RUNWAY INTERSECTION POSITION SHIFT RUNWAY LENGTH REMAINING INVALID FLAG TRIM REFERENCE TAKEOFF GROSS WEIGHT STANDARD LIMIT TAKEOFF GROSS WEIGHT OAT OR SAT TAKEOFF RUNWAY SLOPE TAKEOFF RUNWAY WIND TAKEOFF RUNWAY CONDITION TAKEOFF FLAPS TAKEOFF THRUST RATING VTR PERCENTAGE ASSUMED TEMPERATURE TAKEOFF SPEEDS ALTERNATE THRUST RATING ALTERNATE FLAPS ALTERNATE TRIM ALTERNATE LIMIT TAKEOFF GROSS WEIGHT ALTERNATE TAKEOFF SPEEDS ALTERNATE ASSUMED TEMPERATURE FLAP/SLAT CONFIGURATION ALTERNATE FLAP/SLAT CONFIGURATION ALTERNATE VTR PERCENTAGE DEPARTURE AIRPORT IDENT BARO SETTING THRUST REDUCTION ALTITUDE ACCELERATION ALTITUDE ENGINE-OUT ACCELERATION ALTITUDE NOISE ABATEMENT END ALTITUDE NOISE ABATEMENT SPEED NOISE ABATEMENT DERATE THRUST NOISE ABATEMENT THRUST NOISE ABATEMENT START ALTITUDE
SN	<u>MESSAGE SEQUENCE</u> EXAMPLE: /SN12345 <u>IEI CONTENT</u> MESSAGE SEQUENCE NUMBER	Consists of a variable length format field defining the message sequence number.
SP	<u>SCRATCHPAD</u> EXAMPLE: /SPSCRATCHPADMESSAGE <u>IEI CONTENT</u>	Consists of a variable length field that contains the contents of the CDU scratch pad.

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

SCRATCHPAD		
TS	<u>TIME STAMP</u> EXAMPLE: /TS152533,200290 <u>IEI CONTENT</u> GREENWICH MEAN TIME DATE	Consists of a fixed length field.
WD	<u>ENROUTE WIND DATA</u> EXAMPLE: /WD310,SEA,120015,350M35, N04030W120,130090 <u>IEI CONTENT</u> WIND ALTITUDE LIST ENTRY: WAYPOINT NAME OR POSITION WAYPOINT WIND WAYPOINT ALTITUDE/OAT	Consists of an altitude and a variable length list of entries that include the waypoint, the waypoint winds that apply to that altitude and the waypoint temperature.
WQ	<u>WIND REQUEST</u> EXAMPLE: /WQ350.370.390.410:SEA.N4030W110.ORD.ETC <u>IEI CONTENT</u> LIST ENTRY: WIND LEVEL ALTITUDE LIST ENTRY: WIND LEVEL WAYPOINT	Consists of a list of elements defining altitudes for which winds are requested, followed by a list of elements defining waypoints in the route for which the request is being made.
POS	<u>POSITION REPORT</u> EXAMPLE: POSN47261W122185,SEA,093118,350,ORTIN,093436,BARRO,M32,120015,0485,784 CURRENT POSITION (CROSSED) WAYPOINT IDENT GREENWICH MEAN TIME CURRENT ALTITUDE GOTO (NEXT) WAYPOINT IDENT ETA AT GOTO WAYPOINT GOTO+1 (FOLLOWING) WAYPOINT IDENT STATIC AIR TEMPERATURE (SAT) ACTUAL WIND FUEL REMAINING TARGET MACH	Consists of elements used to define a position report.
REJ	<u>REJECT</u> REJPMI,HHMMSS,103,,006,CB/.108,,CB,/CB.109,,001,NOVALIDIEI/TShhmmss,mmdyy UPLINKED IMI TIME UPLINK RECEIVED LIST ENTRY: ERROR TYPE CODE ERROR DATA CODE LITERAL ERROR DATA EXTENDED REJECTION DATA	Consists of the uplinked IMI, time uplink is received and a list of error codes.
RES	<u>RESPONSE</u> EXAMPLE: RESFPN/AC,073	Consists of the uplinked IMI, time uplink is received and a list of error codes.
AA	<u>COMPANY PREFERRED ALTERNATES REQUEST</u> EXAMPLE: /AAN47261W122185,BOE123,KSEA,KSFO,SEASFO CURRENT POSITION FLIGHT NUMBER	

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

	DEPARTURE AIRPORT IDENT	
	ARRIVAL AIRPORT IDENT	
	COMPANY ROUTE	
AB	<u>ALTERNATES FLIGHT LIST REQUEST</u>	
	EXAMPLE: /ABN47261W122185,BOE123,KSEA,KSFO, SEASFO	
	CURRENT POSITION	
	FLIGHT NUMBER	
	DEPARTURE AIRPORT IDENT	
	ARRIVAL AIRPORT IDENT	
	COMPANY ROUTE	
AE	<u>COMPANY PREFERRED ALTERNATES DATA</u>	
	EXAMPLE:/aeksea,1,09020,350P10,HUMPP,KM.WH,2,080100,300M5,ELN:300,1290	
	LIST ENTRY	
	COMPANY PREFERRED ALTN IDENT	
	COMPANY PREFERRED ALTN PRIORITY	
	COMPANY PREFERRED ALTN WIND	
	COMPANY PREFERRED ALTN ALTITUDE/OAT	
	COMPANY PREFERRED ALTN ALTITUDE	
	COMPANY PREFERRED ALTN SPEED	
	COMPANY PREFERRED ALTN OFFSET	
AI	<u>ALTERNATE INFORMATION DATA</u>	Consists of a variable length list of entries consisting of alternate information
	EXAMPLE: /AIKSFO,D,1423,230,120045,M15.KLAX,M,1700,310,325020,P34	
	<u>IEL CONTENT</u>	
	LIST ENTRY:	
	ALTERNATE IDENT	
	ALTERNATE TYPE	
	DISTANCE TO ALTERNATE	
	ALTITUDE TO ALTERNATE	
	ESTIMATED WIND TO ALTERNATE	
	TEMPERATURE AT ALTERNATE	
AN	<u>ALTERNATES INHIBIT DATA</u>	
	EXAMPLE: /ANKPAE.KSEA	
	LIST ENTRY: ALTN INHIBIT	
AP	<u>SUPPLEMENTAL NDB AIRPORTS</u>	Consists of a list of airports to be included in the supplemental navigation data base
	EXAMPLE:	
	/APKABC,N39152W121185,01740,E10.K	
	DEF,N37440W119118,00900,W12	
	<u>IEI CONTENT</u>	
	LIST ENTRY:	
	AIRPORT IDENT	
	AIRPORT LAT/LON	
	AIRPORT ELEVATION	
	AIRPORT MAGVAR	
AQ	<u>WEATHER REQUEST</u>	
	EXAMPLE: /AQKSFO.KLAX.KONT:KPHX	
	LIST ENTRY:	
	COMPANY PREFERRED ALTN IDENT	
	ARRIVAL AIRPORT IDENT	
AR	<u>ALTERNATE INFORMATION REPORT</u>	Consists of a variable length list consisting of alternate destination data.
	EXAMPLE: /ARKSFO,D,132456,0120,0123,310,310050.KLAX,D,142523,0109,0206,325,340100	
	<u>IEI CONTENT</u>	

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

	LIST ENTRY ALTERNATE IDENT ALTERNATE TYPE ETA AT ALTERNATE DESTINATION FUEL REMAINING AT ALTERNATE DISTANCE TOALTERNATE ALTITUDE TO ALTERNATE CRUISE WIND TO ALTERNATE	
AS	<u>ALTERNATES FLIGHT LIST DATA</u> EXAMPLE: /ASKDEN,18030,350M5.KLAX,02040,350P10 LIST ENTRY: ALTN FLIGHT LIST IDENT ALTN FLIGHT LIST WIND ALTN FLIGHT LIST ALTITUDE/OAT	
AW	<u>ALTERNATE WIND DATA</u> EXAMPLE: /AW220035040 <u>IEI CONTENT</u> ALTITUDE AND WIND	Consists of a multi-parameter element defining the altitude and wind.
CB	<u>CLIMB WIND DATA</u> EXAMPLE: /CB350270060.310270045.140260040.100230020 <u>IEI CONTENT</u> LIST ENTRY: ALTITUDE AND WIND	Consists of a list of up to ten altitude wind entries.
CQ	<u>CLIMB FORECAST REQUEST</u> EXAMPLE: /CQ370 IEI CONTENT CRUISE ALTITUDE	Consists of a single parameter element defining the top of climb altitude.
CS	<u>CLIMB TEMPERATURE DATA</u> EXAMPLE: /CS120P05.250M30.300M40 <u>IEI CONTENT</u> LIST ENTRY: ALTITUDE AND OAT	Consists of a list of up to ten altitude temperature entries.
CU	<u>CLIMB TEMPERATURE REQUEST</u> EXAMPLE: /CS370 IEI CONTENT CRUISE ALTITUDE	Consists of a single parameter element defining the top of climb altitude.
DI	<u>DOWNLINK TIME INFORMATION</u> EXAMPLE: /D1051632.-51635.051636 <u>IEI CONTENT</u> TRIGGER TRIPPED TIME DOWNLINK GENERATION TIME GREENWICH MEAN TIME	Consists of a fixed format, fixed order field containing time information.
ED	<u>SUPPLEMENTAL EFFECTIVITY DATE</u> EXAMPLE: /EDJAN0191/ <u>IEI CONTENT</u> EFFECTIVITY DATE/	Consists of a fixed length field defining the effectivity date of the supplemental navigation data base.
FH	<u>FLIGHT PLAN HISTORY</u> EXAMPLE: /FHLACRE,132034,240K,0700,0197,P23,132016,235,Y,150,012,ILS32R,1100,etc <u>IEI CONTENT</u> LIST ENTRY:	Consists of a variable length list of parameters that are linked to the different waypoints of the flight plan.

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

ETA AT PREDICTED WAYPOINT
 PREDICTED WAYPOINT IDENT
 PREDICTED AIRSPEED
 ALTITUDE TO PREDICTED WAYPOINT
 FUEL REMAINING AT PREDICTED
 WAYPOINT
 OAT AT PREDICTED WAYPOINT
 WIND AT PREDICTED WAYPOINT
 TAS AT PREDICTED WAYPOINT
 PROCEDURE INDICATOR
 COURSE INTO PREDICTED WAYPOINT
 DISTANCE TO PREDICTED WAYPOINT
 PROCEDURE IDENTIFIER
 CURRENT GROSS WEIGHT

FP	<u>FUEL PLANNING</u> EXAMPLE: /FP1605,1100,12,220,08,140,110,P26,360 <u>IEI CONTENT</u> TAKEOFF GROSS WEIGHT LANDING GROSS WEIGHT TAXI FUEL TRIP FUEL RESERVE FUEL ALTERNATE FUEL FINAL FUEL EXTRA FUEL PLAN OR BLOCK FUEL	Consists of a fixed format, fixed order field.
FR	<u>FORECAST REPORT</u> EXAMPLE: /FR020120015.100125020.300130040:020P15.250M30:SEA,280130035,300M40.SEA,320130045. ORD,280140035,300M45.ORD,320140050:040120015.120125020.300130040:020P15.250M30 <u>IEI CONTENT</u> LIST ENTRY: (CLIMB) ALTITUDE AND WIND LIST ENTRY: (CLIMB) ALTITUDE AND OAT LIST ENTRY: WAYPOINT NAME OR POSITION WAYPOINT ALTITUDE AND WIND WAYPOINT ALTITUDE AND OAT LIST ENTRY: (DESCENT) ALTITUDE AND WIND LIST ENTRY: (DESCENT) ALTITUDE AND OAT	Consists of multiple variable length lists of elements defining wind and temperature forecasts for climb, cruise, and descent.
GL	<u>GENERAL DATA</u> EXAMPLE: /GL290690,757-200,,BE49005001,NWA105,BFMWH01,KBFI,KMWH,10,1750, PW2040,KPDX,BFIMWO02.230.255 <u>IEI CONTENT</u> DATE AIRCRAFT TYPE ENGINE THRUST NAVIGATION DATA BASE IDENT FLIGHT NUMBER COMPANY ROUTE DEPARTURE AIRPORT IDENT ARRIVAL AIRPORT IDENT COST INDEX ZERO FUEL WEIGHT ENGINE TYPE	Consists of a fixed order field.

ATTACHMENT 7
FMC/DATALINK INTERFACE

BASIC IEIs AND ASSOCIATED ELEMENTS

	ALTERNATE DESTINATION ALTERNATE COMPANY ROUTE CRUISE ALTITUDE CENTER OF GRAVITY	
GP	<u>GENERAL PREDICTIONS</u> EXAMPLE: /GPKBFI,140000,0201,0280,230,2700,2180,,,,,,255,KSEA,0140,14033,206,230 <u>IEI CONTENT</u> ARRIVAL AIRPORT IDENT ETA AT DESTINATION DISTANCE TO DESTINATION PREDICTED DESTINATION FUEL ACTIVE CRUISE ALTITUDE TAKEOFF GROSS WEIGHT LANDING GROSS WEIGHT TOTAL FUELF0B PLAN OR BLOCK FUEL TRIP FUEL RESERVE FUEL EXTRA FUEL FINAL FUEL CENTER OF GRAVITY ALTERNATE DESTINATION ALTERNATE FUEL ALTERNATE TIME DISTANCE TO ALTERNATE ALTERNATE CRUISE ALTITUDE	Consists of a fixed format, fixed order field.
MQ	<u>MOD WIND REQUEST</u> EXAMPLE: /MQ350.370.390.410:SEA.N4030W110.ORD.ETC <u>IEI CONTENT</u> LIST ENTRY: WIND LEVEL ALTITUDE LIST ENTRY: WIND LEVEL WAYPOINT	Consists of a list of elements defining altitudes for which winds are requested, followed by a list of elements defining waypoints in the modified route for which the request is being made.
MW	<u>MEAN WIND DATA</u> EXAMPLE: /MWKBFI,KMWH,P045 <u>IEI CONTENT</u> DEPARTURE AIRPORT IDENT ARRIVAL AIRPORT IDENT MEAN WIND	Consists of a fixed order, fixed format field.
NV	<u>SUPPLEMENTAL NDB NAVAIDS</u> EXAMPLE: /NVABCD,N25131W108473,11300,VTH,01250,W11 <u>IEI CONTENT</u> LIST ENTRY: NAVAID IDENT NAVAID LAT/LON FREQUENCY CLASS OF NAVAID NAVAID ELEVATION NAVAID MAGVAR	
PG	<u>PAGE INFO</u> EXAMPLE: /PG13 PAGE INFO	
PH	<u>FLIGHT PHASE</u> EXAMPLE: /PH2	Consists of a fixed format field defining FMC flight phase.

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

<u>IEI CONTENT</u>	
<u>FLIGHT PHASE</u>	
PL	<p><u>PERFORMANCE LIMITS</u> Consists of a fixed format, fixed order field. EXAMPLE: /PL25,210340,220340,240320,500820,650820,500780</p> <p><u>IEI CONTENT</u> TIME ERROR TOLERANCE CLIMB CAS LIMITS CRUISE CAS LIMITS DESCENT CAS LIMITS CLIMB MACH LIMITS CRUISE MACH LIMITS DESCENT MACH LIMITS</p>
PP	<p><u>PERFORMANCE PARAMETERS REPORT</u> Consists of a fixed order field. EXAMPLE: /PP757- 200,PW2040,NDB170601,BC001M,NWA105,1750,,250,,0150,23,1,180,180,100250,100250,,,,,1020,P14,M1,5,1 30,36089</p> <p><u>IEI CONTENT</u> AIRCRAFT TYPE ENGINE TYPE NAVIGATION DATA BASE IDENT PERFORMANCE DATABASE IDENT FLIGHT NUMBER ZERO FUEL WEIGHT CRUISE CENTER OF GRAVITY CRUISE ALTITUDE PLAN OR BLOCK FUEL RESERVE FUEL COST INDEX CLIMB DERATE CLIMB TRANSITION ALTITUDE DESCENT TRANSITION ALTITUDE CLIMB SPEED LIMIT DESCENT SPEED LIMIT FUEL FLOW FACTOR DRAG FACTOR PERF FACTOR IDLE FACTOR DESTINATION QNH DESTINATION TEMPERATURE DESTINATION ISA DEVIATION ENTERED LANDING FLAP/SLAT CONFIGURATION ENTERED LANDING SPEED TROPOPAUSE ALTITUDE TAXI FUEL</p>
PS	<p><u>POSITION REPORT</u> EXAMPLE: /PSN47261W122185,SEA,093118,350,ORTIN,093436,BARRO,M32,120015,0485,789,ECON CURRENT POSITION CROSSED WAYPOINT IDENT GREENWICH MEAN TIME CURRENT ALTITUDE GOTO (NEXT) WAYPOINT IDENT ETA AT GOTO WAYPOINT</p>

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

	GOTO + 1 (FOLLOWING) WAYPOINT IDENT	
	STATIC AIR TEMPERATURE (SAT)	
	ACTUAL WIND	
	FUEL REMAINING	
	TARGET MACH	
	CRUISE SPEED MODE	
	ENGINE OUT STATUS	
	ZERO FUEL WEIGHT	
RA	<u>ALTERNATE ROUTE</u>	A variable length field that consists of flight plan elements that replace the inactive route. These flight plan elements define a flight plan in approximately the same fashion as ATC clearance
	EXAMPLE: THE FORMAT IS THE SAME AS DESCRIBED FOR THE RI IEI DESCRIPTION.	
RM	<u>ROUTE MODIFICATION</u>	A variable length field that that consists of flight plan elements that replace the inactive route. These flight plan elements define a flight plan in approximately the same fashion as ATC clearance language. The RM cannot contain the CR: or :DA: flight plan element identifiers.
	THE FORMAT IS THE SAME AS DESCRIBED FOR THE RI IEI DESCRIPTION WITH THE ADDITION OF THE FOLLOWING: LO: LATERAL OFFSET	
RR	<u>RUNWAY DATA REPORT</u>	Consists of a fixed format, fixed order field.
	EXAMPLE: /RRKBFI,13R,A9,P09,,155,1125,2855,,P25,U35,250015,1,15,2,,P40,108119126	
	<u>IEI CONTENT</u>	
	DEPARTURE AIRPORT IDENT	
	TAKEOFF RUNWAY IDENT	
	RUNWAY INTERSECTION	
	POSITION SHIFT	
	RUNWAY LENGTH REMAINING	
	TAKEOFF CENTER OF GRAVITY	
	TRIM	
	CURRENT GROSS WEIGHT	
	REFERENCE TAKEOFF GROSS WEIGHT	
	OAT OR SAT	
	TAKEOFF RUNWAY SLOPE	
	TAKEOFF RUNWAY WIND	
	TAKEOFF RUNWAY CONDITION	
	TAKEOFF FLAPS	
	TAKEOFF THRUST RATING	
	VTR PERCENTAGE	
	SELECTED TEMPERATURE	
	TAKEOFF SPEEDS	
	BARO SETTING	
	FLAP/SLAT CONFIGURATION	
	THRUST REDUCTION ALTITUDE	
	ACCELERATION ALTITUDE	
	ENGINE-OUT ACCELERATION ALTITUDE	
SD	<u>SUPPLEMENTAL NAVIGATION DATA</u>	Consists of an effectivity date and four separate lists that define the supplemental data base airport, navaid, waypoint and runway elements in that order.
	<u>BASE</u>	
	EXAMPLE: /SDJAN0190,KABC,N45240W119235,00911,W23.KJLL,etc:ABC,N45354W122506,11550, VTH,00530,W21.SEE,etc:ABCDE,N45354W122506,,, ,W22.WPT01,etc:05L,LFBO,N33125E010259,005,131,11125.02R,etc	
	<u>IEI CONTENT</u>	
	EFFECTIVITY DATA	

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

LIST ENTRY:

AIRPORT IDENT
AIRPORT LAT/LON
AIRPORT ELEVATION
AIRPORT MAGVAR

LIST ENTRY:

NAVAID IDENT
NAVAID LAT/LON
FREQUENCY
CLASS OF NAVAID
NAVAID ELEVATION
NAVAID MAGVAR

LIST ENTRY:

WAYPOINT IDENT
WAYPOINT LAT/LON
REFERENCE IDENT
REFERENCE LAT/LON
RADIAL/DISTANCE
WAYPOINT MAGVAR

LIST ENTRY:

RUNWAY IDENT
REFERENCE AIRPORT IDENT
RUNWAY LAT/LON
RUNWAY COURSE
RUNWAY ELEVATION
RUNWAY LENGTH

TD	<p>TOP OF DESCENT REPORT EXAMPLE: /TD134230,N59151W132251,3153,001 IEI CONTENT TOP OF DESCENT ETA TOP OF DESCENT LOCATION CURRENT GROSS WEIGHT STIMULUS CODE</p>	Consists of top of descent time and location, and current weight.
TM	<p>MOD TROPOPAUSE DATA EXAMPLE: /TMSEA,550,M55.N4030W110,570,M55 IEI CONTENT LIST ENTRY: WAYPOINT NAME OR POSITION WAYPOINT TROPOPAUSE ALTITUDE WAYPOINT TROPOPAUSE TEMPERATURE</p>	Consists of a variable length list of entries that include the waypoints, the waypoint tropopause altitude and the waypoint tropopause temperature
TR	<p>TROPOPAUSE DATA EXAMPLE: /TRSEA,600,M60.N4030W110,550,M58 IEI CONTENT LIST ENTRY: WAYPOINT NAME OR POSITION WAYPOINT TROPOPAUSE ALTITUDE MODIFICATION WAYPOINT TROPOPAUSE TEMPERATURE MODIFICATION</p>	Consists of a variable length list of entries that include the waypoints, the waypoint tropopause altitude and the waypoint tropopause temperature

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

BASIC IEIs AND ASSOCIATED ELEMENTS

WE	<u>WIND VECTOR MAGNITUDE DIFFERENCE</u> EXAMPLE: /WE020 <u>IEI CONTENT</u> WIND VECTOR MAGNITUDE DIFFERENCE	Consists of a fixed length field used to define the downlink trigger threshold for wind discrepancies.
WI	WAYPOINT INFORMATION EXAMPLE: /WIBDX,143205.CGC,144510.N33E010,153512 <u>IEI CONTENT</u> LIST ENTRY: WAYPOINT NAME OR POSITION ETA AT PREDICTED WAYPOINT	Contains a list of waypoints and their ETAs.
WL	WAYPOINT LIST EXAMPLE: /WLBDX.CGC.NSG.N33E010 <u>IEI CONTENT</u> LIST ENTRY: WAYPOINT NAME OR POSITION	Contains a list of waypoints for which data is to be included in a top of descent downlink.
WM	ENROUTE WIND MODIFICATION EXAMPLE: /WM310,SEA,120075,350M35.N04030W120,130090 <u>IEI CONTENT</u> WIND ALTITUDE LIST ENTRY: WAYPOINT NAME OR POSITION WAYPOINT WIND WAYPOINT ALTITUDE/OAT	Consists of an altitude and a variable length list of entries that include the waypoint, the waypoint winds that apply to that altitude and the waypoint temperature.
WP	<u>SUPPLEMENTAL NDB WAYPOINTS</u> EXAMPLE: /WPEFGH,N21421W101113,SRP,1090020,W09 <u>IEI CONTENT</u> LIST ENTRY: WAYPOINT IDENT WAYPOINT LAT/LON REFERENCE IDENT RADIAL/DISTANCE WAYPOINT MAGVAR	Consists of a list of waypoints to be included in the supplemental navigation data base.
WR	<u>ALTERNATE AIRPORT WEATHER REQUEST</u> EXAMPLE: /WRKLAX.KSFO.KPHX <u>IEI CONTENT</u> LIST ENTRY: DESTINATION AND ALTERNATE IDENTS	Consists of a variable length list of entries defining destination and alternate identifiers.

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5248 **Section 8**
5249 **Element Definitions**

5250 This section contains an alphabetical table of defined elements indicating the
5251 formats and attributes of each element. This section will be updated as the need for
5252 new elements is identified. Users are requested to advise the AEEC staff when
5253 such a need arises.

5254 Notes:

- 5255 2. This element may require one or more elements to completely define
5256 the desired data.
- 5257 3. Some implementations require that this element be uplinked in a
5258 fixed length format of maximum character length.
- 5259 4. See Section 10 for further definition of codes.
- 5260 5. Millibars = Hectopascals = 100 newton/meter²

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
ACARS CONFIG IDENT NUMBER	V	S	AN	10			
ACCELERATION ALTITUDE	V	S	N	5	1	Feet	
ACT PLAN CRUISE ALTITUDE	V	S	N	3	100	Feet	
ACTIVE CRZ WAYPOINT	V	S	AN	13			
ACTIVE CRZ WAYPOINT/WIND	V	S	AN	13			
ACTIVE DESCENT WIND	V	M	N	9			
ALTITUDE	F	S	N	3	100	Feet	
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	2
ACTUAL WIND	V	M	N	6			
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	
AIRCRAFT TYPE	V	S	AN	11			
AIRPORT ELEVATION	V	S	N	5	1	Feet	
AIRPORT IDENT	V	S	AN	4			
AIRPORT LAT/LON	F	S	AN	13			

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
AIRPORT MAGVAR	V	S	AN	3			
DIRECTIONAL	F		A	1		E=East W=West	
MAGNITUDE	V		N	2	1	Degrees	
ALTERNATE ASSUMED TEMPERATURE	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	1	°C	
ALTERNATE COMPANY ROUTE	V	S	AN	10			
ALTERNATE CRUISE ALTITUDE	V	S	N	3	100	Feet	
ALTERNATE DESTINATION	V	S	AN	4			1
ALTERNATE FLAP/SLAT							
CONFIGURATION	F	S	N	1			
ALTERNATE FLAPS	V	S	N	2	1	Degrees	
ALTERNATE FUEL	V	S	N	5	0.1	Klbs	
ALTERNATE IDENT	V	S	AN	10			
ALTERNATE LIMIT TAKEOFF							

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
GROSS WT	V	S	N	5	0.1	Klbs	
ALTERNATE TAKEOFF SPEEDS	F	M	N	9			
V1	F	S	N	3	1	Knots	
VR	F	S	N	3	1	Knots	
V2	F	S	N	3	1	Knots	
ALTERNATE THRUST RATING	F	S	N	1		0 = No derate	
						1 = Derate 1	
						2 = Derate 2	
						9 = Derate 9	
ALTERNATE TIME	F	M	N	6			1
HOURS	F	S	N	2	1	Hour	
MINUTES	F	S	N	2	1	Minute	
SECONDS	F	S	N	2	1	Second	
ALTERNATE TRIM	V	D	AN	5			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	4	0.01	Degrees	
ALTERNATE TYPE	F	S	A	1		M=Missed Appr D=Dir to from	1

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
						Present Pos	
ALTERNATE VTR PERCENTAGE	V	S	N	2	1	Percent	
ALTERNATE WIND	V	M	N	9			
ALTITUDE	F	S	N	3	100	Feet	
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	
ALTITUDE AND WIND	V	M	N	9			
ALTITUDE	F	S	N	3	100	Feet	
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	
ALTITUDE TO ALTERNATE	V	S	N	3	100	Feet	1
ALTITUDE TO PREDICTED WPT	V	S	N	4	10	Feet	
ALTN FLIGHT LIST ALT/OAT	V	M	AN	6			
ALTITUDE	F	S	N	3	100		
DIRECTIONAL	F	D	A	1			
MAGNITUDE	V		N	2	1		
ALTN FLIGHT LIST IDENT	V	S	AN	4			
ALTN FLIGHT LIST WIND	V	D	N	6			
DIRECTIONAL	F		N	3	1		
MAGNITUDE	V		N	3	1		
ALTN INHIBIT	V	S	AN	4			
ARRIVAL AIRPORT IDENT	V	S	AN	4			
ASSUMED TEMPERATURE	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

ATTACHMENT 7
FMC/DATALINK INTERFACE

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
							M=Minus
MAGNITUDE	V		N	2	1	°C	
BARO SETTING	V	D	AN	5			
DIRECTIONAL	F		A	1		H=QNH	
						E=QFE	
MAGNITUDE	V		N	4	1	Hecto-pascals	4
CENTER IRS POSITION	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North	
						S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East	
						W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
CENTER OF GRAVITY	V	S	N	3	0.1	Percent	
CLASS OF NAVAID	V	S	A	7			
CLIMB CAS LIMITS	F	M	N	6			
MINIMUM CLB CAS	F	S	N	3	1	Knots	
MAXIMUM CLB CAS	F	S	N	3	1	Knots	
CLIMB DERATE	F	S	N	1		N=as required	
						N=0 (NoDerate)	
						N=1 (Derate 1)	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
							N=2 (Derate 2)
CLIMB MACH LIMITS	F	M	N	6			
MINIMUM CLB MACH	F	S	N	3	0.001	Mach	
MAXIMUM CLB MACH	F	S	N	3	0.001	Mach	
CLIMB SPEED LIMIT	F	M	N	6			
ALTITUDE	F	S	N	3	100	Feet	
SPEED	F	S	N	3	1	Knots (CAS)	
CLIMB TRANSITION ALTITUDE	V	S	N	3	100	Feet	
CLIMB WIND	V	M	N	9			
ALTITUDE	F	S	N	3	100	Feet	
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	
COMPANY DISTRIBUTION	V	S	AN	10			
COMPANY PREFERRED ALTN ALTITUDE	V	S	N	3	100	Feet	
COMPANY PREFERRED ALTN ALT/OAT	V	M	AN	6			
ALTITUDE	F	S	N	3	100		
DIRECTIONAL	F	D	A	1			
MAGNITUDE	V		N	2	1		
COMPANY PREFERRED ALTN IDENT	V	S	AN	4			
COMPANY PREFERRED ALTN OFFSET	V	D	AN	3			
DIRECTIONAL	F		A	1			
DISTANCE	V		N	2	1		
COMPANY PREF ALTN OVERHEAD FIX	V	S	AN	13			
COMPANY PREFERRED ALTN PRIORITY	F	S	N	1			

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
COMPANY PREFERRED ALTN SPEED	V	M	N	4			
TYPE	F	S	N	1			
SPEED VALUE	V	S	N	S	1,0001		
COMPANY PREFERRED ALTN WIND	V	M	N	6			
DIRECTIONAL	F	S	N	3	1		
MAGNITUDE	V	S	N	3	1		
COMPANY ROUTE	V	S	AN	10			
COST INDEX	V	S	N	4			
COURSE IN	F	S	N	3	1	Degrees	
COURSE INTO PREDICTED WAYPOINT	V	S	N	3	1	Degrees	1
CROSS TRACK DEVIATION	V	D	AN	4			
DIRECTIONAL	F		A	1		L or R	
DISTANCE	V		N	3	0.1	NM	
CROSSED WAYPOINT IDENT	V	S	AN	13			
CRUISE ALTITUDE	V	S	N	3	100	Feet	
CRUISE CAS LIMITS	F	M	N	6			
MINIMUM CRZ CAS	F	S	N	3	1	Knots	
MAXIMUM CRZ CAS	F	S	N	3	1	Knots	
CRUISE CENTER OF GRAVITY	V	S	N	3	0.1	Percent	
CRUISE MACH LIMITS	F	M	N	6			
MINIMUM CRZ MACH	F	S	N	3	0.001	Mach	
MAXIMUM CRZ MACH	F	S	N	3	0.001	Mach	
CRUISE SPEED MODE	V	S	AN	17		Active Cruise	
						Page Title	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
CRUISE WAYPOINT WIND	V	M	N	6			
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	2
CRUISE WIND	V	M	N	6			
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	2
CRUISE WIND TO ALTERNATE	V	M	N	6			1
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	
CURRENT ALTITUDE	V	S	N	3	100	Feet	
CURRENT CALIBRATED AIRSPEED	F	D	AN	4	1 or		
SPEED VALUE CAS/MACH	F		N	3	0.001	Knots, Mach	
UNIT IDENTIFIER	F		A	1		K or M	
CURRENT GROSS WEIGHT	V	S	N	5	0.1	Klbs	
CURRENT GROSS WEIGHT AT PRED WPT	V	S	N	5	0.1	Klbs	
CURRENT GROUND SPEED	F	S	N	3	1	Knots	
CURRENT POSITION	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
MINUTES	F		N	3	0.1	Minutes	
CURRENT TRUE AIRSPEED	F	D	AN	4	1 or		
SPEED VALUE CAS/MACH	F		N	3	0.001	Knots, Mach	
UNIT IDENTIFIER	F		A	1		K or M	
CURRENT VERTICAL SPEED	V	D	AN	5			
DIRECTIONAL	F		A	1		U or D	
SPEED VALUE	V		N	4	1	Feet/min	
DATE	F	M	N	6			
DAY	F	S	N	2		Day	
MONTH	F	S	N	2		Month	
YEAR	F	S	N	2		Year	
DEPARTURE AIRPORT IDENT	V	S	AN	4			
DESCENT CAS LIMITS	F	M	N	6			
MINIMUM DES CAS	F	S	N	3	1	Knots	
MAXIMUM DES CAS	F	S	N	3	1	Knots	
DESCENT ISA DEVIATION	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	1	°C	
DESCENT MACH LIMITS	F	M	N	6			
MINIMUM DES MACH	F	S	N	3	0.001	Mach	
MAXIMUM DES MACH	F	S	N	3	0.001	Mach	
DESCENT SPEED LIMIT	F	M	N	6			
ALTITUDE	F	S	N	3	100	Feet	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
SPEED	F	S	N	3	1	Knots (CAS)	
DESCENT TRANSITION ALTITUDE	V	S	N	3	100	Feet	
DESCENT WIND	V	M	N	9			
ALTITUDE	F	S	N	3	100	Feet	2
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	
DESIRED TRACK	V	S	N	3	1	Degrees	
DESTINATION AND ALTERNATE IDENTs	V	S	AN	10			
DESTINATION ISA DEVIATION	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	1	°C	
DESTINATION QNH	V	S	N	4	1	Hecto pascals	4
DESTINATION RUNWAY IDENT	F	D	AN	3			
RUNWAY NUMBER	F		N	2			
RUNWAY SUFFIX	F		A	1		L=Left C=Center R=Right O=None	
DESTINATION TEMPERATURE	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	1	°C	
DISTANCE TO ALTERNATE	V	S	N	4	1	NM	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
DISTANCE TO DESTINATION	V	S	N	4	1	NM	
DISTANCE TO PREDICTED WAYPOINT	V	S	N	4	1	NM	1
DISTANCE TO WAYPOINT	V	S	N	4	1	NM	
DOWNLINK GENERATION TIME	F	M	N	6			
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
SECONDS	F	S	N	2	1		
DRAG FACTOR	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	0.1	Percent	
EFFECTIVITY DATE	F	M	AN	7			
MONTH	F	S	A	3		Month	
DAY	F	S	A	2		Day	
YEAR	F	S	N	2		Year	
ENGINE-OUT ACCELERATION							
ALTITUDE	V	S	N	5	1	Feet	
ENGINE-OUT STATUS	V	S	N	1		0=All Engine 1=Engine Out	
ENGINE THRUST	F	S	N	3	0.1	Klbs	
ENGINE TYPE	V	S	AN	15			
ENTERED LANDING FLAP/SLAT CONFIGURATION	F	S	N	1			
ENTERED LANDING SPEED	F	S	N	3	1	Knots (CAS)	

V = VARIABLE
F = FIXED

S = SINGLE PARAMETER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
ENTERED IRS HEADING	F	S	N	3	1	Degrees	
ERROR DATA CODE	F	S	N	3			3
ERROR TYPE CODE	F	S	N	3			3
ESTIMATED WIND TO ALTERNATE	V	M	N	6			1
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	2
ETA AT ALTERNATE DESTINATION	F	M	N	6			1
HOURS	F	S	N	2	1	Hour	
MINUTES	F	S	N	2	1	Minute	
SECONDS	F	S	N	2	1	Second	
ETA AT DESTINATION	F	M	N	6			
HOURS	F	S	N	2	1	Hour	
MINUTES	F	S	N	2	1	Minute	
SECONDS	F	S	N	2	1	Second	
ETA AT GOTO WAYPOINT	F	M	N	6			1
HOURS	F	S	N	2	1	Hour	
MINUTES	F	S	N	2	1	Minute	
SECONDS	F	S	N	2	1	Second	
ETA AT PREDICTED WAYPOINT	F	M	N	6			
HOURS	F	S	N	2	1	Hour	
MINUTES	F	S	N	2	1	Minute	
SECONDS	F	S	N	2	1	Second	
ETA CHANGE VARIABLE	F	S	N	1	1	Minutes	
EXTENDED REJECTION DATA	V	S	AN	25			

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
EXTRA FUEL	V	D	AN	6			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	5	0.1	Klbs	
FINAL FUEL	V	S	N	5	0.1	Klbs	
FLAP/SLAT CONFIGURATION	F	S	N	1			
FLIGHT NUMBER	V	S	AN	10			
FLIGHT PATH ANGLE	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
ANGLE	V		N	2	0.1	Degrees	
FLIGHT PHASE	F	S	N	1		0=Preflight 1=Takeoff 2=Climb 3=Cruise 4=Descent 5=Approach 6=Go Around 7=Done	
FMC BEST POSITION	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	

V = VARIABLE
F = FIXED

S = SINGLE PARAMETER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
FMC POSITION PRIOR TO POS UPDATE	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
FMC SOFTWARE PART NUMBER	F	S	N	10			
FMC SYSTEM DATE	F	M	N	6			
DAY	F	S	N	2	1		
MONTH	F	S	N	2	1		
YEAR	F	S	N	2	1		
FMC SYSTEM TIME	F	M	N	6			
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
SECONDS	F	S	N	2	1	Seconds	
FREQUENCY	F	S	N	5	0.01	MHz	1
FUEL AT DESTINATION	V	S	N	5	0.1	Klbs	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
FUEL FLOW FACTOR	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	0.1	Percent	
FUEL REMAINING	V	S	N	5	0.1	Klbs	
FUEL REMAINING AT ALTN DEST	V	S	N	5	0.1	Klbs	1
FUEL REMAINING AT PREDICTED WPT	V	S	N	5	0.1	Klbs	1
GOTO (NEXT) WPT IDENT	V	S	AN	13			
GOTO+1 (FOLLOWING) WPT IDENT	V	S	AN	13			
GREENWICH MEAN TIME	F	M	N	6			
HOURS	F	S	N	2	1	Hour	
MINUTES	F	S	N	2	1	Minute	
SECONDS	F	S	N	2	1	Seconds	
GROUND ADDRESS	V	S	AN	7			
HOLD EFC TIME	F	M	N	4			
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
IDLE FACTOR	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	0.1	Percent	
INACTIVE COMPANY ROUTE	V	S	AN	10			
INVALID FLAG	F	S	N	1		Nothing 0=Valid 1=Invalid	

V = VARIABLE
F = FIXED

S = SINGLE PARAMETER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
IRS-C MODE	F	S	N	1		1=Align 2=Nav 3=Attitude	
IRS-L MODE	F	S	N	1		1=Align 2=Nav 3=Attitude	
IRS-R MODE	F	S	N	1		1=Align 2=Nav 3=Attitude	
IRS MONITOR	F	M	N	9			
LEFT IRS DRIFT	F	S	N	3	0.1	NM/hour	
CENTER IRS DRIFT	F	S	N	3	0.1	NM/hour	
RIGHT IRS DRIFT	F	S	N	3	0.1	NM/hour	
LABEL CODE	F	S	N	3			
LANDING GROSS WEIGHT	V	S	N	5	0.1	Klbs	
LEFT DME DISTANCE	V	S	N	4	0.1	NM	
LEFT DME FREQUENCY	F	S	N	5	0.01	MHz	
LEFT GNSS POSITION	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
MINUTES	F		N	3	0.1	Minutes	
LEFT ILS FREQUENCY	F	S	N	5	0.01	MHz	
LEFT IRS POSITION	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
LEFT VOR BEARING	F	S	N	4	0.1	Degrees	
LEFT VOR FREQUENCY	F	S	N	5	0.01	MHz	
LITERAL ERROR DATA	V	S	AN	13			
LOCALIZER DEVIATION	V	D	AN	4		DDM	
DIRECTIONAL	F		A	1		L = Left R = Right	
MAGNITUDE	V		N	3	0.001		
MANEUVER MARGIN	V	S	N	3	0.01		
MAXIMUM CLIMB CAS	F	S	N	3	1	Knots	
MAXIMUM CLIMB MACH	F	S	N	3	0.001	Mach	
MAXIMUM CRUISE CAS	F	S	N	3	1	Knots	
MAXIMUM CRUISE MACH	F	S	N	3	0.001	Mach	
MAXIMUM DESCENT CAS	F	S	N	3	1	Knots	
MAXIMUM DESCENT MACH	F	S	N	3	0.001	Mach	

V = VARIABLE
F = FIXED

S = SINGLE PARAMETER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
MEAN WIND	V	D	AN	4			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	3	1	Knots	
MESSAGE SEQUENCE NUMBER	V	S	AN	10			
MINIMUM CLIMB CAS	F	S	N	3	1	Knots	
MINIMUM CLIMB MACH	F	S	N	3	0.001	Mach	
MINIMUM CRUISE CAS	F	S	N	3	1	Knots	
MINIMUM CRUISE MACH	F	S	N	3	0.001	Mach	
MINIMUM CRUISE TIME	F	S	N	1	1	Minutes	
MINIMUM DESCENT CAS	F	S	N	3	1	Knots	
MINIMUM DESCENT MACH	F	S	N	3	0.001	Mach	
MINIMUM FUEL TEMPERATURE	V	D	AN	3		P=Plus M=Minus	
DIRECTIONAL	F		A	1		M=Minus	
MAGNITUDE	V		N	2	1	°C	
MINIMUM R/C - CLB	V	S	N	3	1	Feet/min	
MINIMUM R/C - CRZ	V	S	N	3	1	Feet/min	
MINIMUM R/C - ENG OUT	V	S	N	3	1	Feet/min	
MOD CRZ WAYPOINTS	V	S	AN	13			
MOD PLAN CRUISE ALTITUDE	V	S	N	3	100	Feet	
MONITOR CODE	F	S	N	2			
NAVAID ELEVATION	V	S	N	5	1	Feet	
NAVAID IDENT	V	S	AN	4			
NAVAID LAT/LON	F	S	AN	13			1

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

ATTACHMENT 7
FMC/DATALINK INTERFACE

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
NAVAID MAGVAR	V	D	AN	3			1
DIRECTIONAL	F		A	1		E=East W=West	
MAGNITUDE	V		N	2	1	Degrees	
NAVAID TYPE	F	S	A	1		D=DME V=VOR	
NAVIGATION DATA BASE IDENT	V	S	AN	10			
NETWORK ADDRESS	V	S	AN	7			
NOISE ABATEMENT END ALTITUDE	V	S	V	5	1	Feet	
NOISE ABATEMENT SPEED	F	S	N	3	1	Knots	
NOISE ABATEMENT DERATE THRUST	F	S	N	1		N=as required N=0 (no noise derate Thrust) N=1 (Derate 1) N=2 (Derate 2)	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
							N=3 (Max Climb)
NOISE ABATEMENT THRUST	V	M	AN	6			
THRUST TYPE	F	S	A	1		n=n1	
							N=N1 E=EPR
THRUST VALUE	V	S	N	5	0.01	PERCENT OR EPR	
NOISE ABATEMENT START ALTITUDE	V	S	N	5	1	Feet	
OAT OR SAT	V	D	AN	3			
DIRECTIONAL	F		A	1			P=Plus M=Minus
MAGNITUDE	V		N	2	1	°C	
OAT AT PREDICTED WAYPOINT	V	D	AN	3			
DIRECTIONAL	F		A	1			P=Plus M=Minus
MAGNITUDE	V		N	2	1	°C	
PAGE ID	V	M	AN	3			
PAGE NUMBER	V		N	2	1		
LAST PAGE FLAG	F		N	1			Blank=Page to Follow E=End
PAGE INFO	F	M	N	2			
PAGE NUMBER	F	S	N	1			
NUMBER OF PAGES	F	S	N	1			

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
PERF DEFAULTS CONFIG NO.	V	S	A	10			
PERF FACTOR	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	0.1	Percent	
PERFORMANCE DATA BASE IDENT	V	S	AN	10			
PLAN OR BLOCK FUEL	V	S	N	5	0.1	Klbs	
POSITION SHIFT	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
SHIFT	V		N	2	100	Feet	
PREDICTED AIRSPEED	F	D	AN	4			1
SPEED	F		N	3	1 or		
TYPE	F		A	1	0.001	K=Knot M=Mach	
PREDICTED DESTINATION FUEL	V	S	N	5	0.1	Klbs	1
PREDICTED FUEL REMAINING	V	S	N	5	0.1	Klbs	1
PREDICTED WAYPOINT IDENT	V	S	AN	13			
ACTIVE CRUISE ALTITUDE	V	S	N	3	100	Feet	
PROCEDURE INDICATOR	F	S	A	1		Y= Proc.mbr. N=Not Proc.mbr.	1
PROCEDURE IDENT	V	S	AN	6			1

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
PROCEDURE WAYPOINT	F	S	A	1		Y or N	
QNH	V	S	N	4	1	Hecto pascals	4
QRH T/O SPD CONFIG NUM	V	S	A	10			
RADIAL/DISTANCE	F	M	AN	7			1
RADIAL	F	S	N	3	1	Degrees	
DASH	F	S	AN	1			
DISTANCE	F	S	N	3	1	NM	
RADIO MEASUREMENT	V	S	N	4	0.1	NM or degrees	
REFERENCE AIRPORT IDENT	V	S	AN	4			
REFERENCE CRZ WAYPOINT IDENT	V	S	AN	13			
REFERENCE IDENT	V	S	AN	5			1
REFERENCE LAT/LON	F	S	AN	13			1
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
REFERENCE RTA WAYPOINT IDENT	V	S	AN	13			
REFERENCE TAKEOFF GROSS WEIGHT	V	S	N	5	0.1	Klbs	
REPORT STIMULUS	F	S	N	3			3
RESERVE FUEL	V	S	N	5	0.1	Klbs	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
RIGHT DME DISTANCE	V	S	N	4	0.1	NM	
RIGHT DME FREQUENCY	F	S	N	5	0.01	MHz	
RIGHT GPS POSITION	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
RIGHT ILS FREQUENCY	F	S	N	5	0.01	MHz	
RIGHT IRS POSITION	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
RIGHT VOR BEARING	F	S	N	4	0.1	Degrees	
RIGHT VOR FREQUENCY	F	S	N	5	0.01	MHz	
RTA CONSTRAINT	F	S	A	2		AA=AT or AFTER	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
							AB=AT or BEFORE AT=AT
RTA COST INDEX	V	D	AN	5			
DIRECTIONAL	F		A	1			P=Plus M=Minus
COST INDEX	V		N	4	1		
RTA TAKEOFF WINDOW TIMES	F	M	N	12			
FIRST HOURS	F	S	N	2	1	Hours	
FIRST MINUTES	F	S	N	2	1	Minutes	
FIRST SECONDS	F	S	N	2	1	Seconds	
LAST HOURS	F	S	N	2	1	Hours	
LAST MINUTES	F	S	N	2	1	Minutes	
LAST SECONDS	F	S	N	2	1	Seconds	
RTA TIME	F	M	N	6			
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
SECONDS	F	S	N	2	1	Seconds	
RTA TIME ERROR TOLERANCE	V	S	N	2	1	Seconds	
RTA WAYPOINT IDENT	V	S	AN	13			
RTA WINDOW TIMES	F	M	N	12			
FIRST HOURS	F	S	N	2	1	Hours	
FIRST MINUTES	F	S	N	2	1	Minutes	
FIRST SECONDS	F	S	N	2	1	Seconds	
LAST HOURS	F	S	N	2	1	Hours	
LAST MINUTES	F	S	N	2	1	Minutes	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
LAST SECONDS	F	S	N	2	1	Seconds	
RUNWAY COURSE	V	S	N	3	1	Degrees	
RUNWAY ELEVATION	V	S	N	6	1	Feet	
RUNWAY IDENT	F	D	AN	3			
RUNWAY NUMBER	F		N	2			
RUNWAY SUFFIX	F		A	1		L=Left C=Center R=Right O=None	
RUNWAY INTERSECTION	V	S	AN	3			
RUNWAY LAT/LON	F	S	AN	13			
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
RUNWAY LENGTH	V	S	N	5	1	Feet	
RUNWAY LENGTH REMAINING	V	S	N	3	100	Feet	
SCRATCHPAD	V	S	AN	24			
SELECTED TEMPERATURE	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	

V = VARIABLE
F = FIXED

S = SINGLE PARAMETER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
MAGNITUDE	V		N	2	1	°C	
STANDARD LIMIT TAKEOFF GR WT	V	S	N	5	0.1	Klbs	
STATIC AIR TEMPERATURE (SAT)	V	D	AN	3			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	2	1	°C	
STEADY/INTERMITTENT	F	S	A	1	S or I		
STIMULUS CODE	F	S	N	3			3
SYSTEM CODE	F	S	N	2			
TAI ON ALTITUDE	V	S	N	3	100	Feet	
TAI ON/OFF ALTITUDE	F	M	N	6			
TAI ON ALTITUDE	F	S	N	3	100	Feet	
TAI OFF ALTITUDE	F	S	N	3	100	Feet	
TAKEOFF CENTER OF GRAVITY	V	S	N	3	0.1	Percent	
TAKEOFF FLAPS	V	S	N	2	1	Degrees	
TAKEOFF GROSS WEIGHT	V	S	N	5	0.1	Klbs	
TAKEOFF RUNWAY CONDITION	F	S	N	1		1=Wet 2=Dry 3=1/4 water 4=1/2 water 5=1/4 slush	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
						6=1/2 slush	
						7=compact snow	
						8= wet skid resist	
TAKEOFF RUNWAY IDENT	F	D	AN	3			
RUNWAY NUMBER	F		N	2			
RUNWAY SUFFIX	F		A	1		L=Left C=Center R=Right O=None	
TAKEOFF RUNWAY SLOPE	V	D	AN	3			
DIRECTIONAL	F		A	1		U=Up D=Down	
MAGNITUDE	V		N	2	0.1	Percent	
TAKEOFF RUNWAY WIND	V	M	N	6			
DIRECTIONAL	F	S	N	3	1	Degree	
MAGNITUDE	V	S	N	3	1	Knots	2
TAKEOFF SPEEDS	F	M	N	9			
V1	F	S	N	3	1	Knots	
VR	F	S	N	3	1	Knots	
V2	F	S	N	3	1	Knots	2
TAKEOFF THRUST RATING	F	S	N	1		0= No derate 1= Derate 1	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
						2=Derate 2	
						8=Bump	
						9=Derate	
TAKEOFF TIME							
HOURS	F	S	N	2	1	Hour	
MINUTES	F	S	N	2	1	Minute	
TARGET MACH	V	S	N	3	.001	Mach	
TAS AT PREDICTED WAYPOINT	V	S	N	3	1	Knots	1
TAXI FUEL	V	S	N	5	0.1	Klbs	
TEMPERATURE AT ALTERNATE	V	D	AN	3			1
DIRECTIONAL	F		A	1		P=Plus	
						M=Minus	
MAGNITUDE	V		N	2	1	°C	
THRUST REDUCTION ALTITUDE	V	S	N	5	1	Feet	
TIME DETERMINED							
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
SECONDS	F	S	N	2	1	Seconds	
TIME ERROR TOLERANCE	V	S	N	2	1	Seconds	
TIME TO GO TO DESTINATION 1	V	S	N	3	1	Minutes	
TIME TO GO TO DESTINATION 2	V	S	N	3	1	Minutes	
TIME TO GO TO DESTINATION 3	V	S	N	3	1	Minutes	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
TIME TO GO TO DESTINATION 4	V	S	N	3	1	Minutes	
TIME TO GO TO DESTINATION 5	V	S	N	3	1	Minutes	
TIME TO GO TRIGGER	V	S	N	3	1	Minutes	
TIME UPLINK IS RECEIVED	F	M	N	6			
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
SECONDS	F	S	N	2	1	Seconds	
TOC OR CRUISE TEMPERATURE	V	D	AN	3			
DIRECTIONAL	F		A	1			P=Plus M=Minus
MAGNITUDE	V		N	2	1	°C	
TOP OF DESCENT ALTITUDE	V	S	N	3	100	Feet	
TOP OF DESCENT ETA	F	M	N	6			
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
SECONDS	F	S	N	2	1	Seconds	
TOP OF DESCENT LOCATION	F	S	AN	13			
DIRECTIONAL	F		A	1			N=North S=South
DEGREES	F		N	2	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1			E=East W=West
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
TOTAL FUEL/FOB	V	S	N	5	0.1	Klbs	
TRACK ANGLE MAG	F	S	N	3	1	Degrees	
TRIGGER NUMBER	F	S	N	3	1		
TRIGGER TRIPPED TIME	F	M	N	6			
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
SECONDS	F	S	N	2	1	Seconds	
TRIGGER UPLINK TIME	F	M	N	6			
HOURS	F	S	N	2	1	Hours	
MINUTES	F	S	N	2	1	Minutes	
SECONDS	F	S	N	2	1	Seconds	
TRIM	V	D	AN	5			
DIRECTIONAL	F		A	1		P=Plus M=Minus	
MAGNITUDE	V		N	4	0.01	Degrees	
TRIP FUEL	V	S	N	5	0.1	Klbs	
TROPOPAUSE ALTITUDE	F	S	N	5	1	Feet	
UPLINKED IMI	F	S	A	3			
VERTICAL DEVIATION	V	D	AN	6			
DISTANCE	V		N	5	1	Feet	
DIRECTIONAL	F		A	1		H or L	
VTR PERCENTAGE	V	S	N	2	1	Percent	
WAYPOINT ALTITUDE/OAT	V	M	AN	6			1
ALTITUDE	F	S	N	3	100	Feet	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

ATTACHMENT 7
FMC/DATALINK INTERFACE

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
OAT DIRECTIONAL	F	D	N	1		P=Plus M=Minus	
OAT MAGNITUDE	V		N	2	1	°C	
WAYPOINT BEARING	F	S	N	3	1	Degrees	1
WAYPOINT IDENT	V	S	AN	5			
WAYPOINT LAT/LON	F	S	AN	13			1
DIRECTIONAL	F		A	1		N=North S=South	
DEGREES	F		N	2	1	Degrees	F
MINUTES	F		N	3	0.1	Minutes	
DIRECTIONAL	F		A	1		E=East W=West	
DEGREES	F		N	3	1	Degrees	
MINUTES	F		N	3	0.1	Minutes	
WAYPOINT MAGVAR	V	D	AN	3			1
DIRECTIONAL	F		A	1		E=East W=West	
MAGNITUDE	V		N	2	1	Degrees	
WAYPOINT NAME OR POSITION	V	S	AN	13			
WAYPOINT SEQUENCE	V	S	AN	13			
WAYPOINT TROPOPAUSE ALTITUDE	F	S	N	3	100	Feet	
WAYPOINT TROPOPAUSE ALTITUDE MODIFICATION	F	S	N	3	100	Feet	
WAYPOINT TROPOPAUSE TEMPERATURE	F	S	AN	3			
DIRECTIONAL	F		A	1		P=Plus	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

Element Description	Type	Length Type	Elem Type	Char Length	Scale	Units	Notes
						M=Minus	
MAGNITUDE	V		N	2	1	°C	
WAYPOINT TROPOPAUSE TEMPERATURE MODIFICATION	F	S	AN	3			
DIRECTIONAL	F		A	1		P=Plus	
						M=Minus	
MAGNITUDE	V		N	2	1	°C	
WAYPOINT WIND	V	M	N	6			
DIRECTIONAL	F	S	N	3	1	Degrees	1
MAGNITUDE	V	S	N	3	1	Knots	2
WIND ALTITUDE	V	S	N	3	100	Feet	
WIND AT PREDICTED WAYPOINT	V	M	N	6			1
DIRECTIONAL	F	S	N	3	1	Degrees	
MAGNITUDE	V	S	N	3	1	Knots	
WIND LEVEL ALTITUDE	V	S	N	3	100	Feet	
WIND LEVEL WAYPOINT	V	S	AN	13			
WIND VECTOR MAGNITUDE							
DIFFERENCE	V	S	N	3	1	Knots	
ZERO FUEL WEIGHT	V	S	N	5	0.1	Klbs	
ZERO FUEL WEIGHT CG	V	S	N	3	0.1	Percent	

5261 **Section 9**
5262 **Flight Plan Element Definitions**

5263 This section contains the flight plan element identifiers and a complete description
5264 of each flight plan element.

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units	
:DA:	DEPARTURE AIRPORT	AIRPORT IDENTIFIER	V	S	AN	4			
		<hr/>							
:AA:	ARRIVAL AIRPORT	AIRPORT IDENTIFIER	V	S	AN	4			
		<hr/>							
:CR:	COMPANY ROUTE	COMPANY ROUTE	V	S	AN	10			
		<hr/>							
:R:	DEPARTURE RUNWAY	RUNWAY IDENTIFIER	F	D	AN	3			
		RWY NUMBER			N	2			
		RWY SUFFIX			A	1		L=LEFT	
									C=CENTER
									R=RIGHT
	SUFFIX						O=NO		
<hr/>									
:D:	DEPARTURE PROCEDURE	PROCEDURE IDENT	V	S	AN	10			
		<hr/>							
:F:	FLIGHT PLAN SEGMENT	PUBLISHED IDENT							
		FIX IDENTIFIER	V	S	AN	5			
		OPTIONAL INTRO.(,)							
		OPTIONAL LAT/LON	F	M	AN	13			
		DIRECTIONAL			A	1		N OR S	
	DEGREES			N	5				
<hr/>									
V = VARIABLE	S = SINGLE PARAMER	A = ALPHA			N = NUMERIC				
F = FIXED	M = MULTIPARAMETER	AN = ALPHANUMERIC			D = DIRECTIONAL				

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units
		DIRECTIONAL			A	1		E OR W
		DEGREES			N	6		
	LAT/LON							
		LATITUDE/ LONGITUDE	V	M	AN	13		
		DIRECTIONAL			A	1		N OR S
		DEGREES			N	5		
		DIRECTIONAL			A	1		E OR W
		DEGREES			N	6		
	PB/PB							
		FIX IDENTIFIER	V	S	AN	5		
		OPTIONAL INTRO.(,)						
		OPTIONAL LAT/LON	F	M	AN	13		
		DIRECTIONAL			A	1		N OR S
		DEGREES			N	5		
		DIRECTIONAL			A	1		E OR W
		DEGREES			N	6		
		OPTIONAL TERM.(,)						
		BEARING	F	S	N	3	1	DEGREES
		DASH						
		FIX IDENTIFIER	V	S	AN	5		
		OPTIONAL INTRO.(,)						
		OPTIONAL LAT/LON	F	M	AN	13		
		DIRECTIONAL			A	1		N OR S
		DEGREES			N	5		

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units
		DIRECTIONAL			A	1		E OR W
		DEGREES			N	6		
		OPTIONAL TERM.(,)						
		BEARING	F	S	N	3	1	DEGREES
	PBD							
		FIX IDENTIFIER	V	S	AN	5		
		OPTIONAL INTRO.(,)						
		OPTIONAL LAT/LON	F	M	AN	13		
		DIRECTIONAL			A	1		N OR S
		DEGREES			N	5		
		DIRECTIONAL			A	1		E OR W
		DEGREES			N	6		
		OPTIONAL TERM.(,)						
		BEARING	F	S	N	3	1	DEGREES
		DASH						
		DISTANCE	F	S	N	4	0.1	NM
:ON:	START OF DESIGNATED FLIGHT PLAN SEGMENT	SAME AS :F:						
:OF:	END OF DESIGNATED FLIGHT PLAN SEGMENT	SAME AS :F:						
..	DIRECT FIX	SAME AS :F:						
:A:	ARRIVAL PROCEDURE							
		PROCEDURE IDENT	V	S	AN	10		

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units	
:AP:	APPROACH PROCEDURE	PROCEDURE IDENT	V	S	AN	10			
		<hr/>							
()	ARRIVAL RUNWAY	RUNWAY IDENTIFIER	F	M	AN	3			
		RWY NUMBER			S	N	2		
		RWY SUFFIX			S	A	1		L=LEFT C=CENTER R=RIGHT
		SUFFIX							O=NO
		<hr/>							
:V:	WAYPOINT SPD/ALT/TIME	FIX IDENTIFIER	V	S	AN	13			
		COMMA (,)							
		OPTIONAL* SPEED	F	S	N	3	1	KNOTS	
		COMMA (,)							
		OPTIONAL* ALTITUDE	V	D	AN	6			
		DIRECTIONAL	F		A	2		AA=AT OR ABOVE AB=AT OR BELOW AT=AT	
		ALTITUDE	V		N	4	10	FEET	
		COMMA (,)							
		OPTIONAL ALTITUDE	V	D	AN	6			
		DIRECTIONAL	F		A	2		AA=AT OR	

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

ATTACHMENT 7
FMC/DATALINK INTERFACE

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units
								ABOVE
								AB=AT OR
								BELOW
								AT=AT
		ALTITUDE	V		N	4	10	FEET
		COMMA (,)						
		OPTIONAL TIME*	V	D	AN	6		
		DIRECTIONAL	F		A	2		AA=AT OR AFTER
								AB=AT OR BEFORE
								AT=AT
		TIME	F		N	4	1	HOURS MINUTES UTC (HHMM)
		* For speed-only, altitude-only, or time-only constraints						
		Note: Either speed, altitude or time, or any combination must be included.						
	:H:	HOLD AT WAYPOINT						
		FIX IDENTIFIER	V	S	AN	13		
		COMMA (,)						
		SPEED	F	S	N	3	1	KNOTS
		COMMA (,)						
		ALTITUDE	V	D	AN	6		
		DIRECTIONAL	F		A	2		AA=AT OR
								ABOVE

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units
								AB=AT OR
								BELOW
								AT=AT
		ALTITUDE	V	S	N	4	10	FEET
		COMMA (,)						
		TARGET SPEED	F	S	N	3	1	KNOTS
		COMMA (,)						
		TURN DIRECTION	F	S	A	1		L=LEFT
								R=RIGHT
		COMMA (,)						
		INBOUND COURSE	F	S	N	3	1	DEGREES
		COMMA (,)						
		EFC TIME	F	M	N	4		
		HOURS	F	S	N	2	1	00-24 HOURS
		MINUTES	F	S	N	2	1	MINUTES
		COMMA (,)						
		LEG TIME	F	S	N	2	0.1	MINUTES
		COMMA (,)						
		LEG DISTANCE	V	S	N	3	0.1	NM
:WS:	WAYPOINT	STEP						
	CLIMB							
		FIX IDENTIFIER	V	S	AN	13		
		COMMA (,)						
		ALTITUDE	V	S	N	3	100	FEET
:AT:	ALONG	TRACK						
	WAYPOINT							

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units
		FIX IDENTIFIER	V	S	AN	5		
		DASH (-)						
		DISTANCE	V	D	AN	5	0.1	NM
		DIRECTIONAL	F		A	1		P=PLUS M=MINUS
		DISTANCE	V		N	4	0.1	NM
		COMMA (,)						
		SPEED	F	S	N	3	1	KNOTS
		COMMA (,)						
		ALTITUDE	V	D	AN	6		
		DIRECTIONAL	F		A	2		AA=AT OR ABOVE AB=AT OR BELOW AT=AT
		ALTITUDE	V	S	N	4	10	FEET
		COMMA (,)						
		OPTIONAL ALTITUDE	V	D	AN	6		
		DIRECTIONAL	F		A	2		AA=AT OR ABOVE AB=AT OR BELOW AT=AT
		ALTITUDE	V	S	N	4	10	FEET

:RP: REPORTING POINTS

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units
	LATITUDE RP	LATITUDE	V	M	AN	3		
		DIRECTIONAL	F	S	A	1		N=NORTH S=SOUTH
		DEGREES	V	S	N	2		DEGREES
		OPTIONAL DASH						
		DEGREE INCREMENT	V	S	N	2		
	LONGITUDE RP	LONGITUDE	V	M	AN	4		
		DIRECTIONAL	F	S	A	1		E=EAST W=WEST
		DEGREES	V	S	N	3		DEGREES
		OPTIONAL DASH						
		DEGREE INCREMENT	V	S	N	2		
	TRANSITION							
		TRANSITION IDENT	V	S	AN	5		
	AIRWAY VIA/EXIT VIA							
	AIRWAY VIA							
		AIRWAY IDENTIFIER	V	S	AN	5		
	AIRWAY EXIT VIA							
		FIX IDENTIFIER	V	S	AN	6		
.LO:	LATERAL OFFSET	OFFSET	V	D	AN	3		
		DIRECTIONAL	F		A	1		L=LEFT R=RIGHT
		DISTANCE	V/F		N	2/3	1/0.1	NM
	<i>For backward compatibility, DISTANCE is either variable length (0-2 numerics) with a resolution of 1 NM or a fixed length of 3 numerics with a resolution of 0.1 NM. Older systems may not support 0.1 NM resolution.</i>							

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units
		OPTIONAL COMMA (,)						
		OPTIONAL START FIX IDENTIFIER	V	S	AN	13		
		OPTIONAL COMMA (,)						
		OPTIONAL END FIX IDENTIFIER	V	S	AN	13		
		OPTIONAL COMMA (,)						
		OPTIONAL INTERCEPT ANGLE	V	S	N	3		DEGREES
:F:	AIRWAY INTERCEPT	AIRWAY IDENTIFIER	V	S	AN	5		
:IC:	INTERCEPT COURSE FROM	PUBLISHED IDENT, PB/PB or PBD as defined in the :F: FLIGHT PLAN FPE, followed by a COMMA (,) and COURSE:						
		COURSE	V	S	N	3	1	DEG
:CS:	CRUISE SPEED SEGMENT							
		FIX IDENTIFIER	V	S	AN	13		
		COMMA (,)						
		SPEED TARGET	V	S	AN	3		Mach 000-999
								E=Econ
								L=LRC

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

ATTACHMENT 7
FMC/DATALINK INTERFACE

FPEI	Description	Element Description	Length Type	Elem Type	Char Type	Length	Scale	Units
	OPTIONAL COMMA (,)							
	OPTIONAL ALTITUDE		F	S	N	3	100	FT
	OPTIONAL COMMA (,)							
	OPTIONAL IDENTIFIER	FIX V	S	AN	13			
	OPTIONAL COMMA (,)							
	OPTIONAL TARGET	SPEED V	S	AN	3		Mach 000- 999	
								E=Econ
								L=LR

5265

V = VARIABLE
F = FIXED

S = SINGLE PARAMER
M = MULTIPARAMETER

A = ALPHA
AN = ALPHANUMERIC

N = NUMERIC
D = DIRECTIONAL

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5266 **Section 10**
5267 **Codes and Triggers**

5268 **10.1 Error Type Codes**

5269 Error type codes are listed as decimal and hexadecimal values. Depending on
5270 implementation, this code may be downlinked as either a decimal or hexadecimal
5271 value.

DEC CODE	HEX CODE	DESCRIPTION
001	001	END TO END CRC
002	002	INVALID ATC
003	003	SYNTAX ERROR
004	004	MISSING ELEMENT
005	005	RESERVED FOR DEFINITION (B-737)
006	006	N/A FOR IN AIR
007	007	MISSING ALL DATA FOR DEPENDENT ELEMENT
008	008	INCOMPATIBLE DATA
009	009	FMC DOWNMODE
010	00A	REFERENCE MISMATCH
011	00B	NOT IN NDB
012	00C	DUPLICATE WAYPOINT
013	00D	ROUTE FULL ERROR
014	00E	DATA BASE FULL ERROR
015	00F	ENTRY SLOT UNAVAILABLE
016	010	DUPLICATE SUPPLEMENT NDB DEFINITION
017	011	RESERVED FOR DEFINITION (B-737)
018	012	RESERVED FOR DEFINITION (B-737)
019	013	RESERVED FOR DEFINITION (B-737)
020	014	RESERVED FOR DEFINITION (B-737)
021	015	NO MINIMUM FLIGHT PLAN
022	016	NO ACTIVE ROUTE FOR DOWNLINK
023	017	UNSOLICITED UPLINK
024	018	DATA NOT ALLOWED IN TAKEOFF PHASE
025	019	DATA NOT ALLOWED IN CLIMB PHASE
026	01A	DATA NOT ALLOWED IN CRUISE PHASE
027	01B	DATA NOT ALLOWED IN DESCENT PHASE
028	01C	INCOMPATIBLE RANGE
029	01D	DEPARTURE AIRPORT DOES NOT EXIST
030	01E	DESTINATION AIRPORT DOES NOT EXIST
031	01F	ATO DISTANCE IS ENTERED OVER AN INVALID LEG
032	020	NEGATIVE ATO IS ENTERED OVER MOD DIRECT TO WPT
033	021	ATO DISTANCE IS GREATER THAN LEG LENGTH
034	022	INITIAL FIX IS FLOATER OR PPOS
035	023	PBPB WAYPOINT WITH NO VALID INTERSECTION
036	024	DIRECT WPT AFTER INTERCEPT WAYPOINT
037	025	HOLD ENTERED ON NON-HARD WAYPOINT

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
038	026	ALTITUDE RESTRICTION ON ALT ONLY WAYPOINT
039	027	TO FIX EQUALS FROM ON ROUTE PAGE
040	028	RESERVED FOR DEFINITION (B-737)
041	029	TO FIX IS NOT ON AIRWAY
042	02A	TO FIX CAUSES CHANGE OF DIRECT ON AIRWAY
043	02B	FROM AND TO NOT ON ENTERED AIRWAY
044	02C	CRUISE ALTITUDE LESS THAN MIN CRUISE ALT
045	02D	EPC MORE THAN 6 HOURS PAST HOLD FIX ETA
046	02E	RUNWAY REMAINING GREATER THAN RUNWAY LENGTH
047	02F	RESERVED FOR DEFINITION (B-737)
048	030	UNSOLICITED MOD WIND BECAUSE OF LONG DELETE
049	031	INAPPROPRIATE DATA TYPE
050	032	RESERVED FOR DEFINITION (B-737)
051	033	UNSOLICITED MOD WIND
052	034	CRUISE WIND IN DESCENT
053	035	DATA NOT ALLOWED IN PHASE
054	036	HOLD ENTERED ON HOLD EXIT WITH EXIT ARMED
055	037	VIA TYPE OF PROCEDURE TO FIX ENTRY NOT ALLOWED
056	038	ENTERED AIRPORT ID – DIRECT
057	039	VIA ENTERED FOR FIRST ROUTE SEGMENT
058	03A	AIRWAY UNPACK WAS UNSUCCESSFUL
059	03B	COMPANY ROUTE UNPACK UNSUCCESSFUL
060	03C	N/A FOR AIRCRAFT STATE
061	03D	PROCEDURE NOT FOUND (FOR ENROUTE AFTER)
062	03E	N/A FOR AIRCRAFT INSTALLATION
063	03F	DATA ELEMENT NOT ALLOWED ON GROUND
064	040	NO OFFSET EXISTS
065	041	NO OFFSET AT LEG
066	042	OFFSET IS ACTIVE
067	043	OFFSET DATA INCOMPATIBLE
068	044	NO OFFSETABLE LEG EXISTS
069	045	IMI LOST DUE TO WARM START
070	046	IMI LOST DUE TO OVERFLOW
071-100	047-064	RESERVED FOR DEFINITION (B-737)
101	065	BUFFER FULL
102	066	INCOMPATIBLE IEI
103	067	INVALID IEI FORMAT
104	068	INVALID IMI FORMAT
105	069	NOT ALLOWED ON GROUND
106	06A	INVALID REQUEST LABEL
107	06B	NO IEIs IN MESSAGE
108	06C	NO DATA IN ELEMENT TEXT
109	06D	INVALID FORMAT AND/OR RANGE
110	06E	NOT ALLOWED WHEN AIRBORNE

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
111	06F	NO APPLICABLE ROUTE
112	070	NO APPLICABLE IEI
113	071	NO REPORTING POINTS CREATED
114	072	ZERO FUEL WEIGHT CAUSES INVALID GROSS WEIGHT
115	073	PRIORITY MESSAGE PENDING
116	074	MULTIPLE ROUTE IEI
117	075	NO ROUTE IEI
118	076	NO FLIGHT PLAN ELEMENTS
119	077	NO ACTIVE ROUTE
120	078	FIRST FLIGHT PLAN ELEMENT INVALID
121	079	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
122	07A	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
123	07B	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
124	07C	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
125	07D	MULTIPLE DIRECT TO FIX
126	07E	MULTIPLE OF FLIGHT PLAN ELEMENT NOT ALLOWED
127	07F	FROM FIX IS NOT ON AIRWAY
128	080	AIRWAY/AIRWAY INTERSECTION NOT FOUND
129	081	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
130	082	NO FIX MATCH IN ROUTE
131	083	MULTIPLE HOLD AT FIX
132	084	BASE PROCEDURE UNDEFINED
133	085	LAT/LON REPORTING POINT NOT FOUND
134	086	CURRENT FLIGHT PLAN CONDITIONS INVALID FOR OFFSET
135	087	FPEI INCOMPATIBLE WITH IEI
136	088	NO COMPATIBLE RUNWAYS
137	089	AIRWAY FLIGHT PLAN ELEMENT IS NOT CLOSED
138	08A	NO FROM FIX FOR AIRWAY FLIGHT PLAN ELEMENT
139	08B	SPARE
140	08C	EXCEEDS CHARACTER LIMIT
141	08D	DERATE OPTION NOT SELECTED
142	08E	PAGES OUT OF SEQUENCE
143	08F	TIMED OUT
144	090	NO VALID RWY RECORDS
145-200	091-0C8	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
201	0C9	DEPENDENT IMI REJECTED
202	0CA	DUPLICATE IEIs
203	0CB	REPORT NOT ALLOWED WITH INVALID A/C POSITION
204	0CC	BLOCK NOT SUFFICIENT FOR TAXI AND ROUTE RESERVE
205	0CD	WINDOW ALTITUDE CONSTRAINT NOT ALLOWED
206	0CE	NOT ALLOWED FOR ALTERNATE FLIGHT PLAN
207	0CF	DESTINATION DOES NOT MATCH ORIGIN OF ALTERNATE
208	0D0	PILOT DEFINED STORE IS FULL
209-300	0D1-12C	RESERVED FOR DEFINITION (AIRBUS AIRCRAFT)

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5272 10.2 Error Data Codes

5273 Error codes are listed as decimal and hexadecimal values. Depending in
5274 implementation, this code may be downlinked as either a decimal or hexadecimal
5275 value.

DEC CODE	HEX CODE	DESCRIPTION
001	001	RTA WAYPOINT DATA CODE
002	002	RTA TIME DATA CODE
003	003	ALTERNATE AIRPORT ID DATA CODE
004	004	ALTERNATE AIRPORT TYPE DATA CODE
005	005	ALTERNATE AIRPORT DISTANCE DATA CODE
006	006	ALTERNATE AIRPORT ALTITUDE DATA CODE
007	007	ALTERNATE AIRPORT WIND DATA CODE
008	008	CLEAR FLIGHT PLAN DATA CODE
009	009	FLIGHT NUMBER DATA CODE
010	00A	COST INDEX DATA CODE
011	00B	CRUISE ALTITUDE DATA CODE
012	00C	CRUISE (TOC) TEMP DATA CODE
013	00D	ZERO FUEL WEIGHT DATA CODE
014	00E	CRUISE WIND DATA CODE
015	00F	RESERVE FUEL DATA CODE
016	010	CRUISE CENTER OF GRAVITY DATA CODE
017	011	CLIMB TRANSITION ALTITUDE DATA CODE
018	012	TAKEOFF DEPARTURE RUNWAY ID DATA CODE
019	013	RUNWAY INTERSECTION DATA CODE
020	014	RUNWAY POSITION SHIFT DATA CODE
021	015	RUNWAY LENGTH REMAINING DATA CODE
022	016	T/O RUNWAY INVALID FLAG DATA CODE
023	017	TRIM DATA CODE
024	018	TAKEOFF REFERENCE GROSS WEIGHT DATA CODE
025	019	TAKEOFF FLAPS DATA CODE
026	01A	V1 SPEED DATA CODE
027	01B	V2 SPEED DATA CODE
028	01C	VR SPEED DATA CODE
029	01D	TAKEOFF SEL TEMP DATA CODE (ASSUMED TEMP)
030	01E	T/O RUNWAY SLOPE DATA CODE
031	01F	T/O RUNWAY WIND DATA CODE
032	020	T/O RUNWAY CONDITION DATA CODE
033	021	TAKEOFF DERATE DATA CODE
034	022	RESERVED FOR DEFINITION (B-737)
035	023	OUTSIDE AIR TEMP DATA CODE
036	024	DESCENT WIND ALT DATA CODE
037	025	DESCENT WIND DIR/MAG DATA CODE
038	026	TAKEOFF CENTER OF GRAVITY DATA CODE
039	027	RESERVED FOR DEFINITION (B-737)

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
040	028	BLOCK FUEL DATA CODE (PLAN FUEL)
041	029	DESCENT TRANSITION ALTITUDE DATA CODE
042	02A	TAI ON DATA CODE
043	02B	TAI ON/OFF ALTITUDE DATA CODE
044	02C	DESCENT ISA DEV DATA CODE
045	02D	QNH DATA CODE
046	02E	TIME ERROR TOLERANCE DATA CODE
047	02F	MIN CLB CAS DATA CODE
048	030	MIN CLB MACH DATA CODE
049	031	MIN CRZ CAS DATA CODE
050	032	MIN CRZ MACH DATA CODE
051	033	MIN DES CAS DATA CODE
052	034	MIN DES MACH DATA CODE
053	035	MAX CLB CAS DATA CODE
054	036	MAX CLB MACH DATA CODE
055	037	MAX CRZ CAS DATA CODE
056	038	MAX CRZ MACH DATA CODE
057	039	MAX DES CAS DATA CODE
058	03A	MAX DES MACH DATA CODE
059	03B	DEPARTURE AIRPORT DATA CODE
060	03C	DESTINATION AIRPORT DATA CODE
061	03D	COMPANY ROUTE DATA CODE
062	03E	DEPARTURE RUNWAY DATA CODE
063	03F	DEPARTURE BASE PROCEDURE DATA CODE
064	040	DEPARTURE TRANSITION PROCEDURE DATA CODE
065	041	AIRWAY VIA DATA CODE
066	042	INITIAL FIX WAYPOINT DATA CODE
067	043	INITIAL FIX PBD DATA CODE
068	044	INITIAL FIX PBPB DATA CODE
069	045	INITIAL FIX LAT/LON DATA CODE
070	046	DIRECT WPT AFTER SID DATA CODE
071	047	DIRECT PBD AFTER SID DATA CODE
072	048	DIRECT PBPB AFTER SID DATA CODE
073	049	DIRECT LAT/LON AFTER SID DATA CODE
074	04A	DIRECT WAYPOINT AFTER STAR DATA CODE
075	04B	DIRECT PBD AFTER STAR DATA CODE
076	04C	DIRECT PBPB AFTER STAR DATA CODE
077	04D	DIRECT LAT/LON AFTER STAR DATA CODE
078	04E	DIRECT WAYPOINT AFTER APPROACH DATA CODE
079	04F	DIRECT PBD AFTER APPROACH DATA CODE
080	050	DIRECT PBPB AFTER APPROACH DATA CODE
081	051	DIRECT LAT/LON AFTER APPROACH DATA CODE
082	052	DIRECT TO WAYPOINT DATA CODE
083	053	DIRECT TO PBD DATA CODE

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
084	054	DIRECT TO PBPB DATA CODE
085	055	DIRECT LAT/LON DATA CODE
086	056	ENROUTE WAYPOINT DATA CODE
087	057	DIRECT WAYPOINT DATA CODE
088	058	DIRECT PBD DATA CODE
089	059	DIRECT PBPB DATA CODE
090	05A	DIRECT LAT/LON DATA CODE
091	05B	RESERVED FOR DEFINITION (B-737)
092	05C	REF WAYPOINT 2 LAT/LON DATA CODE
093	05D	STAR BASE PROCEDURE DATA CODE
094	05E	STAR TRANS PROCEDURE DATA CODE
095	05F	APPROACH BASE PROCEDURE DATA CODE
096	060	APPROACH TRANSITION PROCEDURE DATA CODE
097	061	DESTINATION RUNWAY DATA CODE
098	062	HOLD ID AND ALT RESTRICTION DATA CODE
099	063	HOLD TARGET SPEED DATA CODE
100	064	HOLD TURN DIRECTION DATA CODE
101	065	HOLD INBOUND COURSE DATA CODE
102	066	HOLD EFC TIME DATA CODE
103	067	HOLD LEG TIME DATA CODE
104	068	HOLD LEG DISTANCE DATA CODE
105	069	ATO WAYPOINT INFORMATION DATA CODE
106	06A	UPLINK REQUESTING DOWNLINK DATA CODE
107	06B	WAYPOINT SPD/ALT RESTRICTION DATA CODE
108	06C	NETWORK ADDRESS DATA CODE
109	06D	COMPANY ROUTING ADDRESS DATA CODE
110	06E	MESSAGE SEQUENCE NUMBER DATA CODE
111	06F	REFERENCE CRUISE WIND ALT DATA CODE
112	070	ENROUTE WIND WAYPOINT ID DATA CODE
113	071	ENROUTE WIND DIR/MAG DATA CODE
114	072	SUPP EFFECT DATE DATA CODE
115	073	SUPP AIRPORT ID DATA CODE
116	074	SUPP AIRPORT LAT DATA CODE
117	075	SUPP AIRPORT LON DATA CODE
118	076	SUPP AIRPORT ELEVATION DATA CODE
119	077	SUPP AIRPORT MAG VAR DATA CODE
120	078	SUPP NAVAID ID DATA CODE
121	079	SUPP NAVAID LAT DATA CODE
122	07A	SUPP NAVAID LON DATA CODE
123	07B	SUPP NAVAID ELEVATION DATA CODE
124	07C	SUPP NAVAID MAG VAR DATA CODE
125	07D	SUPP NAVAID FREQUENCY DATA CODE
126	07E	SUPP NAVAID CLASS DATA CODE
127	07F	SUPP WAYPOINT ID DATA CODE

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
128	080	SUPP WAYPOINT LAT DATA CODE
129	081	SUPP WAYPOINT LON DATA CODE
130	082	SUPP WAYPOINT MAG VAR DATA CODE
131	083	SUPP REF WAYPOINT ID DATA CODE
132	084	SUPP REF WAYPOINT REF LAT/LON DATA CODE
133	085	SUPP REF WAYPOINT RADIAL DATA CODE
134	086	SUPP REF WAYPOINT DISTANCE DATA CODE
135	087	WIND VECTOR MAGNITUDE DIFFERENCE DATA CODE
136	088	WAYPOINT SEQUENCE ID DATA CODE
137	089	ETA CHANGE DATA CODE
138	08A	ETA TO DEST 1 DATA CODE
139	08B	ETA TO DEST 2 DATA CODE
140	08C	ETA TO DEST 3 DATA CODE
141	08D	ETA TO DEST 4 DATA CODE
142	08E	ETA TO DEST 5 DATA CODE
143	08F	RESERVED FOR DEFINITION (B-737)
144	090	RESERVED FOR DEFINITION (B-737)
145	091	ROUTE BUILDING PARAMETER DATA CODE
146	092	ROUTE DATA TYPE CODE
147	093	PERF INIT DATA TYPE CODE
148	094	TAKEOFF REF DATA TYPE CODE
149	095	RTA DATA TYPE CODE
150	096	ALTERNATE INFO DATA TYPE CODE
151	097	SUPP NDB DATA TYPE CODE
152	098	AUTO INSERT DATA TYPE CODE
153	099	ACTIVE WIND DATA TYPE CODE
154	09A	MOD WIND DATA TYPE CODE
155	09B	DESCENT FORECAST DATA TYPE CODE
156	09C	PERF LIMITS DATA TYPE CODE
157	09D	SPARE DATA TYPE CODE
158	09E	LATERAL OFFSET DIST DATA CODE
159	09F	LATERAL OFFSET START WPT DATA CODE
160	0A0	LATERAL OFFSET END WPT DATA CODE
161-200	0A1-0C8	RESERVED FOR DEFINITION (B-737)
201	0C9	FUEL FLOW FACTOR DATA CODE
202	0CA	DRAG FACTOR DATA CODE
203	0CB	LIMIT TAKEOFF GROSS WEIGHT DATA CODE
204	0CC	THRUST RATING DATA CODE
205	0CD	VTR PERCENTAGE DATA CODE
206	0CE	ALTERNATE FLAPS DATA CODE
207	0CF	ALTERNATE TRIM DATA CODE
208	0D0	ALTERNATE LIMIT TAKEOFF GROSS WEIGHT DATA CODE
209	0D1	TAKEOFF SPEEDS DATA CODE
210	0D2	ALTERNATE TAKEOFF SPEEDS DATA CODE

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
211	0D3	WAYPOINT ALTITUDE/OAT DATA CODE
212	0D4	LATERAL OFFSET DATA CODE
213	0D5	ALONG TRACK OFFSET DATA CODE
214	0D6	WAYPOINT STEP CLIMB DATA CODE
215	0D7	LAT/LON REPORTING POINT DATA CODE
216	0D8	GROUND ADDRESS DATA CODE
217	0D9	DIRECT FIX DATA CODE
218	0DA	HOLD SPEED RESTRICTION DATA CODE
219	0DB	POSITION REPORTING POINT DATA CODE
220	0DC	ENROUTE WIND SEGMENT DATA CODE
221	0DD	ENROUTE SEGMENT DATA CODE
222	0DE	OPEN ENDED AIRWAY DATA CODE
223	0DF	ALTERNATE THRUST RATING DATA CODE
224	0E0	SEQUENCE NUMBER DATA CODE
225	0E1	MINIMUM FUEL TEMPERATURE DATA CODE
226	0E2	COMPANY PREFERRED AIRPORT IDENT DATA CODE
227	0E3	COMPANY PREFERRED PRIORITY DATA CODE
228	0E4	COMPANY PREFERRED WIND DATA CODE
229	0E5	COMPANY PREFERRED ALT/OAT DATA CODE
230	0E6	COMPANY PREFERRED OVERHEAD FIX DATA CODE
231	0E7	COMPANY PREFERRED ALTITUDE DATA CODE
232	0E8	COMPANY PREFERRED SPEED DATA CODE
233	0E9	COMPANY PREFERRED OFFSET DATA CODE
234	0EA	FLIGHT LIST AIRPORT IDENT DATA CODE
235	0EB	FLIGHT LIST WIND DATA CODE
236	0EC	FLIGHT LIST ALT/OAT DATA CODE
237	0ED	ALTERNATE INHIBIT AIRPORT IDENT DATA CODE
238	0EE	ALTERNATE TAKEOFF VTR PERCENTAGE DATA CODE
239	0EF	THRUST REDUCTION ALTITUDE DATA CODE
240	0F0	ACCELERATION ALTITUDE DATA CODE
241	0F1	ENGINE-OUT ACCELERATION ALTITUDE DATA CODE
242	0F2	PAGING DATA CODE
243	0F3	INTERCEPT COURSE FROM IDENT DATA CODE
244	0F4	INTERCEPT COURSE FROM COURSE DATA CODE
245	0F5	CRUISE SPEED SEGMENT START WAYPOINT DATA CODE
246	0F6	CRUISE SPEED SEGMENT END WAYPOINT DATA CODE
247	0F7	CRUISE SPEED SEGMENT SPEED DATA CODE
248	0F8	CRUISE SPEED SEGMENT ALTITUDE DATA CODE
249-300	0F9-12C	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
301	12D	PERF FACTOR DATA CODE
302	12E	TAXI FUEL DATA CODE
303	12F	ZERO FUEL WEIGHT CG DATA CODE
304	130	TROPOPAUSE ALTITUDE DATA CODE
305	131	IDLE FACTOR DATA CODE

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
306	132	MEAN WIND DATA CODE
307	133	CLIMB WIND ALTITUDE DATA CODE
308	134	CLIMB WIND DIR/MAG DATA CODE
309	135	ALTERNATE DESTINATION WIND ALTITUDE DATA CODE
310	136	ALTERNATE DESTINATION WIND DIR/MAG DATA CODE
311	137	STAR/ENROUTE TRANSITION DATA CODE
312	138	THRUST REDUCTION ALTITUDE DATA CODE
313	139	ACCELERATION ALTITUDE DATA CODE
314	13A	ENGINE-OUT ACCELERATION ALTITUDE DATA CODE
315	13B	ALTERNATE ASSUMED TEMP DATA CODE
316-400	13C-190	RESERVED FOR DEFINITION (AIRBUS AIRCRAFT)
401	191	NOISE ABATEMENT END ALTITUDE DATA CODE
402	192	NOISE ABATEMENT SPEED DATA CODE
403	193	NOISE ABATEMENT DERATED THRUST DATA CODE
404	194	HOLD ALTITUDE DATA CODE
405	195	NOISE ABATEMENT THRUST DATA CODE
406	196	NOISE ABATEMENT START ALTITUDE DATA CODE
407	197	SUPP REF AIRPORT DATA CODE
408	198	SUPP RUNWAY DATA CODE
409	199	SUPP RUNWAY LAT DATA CODE
410	19A	SUPP RUNWAY LON DATA CODE
411	19B	SUPP RUNWAY COURSE DATA CODE
412	19C	SUPP RUNWAY ELEVATION DATA CODE
413	19D	SUPP RUNWAY LENGTH DATA CODE
414	19E	CLIMB TEMPERATURE ALTITUDE DATA CODE
415	19F	CLIMB TEMPERATURE DATA CODE
416	1A0	DESCENT TEMPERATURE ALTITUDE DATA CODE
417	1A1	DESCENT TEMPERATURE DATA CODE
418	1A2	WAYPOINT TROPOPAUSE ALTITUDE DATA CODE
419	1A3	WAYPOINT TROPOPAUSE TEMPERATURE DATA CODE
420	1A4	WAYPOINT TROPOPAUSE ALTITUDE MODIFICATION DATA CODE
421	1A5	WAYPOINT TROPOPAUSE TEMPERATURE MODIFICATION DATA CODE

5276

5277

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5278 10.3 Extended Error Codes

5279 Extended error codes are listed as decimal and hexadecimal values. Depending on
5280 implementation, this code may be downlinked as either a decimal or hexadecimal
5281 value.

DEC CODE	HEX CODE	DESCRIPTION
001	001	ALL OF MESSAGE TEXT DISCARDED
002	002	REMAINDER OF MESSAGE TEXT DISCARDED
003	003	ALL OF DATA TYPE DISCARDED
004	004	REMAINDER OF DATA TYPE DISCARDED
005	005	ALL OF ELEMENT TEXT DISCARDED
006	006	REMAINDER OF ELEMENT TEXT DISCARDED
007	007	ALL OF LIST DISCARDED
008	008	REMAINDER OF LIST DISCARDED
009	009	ALL OF LIST ELEMENT DISCARDED
010	00A	ALL OF MULTI-PARAMETER ELEMENT DISCARDED
011	00B	ALL OF ROUTE BUILDING PARAMETER DISCARDED
012	00C	ALL APPROACH PROCEDURE RELATED DATA DISCARDED
013	00D	ALL DEPARTURE AIRPORT RELATED DATA DISCARDED
014	00E	ALL ARRIVAL AIRPORT RELATED DATA DISCARDED
015	00F	ALL SID RELATED DATA DISCARDED
016	010	ALL STAR RELATED DATA DISCARDED
017	011	NEXT AIRWAY DISCARDED
018	012	SINGLE ELEMENT DISCARDED
019-100	013-064	RESERVED FOR DEFINITION (B-737)
101	065	ALL OF LIST ENTRY DISCARDED
102	066	ALL OF ENROUTE SEGMENT DISCARDED
103	067	ALTERNATE RUNWAY DATA DISCARDED
104	068	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
105	069	ALL OF ELEMENT TEXT DISCARDED
106-200	06A-0C8	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
201-300	0C9-12C	RESERVED FOR DEFINITION (AIRBUS AIRCRAFT)

5282

5283

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

5284 **10.4 Triggers, Stimulus Code, and Report Stimulus Codes**

5285 Triggers, stimulus codes and report stimulus codes are listed as decimal and
5286 hexadecimal values. Depending on implementation, this code may be downlinked
5287 as either a decimal or hexadecimal value.

DEC CODE	HEX CODE	DESCRIPTION
001	001	4R INIT REF
002	002	4L SUPP NAV DATA INDEX
003	003	4R SUPP NAV DATA INDEX
004	004	5R PERF INIT
005	005	5L PERF LIMITS
006	006	5R PERF LIMITS
007	007	4L TAKEOFF REF 1/2
008	008	6R MOD LEGS EXTENDED DATA
009	009	6L ALTERNATE DEST
010	00A	1L DATA LINK
011	00B	2L DATA LINK
012	00C	3L DATA LINK
013	00D	4L DATA LINK
014	00E	5L DATA LINK
015	00F	1R DATA LINK
016	010	2R DATA LINK
017	011	3R DATA LINK
018	012	4R DATA LINK
019	013	5R DATA LINK
020	014	6R DATA LINK
021	015	1R MAINT BITE INDEX
022	016	2R MAINT BITE INDEX
023	017	3R MAINT BITE INDEX
024	018	4R MAINT BITE INDEX
025	019	5R MAINT BITE INDEX
026	01A	6R MAINT BITE INDEX
027	01B	6R FMCS BITE INDEX
028	01C	6R FMCS SENSOR STATUS 2/2
029	01D	6R FMCS ANALOG DISCRETES
030	01E	6R IRS MONITOR
031	01F	6R FMCS INFLIGHT FAULTS 3/3
032	020	6R FMCS FLIGHT SELECT
033	021	6R FMCS FLIGHT 'N'
034	022	3R ROUTE
035	023	6R ACT LEGS EXTENDED DATA
036	024	5L PROGRESS 3/3
037	025	5R PROGRESS 3/3
038	026	6L PROGRESS 3/3
039	027	6R PROGRESS 3/3

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
040	028	DES FORECAST
041	029	TIME TO DESTINATION 1
042	02A	TIME TO DESTINATION 2
043	02B	TIME TO DESTINATION 3
044	02C	TIME TO DESTINATION 4
045	02D	TIME TO DESTINATION 5
046	02E	CHANGE IN DESTINATION ETA
047	02F	CHANGE IN DESTINATION AIRPORT
048	030	CHANGE IN ARRIVAL RUNWAY
049	031	EFC ENTRY
050	032	WIND DISCREPANCY
051	033	WAYPOINT SEQUENCE
052	034	POS SHIFT TO IRS LEFT
053	035	POS SHIFT TO IRS RIGHT
054	036	POS SHIFT TO IRS CENTER
055	037	POS SHIFT TO RADIO
056	038	POS SHIFT TO GPS LEFT
057	039	POS SHIFT TO GNSS RIGHT
058	03A	VERIFY POSITION MESSAGE
059	03B	INSUFFICIENT FUEL MESSAGE
060	03C	MOD PLAN EXECUTION
061	03D	CRUISE ALTITUDE CHANGE
062	03E	RTA UNACHIEVABLE MESSAGE
063	03F	HOLDING PATTERN EXIT
064	040	HOLDING PATTERN ENTRY
065	041	FMC FAULT
066	042	SENSOR FAILURE
067	043	BAD NAVAID
068	044	INAIR
069	045	COMPANY UPLINK TEXT ERROR
070	046	ATC UPLINK TEXT ERROR
071	047	COMPANY UPLINK ACKNOWLEDGE
072	048	ATC UPLINK ACKNOWLEDGE
073	049	COMPANY ROUTE DATA ACCEPTED
074	04A	ATC ROUTE DATA ACCEPTED
075	04B	COMPANY ROUTE DATA ACCEPTED WITH EDIT
076	04C	ATC ROUTE DATA ACCEPTED WITH EDIT
077	04D	COMPANY ROUTE DATA REJECTED
078	04E	ATC ROUTE DATA REJECTED
079	04F	COMPANY RTA DATA ACCEPTED
080	050	ATC RTA DATA ACCEPTED
081	051	COMPANY RTA DATA ACCEPTED WITH EDIT
082	052	ATC RTA DATA ACCEPTED WITH EDIT
083	053	COMPANY RTA DATA REJECTED

**ATTACHMENT 7
FMC/DATALINK INTERFACE**

DEC CODE	HEX CODE	DESCRIPTION
084	054	ATC RTA DATA REJECTED
085	055	COMPANY WIND TEMP DATA ACCEPTED
086	056	ATC WIND DATA ACCEPTED
087	057	COMPANY WIND TEMP DATA ACCEPTED WITH EDIT
088	058	ATC WIND DATA ACCEPTED WITH EDIT
089	059	COMPANY WIND TEMP DATA REJECTED
090	05A	ATC WIND DATA REJECTED
091	05B	COMPANY DESCENT FORECAST DATA ACCEPTED
092	05C	ATC DESCENT FORECAST DATA ACCEPTED
093	05D	COMPANY DESCENT FORECAST DATA ACCEPTED WITH EDIT
094	05E	ATC DESCENT FORECAST DATA ACCEPTED WITH EDIT
095	05F	COMPANY DESCENT FORECAST DATA REJECTED
096	060	ATC DESCENT FORECAST DATA REJECTED
097	061	COMPANY PERF INIT DATA ACCEPTED
098	062	ATC PERF INIT DATA ACCEPTED
099	063	COMPANY PERF INIT DATA ACCEPTED WITH EDIT
100	064	ATC PERF INIT DATA ACCEPTED WITH EDIT
101	065	COMPANY PERF INIT DATA REJECTED
102	066	ATC PERF INIT DATA REJECTED
103	067	COMPANY PERF LIMIT DATA ACCEPTED
104	068	ATC PERF LIMIT DATA ACCEPTED
105	069	COMPANY PERF LIMIT DATA ACCEPTED WITH EDIT
106	06A	ATC PERF LIMIT DATA ACCEPTED WITH EDIT
107	06B	COMPANY PERF LIMIT DATA REJECTED
108	06C	ATC PERF LIMIT DATA REJECTED
109	06D	RESERVED FOR DEFINITION (B-737)
110	06E	RESERVED FOR DEFINITION (B-737)
111	06F	RESERVED FOR DEFINITION (B-737)
112	070	RESERVED FOR DEFINITION (B-737)
113	071	RESERVED FOR DEFINITION (B-737)
114	072	RESERVED FOR DEFINITION (B-737)
115	073	UPLINK REQUESTING A DOWNLINK
116	074	TIME TO TOP OF DESCENT 1
117	075	TIME TO TOP OF DESCENT 2
118	076	TIME TO TOP OF DESCENT 3
119	077	TIME TO TOP OF DESCENT 4
120	078	TIME TO TOP OF DESCENT 5
121-200	079-0C8	RESERVED FOR DEFINITION (B-737)
201-300	0C9-12C	RESERVED FOR DEFINITION (BOEING AIRCRAFT)
301	12D	MULTI-LEVEL WIND TEMP DATA ACCEPTED
302	12E	MULTI-LEVEL WIND TEMP DATA REJECTED
303-400	12F-190	RESERVED FOR DEFINITION (AIRBUS AIRCRAFT)

ATTACHMENT 8
CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES

5289 ATTACHMENT 8 CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES


5290

EXAMPLE 1

5291

Line to Point (Straight), No Vertical Change

5292



5293

5294

Word Type Bits 31-30	Bit 29	Parameter Bits 28-9				Label Bits 8-1
Full Word 01	Pad 29-22 00000000	Data Type 21-16 000010	Geometry 15-13 001	Version 12-9 0001	Active Intent 10011010	
Full Word 00	Characteristics bits 29-9 00000000000000000000				Active Intent 10011010	
Full Word 00	Point Latitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Longitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Altitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point ETA				Active Intent 10011010	
	Valid x	Hours xxxxx	Minutes xxxxxx	Seconds xxxxxx		UTC/Pad x00
Full Word 00	Valid x	Path RNP xxxx xxxx xxxx xxxx 0000			Active Intent 10011010	
Full Word 00	Valid x	Point CAS xxxx xxxx xxx0 0000 0000			Active Intent 10011010	
Full Word 00	Valid x	Point Wind Speed xxxx xxxx 0000 0000 0000			Active Intent 10011010	
Full Word 00	Point True Wind Direction x xxxx xxxx 0000 0000 0000				Active Intent 10011010	


5295

5296

ATTACHMENT 8
CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES

EXAMPLE 2

Arc to Point (Curve), No Vertical Change

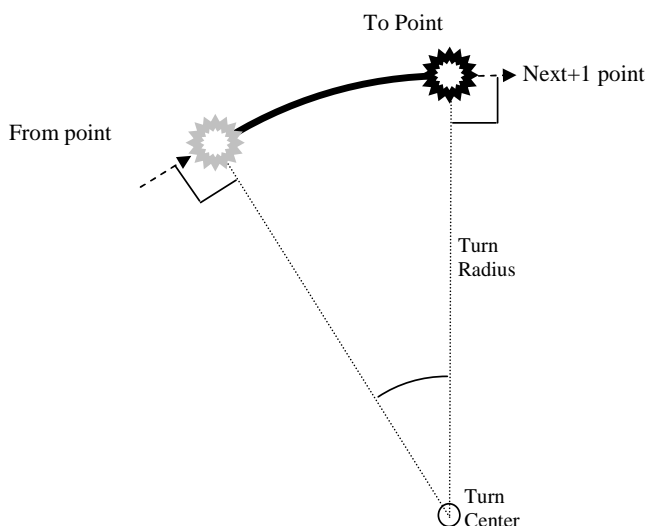


5297
5298
5299

5300

Word Type Bits 31-30	Bit 29	Parameter Bits 28-9				Label Bits 8-1
Full Word 01	Pad 29-22 00000000	Data Type 21-16 000010	Geometry 15-13 010	Version 12-9 0001	Active Intent 10011010	
Full Word 00	Characteristics bits 29-9 00000000000000000000				Active Intent 10011010	
Full Word 00	Point Latitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Longitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Altitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point ETA				Active Intent 10011010	
	Valid x	Hours xxxxx	Minutes xxxxxx	Seconds xxxxxx		UTC/Pad x00
Full Word 00	Valid x	Path RNP xxxx xxxx xxxx xxxx 0000			Active Intent 10011010	
Full Word 00	Valid x	Point CAS xxxx xxxx xxx0 0000 0000			Active Intent 10011010	
Full Word 00	Valid x	Point Wind Speed xxxx xxxx 0000 0000 0000			Active Intent 10011010	
Full Word 00	Point True Wind Direction x xxxx xxxx 0000 0000 0000				Active Intent 10011010	
Full Word 00	Turn Radius x xxxxxxxxxxxxxxxxxxxx 0000				Active Intent 10011010	
Full Word 00	Turn Center Latitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Turn Center Longitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	

**ATTACHMENT 8
CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES**

**EXAMPLE 3
Line to Runway**



Word Type Bits 31-30	Bit 29	Parameter Bits 28-9				Label Bits 8-1
Full Word 01	Pad 29-22 00000000	Data Type 21-16 000010	Geometry 15-13 001	Version 12-9 0001	Active Intent 10011010	
Full Word 00	Characteristics bits 29-9 0000000000000001000000				Active Intent 10011010	
Full Word 00	Point Latitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Longitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Altitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point ETA				Active Intent 10011010	
	Valid x	Hours xxxxx	Minutes xxxxxx	Seconds xxxxxx		UTC/Pad x00
Full Word 00	Valid x	Path RNP xxxx xxxx xxxx xxxx 0000			Active Intent 10011010	
Full Word 00	Valid x	Point CAS xxxx xxxx xxx0 0000 0000			Active Intent 10011010	
Full Word 00	Valid x	Point Wind Speed xxxx xxxx 0000 0000 0000			Active Intent 10011010	
Full Word 00	Point True Wind Direction x xxxx xxxx 0000 0000 0000				Active Intent 10011010	

5301
5302
5303


5304
5305

5306
5307
5308

**ATTACHMENT 8
CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES**

EXAMPLE 4

Lateral Discontinuity to Point




Word Type Bits 31-30	Bit 29	Parameter Bits 28-9				Label Bits 8-1
Full Word 01	Pad 29-22 00000000	Data Type 21-16 000010	Geometry 15-13 001	Version 12-9 0001	Active Intent 10011010	
Full Word 00	Characteristics bits 29-9 0000000000000010000000				Active Intent 10011010	
Full Word 00	Point Latitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Longitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Altitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point ETA				Active Intent 10011010	
	Valid x	Hours xxxxx	Minutes xxxxx	Seconds xxxxx		UTC/Pad x00
Full Word 00	Valid x	Path RNP xxxx xxxx xxxx xxxx 0000			Active Intent 10011010	
Full Word 00	Valid x	Point CAS xxxx xxxx xxx0 0000 0000			Active Intent 10011010	
Full Word 00	Valid x	Point Wind Speed xxxx xxxx 0000 0000 0000			Active Intent 10011010	
Full Word 00	Point True Wind Direction x xxxx xxxx 0000 0000 0000				Active Intent 10011010	

**ATTACHMENT 8
CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES**

EXAMPLE 5

Various Vertical Change Points

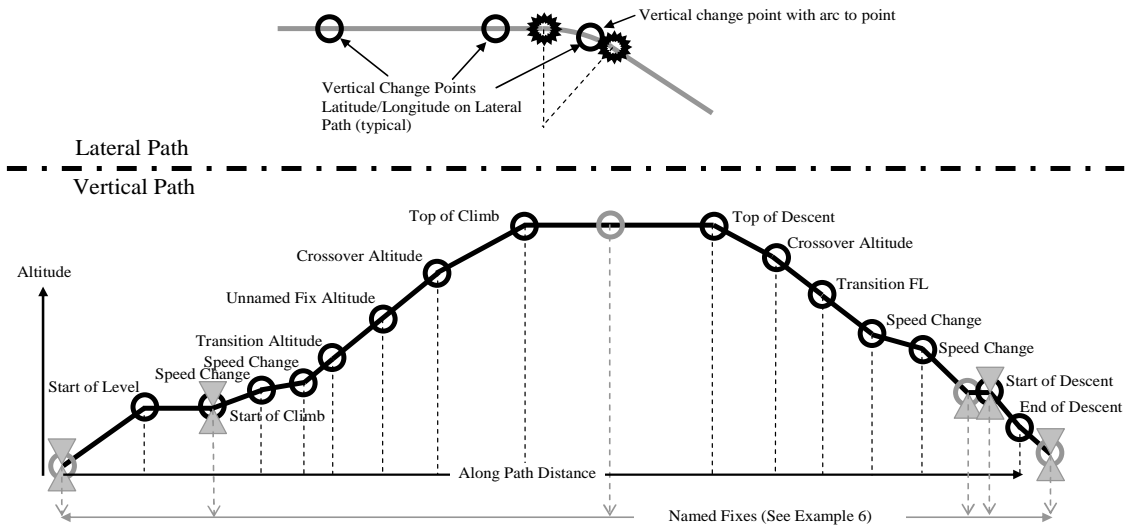

5315
5316

5317

Word Type Bits 31-30	Bit 29	Parameter Bits 28-9				Label Bits 8-1
Full Word 01	Pad 29-22 00000000	Data Type 21-16 000010	Geometry 15-13 001 if line to point 010 if arc to point	Version 12-9 0001	Active Intent 10011010	
Full Word 00	Characteristics bits 29-9 xxxxxxxx00000000x00000				Active Intent 10011010	
Full Word 00	Point Latitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Longitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Altitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point ETA					
	Valid x	Hours xxxxx	Minutes xxxxxx	Seconds xxxxxx	UTC/Pad x00	Active Intent 10011010
Full Word 00	Valid x	Path RNP xxxx xxxx xxxx xxxx 0000			Active Intent 10011010	
Full Word 00	Valid x	Point CAS xxxx xxxx xxx0 0000 0000			Active Intent 10011010	
Full Word 00	Valid x	Point Wind Speed xxxx xxxx 0000 0000 0000			Active Intent 10011010	
Full Word 00	Point True Wind Direction x xxxx xxxx 0000 0000 0000				Active Intent 10011010	
Full Word* 00	Turn Radius x xxxxxxxxxxxxxxxxxxxxxx 0000				Active Intent 10011010	
Full Word* 00	Turn Center Latitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word* 00	Turn Center Longitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	


5318

*Included if arc to point

ATTACHMENT 8
CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES

EXAMPLE 6

Arc to Named Fix (Fly-by Waypoint with Turn and Altitude Constraint)

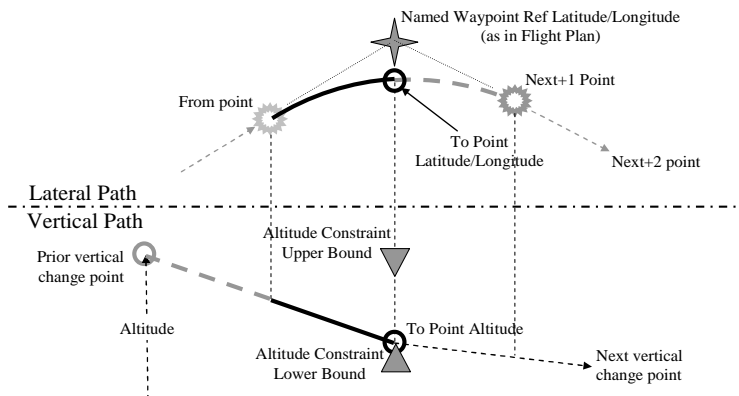

5319
5320

5321

Word Type Bits 31-30	Bit 29	Parameter Bits 28-9				Label Bits 8-1
Full Word 01	Pad 29-22 00000000	Data Type 21- 16 001000	Geometry 15- 13 010	Version 12-9 0001	Active Intent 10011010	
Full Word 00	Characteristics bits 29-9 0000000001000000000000				Active Intent 10011010	
Full Word 00	Point Latitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Longitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Altitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point ETA					
	Valid x	Hours xxxxx	Minutes xxxxxx	Seconds xxxxxx	UTC/Pad x00	
Full Word 00	Valid x	Path RNP xxxx xxxx xxxx xxxx 0000			Active Intent 10011010	
Full Word 00	Valid x	Point CAS xxxx xxxx xxx0 0000 0000			Active Intent 10011010	
Full Word 00	Valid x	Point Wind Speed xxxx xxxx 0000 0000 0000			Active Intent 10011010	
Full Word 00	Point True Wind Direction x xxxx xxxx 0000 0000 0000				Active Intent 10011010	
Full Word 00	Point Name xxxxxxx xxxxxxxx xxxxxxxx				Active Intent 10011010	
Full Word 00	Point Name xxxxxxx xxxxxxxx xxxxxxxx				Active Intent 10011010	
Full Word 00	Point Name 0000000 0000000 xxxxxxxx				Active Intent 10011010	
Full Word 00	Named Point Ref Latitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Named Point Ref Longitude x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Altitude Constraint Lower Bound x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Altitude Constraint Upper Bound x xxxxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Turn Radius x xxxxxxxxxxxxxxxxxxxxxx 0000				Active Intent 10011010	

**ATTACHMENT 8
CODING EXAMPLES OF TRAJECTORY INTENT DATA FILES**

Full Word 00	Turn Center Latitude x xxxxxxxxxxxxxxxxxxxx 00	Active Intent 10011010
Full Word 00	Turn Center Longitude x xxxxxxxxxxxxxxxxxxxx 00	Active Intent 10011010

5322


5323

5324

5325

EXAMPLE 7

Line to Aircraft Projection, No Vertical Change

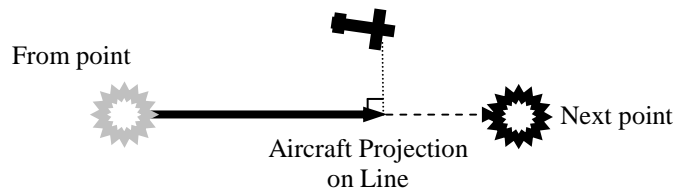

5326

5327

Word Type Bits 31-30	Bit 29	Parameter Bits 28-9				Label Bits 8-1
Full Word 01	Pad 29-22 00000000	Data Type 21-16 000010	Geometry 15-13 001	Version 12-9 0001	Active Intent 10011010	
Full Word 00	Characteristics bits 29-9 0000000000001000000000				Active Intent 10011010	
Full Word 00	Point Latitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Longitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point Altitude x xxxxxxxxxxxxxxxxxxxx 00				Active Intent 10011010	
Full Word 00	Point ETA				Active Intent 10011010	
	Valid x	Hours xxxxx	Minutes xxxxxx	Seconds xxxxxx		UTC/Pad x00
Full Word 00	Valid x	Path RNP xxxx xxxx xxxx xxxx 0000			Active Intent 10011010	
Full Word 00	Valid x	Point CAS xxxx xxxx xxx0 0000 0000			Active Intent 10011010	
Full Word 00	Valid x	Point Wind Speed xxxx xxxx 0000 0000 0000			Active Intent 10011010	
Full Word 00	Point True Wind Direction x xxxx xxxx 0000 0000 0000				Active Intent 10011010	

5328

5329

**APPENDIX A
REFERENCE DOCUMENTS**

5330 **APPENDIX A REFERENCE DOCUMENTS**

5331 The latest versions of the following documents apply:

- 5332 1. **ARINC Specification 413A:** *Guidance for Aircraft Electrical Power Utilization and Transient*
5333 *Protection*
- 5334 2. **ARINC Specification 424:** *Navigation System Data Base*
- 5335 3. **ARINC Specification 429:** *Digital Information Transfer System (DITS)*
- 5336 4. **ARINC Specification 600:** *Air Transport Avionics Equipment Interfaces*
- 5337 5. **ARINC Report 604:** *Guidance for Design and Use of Built-In Test Equipment (BITE)*
- 5338 6. **ARINC Report 607:** *Design Guidance for Avionic Equipment*
- 5339 7. **ARINC Report 608A:** *Design Guidance for Avionics Test Equipment*
- 5340 8. **ARINC Report 610B:** *Guidance for Use of Avionics Equipment and Software in Simulators*
- 5341 9. **ARINC Specification 615:** *Airborne Computer High Speed Data Loader*
- 5342 10. **ARINC Specification 615A:** *Software Data Loader with High Density Storage Medium*
- 5343 11. **ARINC Specification 618:** *Air-Ground Character-Oriented Protocol Specification*
- 5344 12. **ARINC Specification 622:** *ATS Data Link Applications Over ACARS Air-Ground Network*
- 5345 13. **ARINC Report 624:** *Design Guidance for Onboard Maintenance System*
- 5346 14. **ARINC Report 625:** *Industry Guide for Component Test Development and Management*
- 5347 15. **ARINC Report 626:** *Standard ATLAS Language for Modular Test*
- 5348 16. **ARINC Specification 646:** *Ethernet Local Area Network (ELAN)*
- 5349 17. **ARINC Report 651:** *Design Guidance for Integrated Modular Avionics*
- 5350 18. **ARINC Specification 653:** *Avionics Application Software Standard Interface*
- 5351 19. **ARINC Report 660B:** *CNS/ATM Avionics Architectures Supporting NextGen/SESAR*
5352 *Concepts*
- 5353 20. **ARINC Specification 661:** *Cockpit Display System Interfaces to User Systems*
- 5354 21. **ARINC Specification 664:** *Aircraft Data Network*
- 5355 22. **ARINC Characteristic 701:** *Flight Control Computer System*
- 5356 23. **ARINC Characteristic 704:** *Inertial Reference System*
- 5357 24. **ARINC Characteristic 705:** *Attitude and Heading Reference System*
- 5358 25. **ARINC Characteristic 706:** *Subsonic Air Data System*
- 5359 26. **ARINC Characteristic 708A:** *Airborne Weather Radar with Forward Looking Windshear*
5360 *Detection Capability*
- 5361 27. **ARINC Characteristic 709:** *Airborne Distance Measuring Equipment*
- 5362 28. **ARINC Characteristic 710:** *Mark 2 Airborne ILS Receiver*
- 5363 29. **ARINC Characteristic 711:** *Mark 2 Airborne VOR ILS Receiver*
- 5364 30. **ARINC Characteristic 724B:** *Aircraft Communication Addressing and Reporting System*
5365 *(ACARS)*
- 5366 31. **ARINC Characteristic 725:** *Electronic Flight Instruments (EFI)*
- 5367 32. **ARINC Characteristic 737:** *On-Board Weight and Balance System*
- 5368 33. **ARINC Characteristic 738:** *Air Data and Inertial Reference System (ADIRS)*
- 5369 34. **ARINC Characteristic 739A:** *Multi-Purpose Control and Display Unit*
- 5370 35. **ARINC Characteristic 740:** *Multiple-Input Cockpit Printer*

**APPENDIX A
REFERENCE DOCUMENTS**

- 5371 36. **ARINC Characteristic 743A:** *GNSS Sensor*
- 5372 37. **ARINC Characteristic 743B:** *GNSS Landing System Sensor Unit (GLSSU)*
- 5373 38. **ARINC Characteristic 744:** *Full-Format Printer*
- 5374 39. **ARINC Characteristic 744A:** *Full-Format Printer with Graphics Capability*
- 5375 40. **ARINC Characteristic 745:** *Automatic Dependent Surveillance*
- 5376 41. **ARINC Characteristic 755:** *Multi-Mode Landing System – Digital*
- 5377 42. **ARINC Characteristic 756:** *GNSS Navigation and Landing Unit (GNLU)*
- 5378 43. **ARINC Characteristic 758:** *Communications Management Unit (CMU) Mark 2*
- 5379 44. **ARINC Characteristic 760:** *GNSS Navigation Unit (GNU)*
- 5380 45. **EUROCONTROL SPEC-0116:** *EUROCONTROL Specification on Data Link Services (DLS)*
- 5381 46. **ICAO Doc 4444:** *Procedures for Air Navigation Services - Air Traffic Management*
- 5382 47. **ICAO Doc 9613:** *Performance-Based Navigation Manual*
- 5383 48. **RTCA DO-160/EUROCAE ED-14:** *Environmental Conditions and Test Procedures for*
5384 *Airborne Equipment*
- 5385 49. **RTCA DO-178/EUROCAE ED-12:** *Software Considerations in Airborne Systems and*
5386 *Equipment Certification*
- 5387 50. **RTCA DO-200/EUROCAE ED-76:** *Standards for Processing Aeronautical Data*
- 5388 51. **RTCA DO-201/EUROCAE ED-77:** *Standards for Aeronautical Information*
- 5389 52. **RTCA DO-219:** *Minimum Operational Performance Standards for ATC Two-Way Data Link*
5390 *Communications*
- 5391 53. **RTCA DO-229:** *Minimum Operational Performance Standards for Global Positioning*
5392 *System/Satellite-Based Augmentation System Airborne Equipment*
- 5393 54. **RTCA DO-236/EUROCAE ED-75:** *Minimum Aviation System Performance Standards:*
5394 *Required Navigation Performance for Area Navigation*
- 5395 55. **RTCA DO-257B:** *Minimum Operational Performance Standards for the Depiction of*
5396 *Navigational Information on Electronic Maps.*
- 5397 56. **RTCA DO-258/EUROCAE ED-100:** *Interoperability Requirements for ATS Applications Using*
5398 *ARINC 622 Data Communications*
- 5399 57. **RTCA DO-264/EUROCAE ED-78:** *Guidelines for Approval of the Provision and Use of Air*
5400 *Traffic Services Supported by Data Communications*
- 5401 58. **RTCA DO-280/EUROCAE ED-110:** *Interoperability Requirements Standard for Aeronautical*
5402 *Telecommunication Network Baseline 1*
- 5403 59. **RTCA DO-283:** *Minimum Operational Performance Standards for Required Navigation*
5404 *Performance for Area Navigation*
- 5405 60. **RTCA DO-290/EUROCAE ED-120:** *Safety and Performance Requirements Standard for Air*
5406 *Traffic Data Link Services in Continental Airspace*
- 5407 61. **RTCA DO-305/EUROCAE ED-154:** *Future Air Navigation Systems 1/A – Aeronautical*
5408 *Telecommunication Network Interoperability Standard (FANS 1/A ATN B1 Interop*
5409 *Standard)*
- 5410 62. **RTCA DO-306/EUROCAE ED-122:** *Safety and Performance Standard for Air Traffic Data*
5411 *Link Services in Oceanic and Remote Airspace (Oceanic SPR Standard)*
- 5412 63. **RTCA DO-308:** *Operational Services and Environment Definition (OSED) for Aeronautical*
5413 *Information Services (AIS) and Meteorological (MET) Data Link Services*

**APPENDIX A
REFERENCE DOCUMENTS**

- 5414 64. **RTCA DO-324:** *Safety and Performance Requirements (SPR) for Aeronautical Information*
5415 *Services (AIS) and Meteorological (MET) Data Link Services*
- 5416 65. **RTCA DO-350/EUROCAE ED-229:** *Safety and Performance Standard for Baseline 2 ATS*
5417 *Data Communications*
- 5418 66. **RTCA DO-353/EUROCAE ED-231:** *Interoperability Requirements Standard for Baseline 2*
5419 *ATS Data Communications*

**APPENDIX B
ACRONYMS****5420 APPENDIX B ACRONYMS**

5421	ACARS	Aircraft Communications Addressing and Reporting System
5422	ACK	Acknowledgement
5423	ADC	Air Data Computer
5424	ADIRS	Air Data/Inertial Reference System
5425	ADIRU	Air Data/Inertial Reference Unit
5426	ADS	Automatic Dependent Surveillance
5427	ADS-B	Automatic Dependent Surveillance – Broadcast
5428	ADS-C	Automatic Dependent Surveillance - Contract
5429	AEEC	Airlines Electronic Engineering Committee
5430	AF	Arc to a Fix
5431	AFM	Airplane Flight Manual
5432	AFN	ATS Facilities Notification
5433	AFCS	Auto Flight Control System
5434	AHRS	Altitude Heading Reference System
5435	AMI	Airline Modifiable Information
5436	ANP	Actual Navigation Performance
5437	AOC	Airline Operational Communication
5438	APM	Airplane Personality Module
5439	ASAS	Aircraft Separation Assurance System
5440	ATC	Air Traffic Control
5441	ATM	Air Traffic Management
5442	ATN	Aeronautical Telecommunication Network
5443	ATS	Air Traffic Services
5444	ATO	Along Track Offset
5445	ATS	Air Traffic Services
5446	BITE	Built-In Test Equipment
5447	BP	Bottom Plug
5448	CAS	Computed Air Speed
5449	CDA	Continuous Descent Approach
5450	CDO	Continuous Descent Operation
5451	CDU	Control Display Unit
5452	CF	Course to a Fix
5453	CMU	Communications Management Unit
5454	CNS	Communications, Navigation and Surveillance
5455	CPDLC	Controller/Pilot Data Link Communication
5456	CRC	Cyclic Redundancy Check
5457	CTS	Clear to Send
5458	DA	Decision Altitude
5459	DITS	Digital Information Transfer System

**APPENDIX B
ACRONYMS**

5460	DLIC	Data Link Initiation of Communications
5461	DME	Distance Measurement Equipment
5462	EFIS	Electronic Flight Information System
5463	EIS	Electronic Information System
5464	ELAN	Ethernet Local Area Network
5465	EMD	Electronic Map Display
5466	EPU	Estimated Position Uncertainty
5467	ETA	Estimated Time of Arrival
5468	ETE	Estimated Time Enroute
5469	ETOPS	Extended-range Twin-engine Operations
5470	EUROCAE	European Organization for Civil Aviation Electronics
5471	FAF	Final Approach Fix
5472	FANS	Future Air Navigation System
5473	FAS	Final Approach Segment
5474	FASDM	Final Approach Segment Data Message
5475	FCOM	Flight Crew Operations Manual
5476	FEP	Final End Point
5477	FIR	Flight Information Region
5478	FLS	FMS-based Landing System
5479	FMC	Flight Management Computer
5480	FMCS	Flight Management Computer System
5481	FMF	Flight Management Function
5482	FMS	Flight Management System
5483	FRT	Fixed Radius Transition
5484	GBAS	Ground Based Augmentation System
5485	GLS	GNSS-based Landing System
5486	GLSSU	GPS/SBAS Landing System Sensor Unit
5487	GNLU	GNSS-based Navigation and Landing Unit
5488	GNSS	Global Navigation Satellite System
5489	GNSSU	Global Navigation Satellite System Unit
5490	GPS	Global Positioning System
5491	HSI	Horizontal Situation Indicator
5492	IAF	Initial Approach Fix
5493	ICAO	International Civil Aviation Organization
5494	IF	Initial Fix
5495	IFR	Instrument Flight Rules
5496	IGS	Instrument Guidance System
5497	ILS	Instrument Landing System
5498	IMI	Imbedded Message Identifier
5499	IPC	Illustrated Parts Catalog
5500	IRS	Inertial Reference System

APPENDIX B
ACRONYMS

5501	IRU	Inertial Reference Unit
5502	ISA	International Standard Atmosphere
5503	LDA	Localizer Directional Aid
5504	LDU	Link Data Unit
5505	LNAV	Lateral Navigation
5506	LOC	Localizer
5507	LP	Localizer Performance
5508	LPV	Localizer Performance with Vertical Guidance
5509	LRC	Long Range Cruise
5510	LRU	Line Replaceable Unit
5511	LSB	Least Significant Bit
5512	LTP	Landing Threshold Point
5513	MAHP	Missed Approach Holding Point
5514	MAP	Missed Approach Decision Point
5515	MASPS	Minimum Airborne System Performance Standards
5516	MCDU	Multi-Purpose Control Display Unit
5517	MCU	Modular Concept Unit
5518	MDA	Minimum Decision Altitude
5519	MDH	Minimum Decision Height
5520	MEA	Minimum Enroute IFR Altitude
5521	MLS	Microwave Landing System
5522	MMO	Maximum Operating Mach
5523	MMR	Multi-Mode Receiver
5524	MOCA	Minimum Obstruction Clearance Altitude
5525	MOPS	Minimum Operational Performance Standards
5526	MORA	Minimum Off-Route Altitude
5527	MP	Middle Plug
5528	MSB	Most Significant Bit
5529	MTBF	Mean Time Between Failure
5530	MTBUR	Mean Time Between Unit Removal
5531	MU	Management Unit
5532	NAK	Negative Acknowledgement
5533	ND	Navigational Display
5534	NDB	Non-Directional Beacon or Navigation Data Base
5535	NFF	No Fault Found
5536	PBD	Point Bearing/Distance
5537	PBN	Performance-Based Navigation
5538	PDC	Predeparture Clearance
5539	PDMV	Procedure Design Magnetic Variation
5540	PFD	Primary Flight Display
5541	PVT	Position Velocity and Time

**APPENDIX B
ACRONYMS**

5542	QFE*	Local station barometric pressure setting which provides an altimeter reading of indicated altitude of the airplane above the station
5543		
5544	QNH*	Local station barometric pressure setting which provides an altimeter reading of indicated altitude of the airplane above mean sea level
5545		
5546	RAIM	Receiver Autonomous Integrity Monitoring
5547	RF	Constant Radius Arc to a Fix
5548	RNAV	Area Navigation
5549	RNP	Required Navigation Performance
5550	RTA	Required Time of Arrival
5551	RTS	Request to Send
5552	RVSM	Reduced Vertical Separation Minima
5553	SARPS	Standards and Recommended Practices
5554	SBAS	Satellite Based Augmentation System
5555	SDI	Source Destination Identifier
5556	SID	Standard Instrument Departure
5557	STAR	Standard Terminal Arrival Route
5558	SUA	Special Use Airspace
5559	TACAN	Tactical Air Navigation System
5560	TAWS	Terrain Awareness and Warning System
5561	TCC	Thrust Control Computer
5562	TOAC	Time of Arrival Control
5563	TP	Top Plug
5564	TTE	Total Time Error
5565	UIR	Upper Flight Information Region
5566	UTC	Universal Time Coordinated
5567	VFR	Visual Flight Rules
5568	VMO	Maximum Operating Speed
5569	VNAV	Vertical Navigation
5570	VOR	VHF Omni-Range Navigation
5571	VORTAC	Co-Located VOR and TACAN
5572	VSD	Vertical Situation Display
5573	WBS	Weight and Balance System

APPENDIX C
GLOSSARY

5574 APPENDIX C GLOSSARY

- 5575 **ACARS – Aircraft Communications Addressing and Reporting System:**
5576 A digital datalink network providing connectivity between aircraft and ground end
5577 systems (command and control, air traffic control, etc.).
- 5578 **Accuracy – For Navigation:**
5579 The degree of conformance between calculated position and true position.
- 5580 **Accuracy – For Navigation Data:**
5581 The degree of conformance between estimated or measured value and its true
5582 value.
- 5583 **Actual Time of Arrival (ATA)**
5584 The time at which the aircraft crosses a fix.
- 5585 **ADS-B – Automatic Dependent Surveillance-Broadcast:**
5586 A vehicle or object will broadcast a message on a set regular basis which includes
5587 its position (such as lat, long, altitude), velocity, and possibly other information.
5588 These position reports are based on accurate navigation systems. There are three
5589 accepted links, ADS-B: 1090 Extended Squitter (see also 1090 Extended Squitter),
5590 Universal Access Transceiver (see also UAT), and VDL-4 (see also VDL-4). Military
5591 aircraft will use 1090 ES with few exceptions.
- 5592 **ADS-C – Automatic Dependant Surveillance-Contract:**
5593 ADS-C is the same as ADS-A. Automatic Dependent Surveillance-Addressed is a
5594 datalink application that provides for contracted services between ground systems
5595 and aircraft. Contracts are established such that the aircraft will automatically
5596 provide information obtained from its own on-board sensors, and pass this
5597 information to the ground system under specific circumstances dictated by the
5598 ground system (except in emergencies).
- 5599 **Airway**
5600 A control area or portion thereof established in the form of a corridor equipped with
5601 radio navigation aids.
- 5602 **Altitude**
5603 The vertical distance of a level, a point or an object considered as a point,
5604 measured from mean sea level (MSL).
- 5605 **AOC – Airline Operational Control (Aeronautical Operational Control):**
5606 Operational messages used between aircraft and airline dispatch centers or, by
5607 extension, the DoD to support flight operations. This includes, but is not limited to,
5608 flight planning, flight following, and the distribution of information to flights and
5609 affected personnel.
- 5610 **APV – Approach Procedure with Vertical Guidance:**

**APPENDIX C
GLOSSARY**

- 5611 A non-precision approach using GPS that has some vertical guidance. This vertical
5612 guidance is less precise than that for a precision approach (e.g., ILS) and therefore
5613 the approach minimums (weather, ceiling, and visibility) are higher.
- 5614 **Area Navigation (RNAV)**
5615 A method of navigation which permits aircraft operation on any desired flight path
5616 within the coverage of station-referenced navigation aids or within the limits of the
5617 capability of self-contained aids, or a combination of these. Note that the desired
5618 path can be designated by any point(s) in a common reference coordinate system.
- 5619 **ATN – Aeronautical Telecommunications Network:**
5620 An internetwork architecture that allows ground/ground, air/ground, and avionic data
5621 subnetworks to interoperate by using common interface services and protocols
5622 based on the ISO OSI Reference Model.
- 5623 **ATSU – Air Traffic Services Unit:**
5624 A unit established for the purpose of receiving reports concerning air traffic services
5625 and flight plans submitted before departure. It is a generic term meaning air traffic
5626 control unit, flight information center, or air traffic service reporting office.
- 5627 **Availability – For Navigation:**
5628 It is the percentage of the time that the required accuracy and integrity are useable
5629 to meet a specified flight phase.
- 5630 **Bearing**
5631 The horizontal direction to or from any point, usually measured clockwise from true
5632 north, magnetic north, or some other reference point. through 360 degrees.
- 5633 **CDTI – Cockpit Display of Traffic Information:**
5634 Avionics technology that displays the relative location of nearby aircraft to enhance
5635 the pilot's awareness of the surrounding environment.
- 5636 **CMU – Communication Management Unit:**
5637 The CMU performs two important functions: it manages access to the various
5638 datalink sub-networks and services available to the aircraft and hosts various
5639 applications related to datalink. It also interfaces to the flight management system
5640 (FMS) and to the crew displays.
- 5641 **CNS/ATM – Communication, Navigation, Surveillance/Air Traffic Management:**
5642 CNS/ATM is a system based on digital technologies, satellite systems, and
5643 enhanced automation to achieve a seamless global Air Traffic Management in the
5644 future. Modern CNS systems will eliminate or reduce a variety of constraints
5645 imposed on ATM operations today.
- 5646 **Containment**
5647 A set of interrelated parameters used to define the performance of an RNP RNAV
5648 navigation system. These parameters are containment integrity, containment
5649 continuity, and containment region.

**APPENDIX C
GLOSSARY**

5650	Continuity
5651 5652 5653 5654 5655 5656 5657 5658 5659	The continuity of a system is the capability of the total system (comprising all elements necessary to maintain aircraft position within the defined airspace) to perform its function without nonscheduled interruptions during the intended operation. The continuity risk is the probability that the system will be unintentionally interrupted and not provide guidance information for the intended operation. More specifically, continuity is the probability that the system will be available for the duration of a phase of operation, presuming that the system was available at the beginning of that phase of operation. See the definition of containment continuity for how this parameter applies to RNP airspace.
5660	Coordinates
5661 5662	The intersection of lines of reference, usually expressed in degrees / minutes / seconds of latitude and longitude, used to determine a position or location.
5663	Course
5664 5665	1. The intended direction of flight in the horizontal plane measured in degrees from north.
5666 5667	2. The ILS localizer signal pattern usually specified as the front course or the back course.
5668	3. The intended track along a straight, curved, or segmented MLS path.
5669	CPDLC – Controller-Pilot Data Link Communications:
5670 5671 5672 5673	The CPDLC application provides for the exchange of flight planning, clearance, and informational data between a flight crew and air traffic control. This application supplements voice communications and in some areas will likely supersede it in the future.
5674	Cross-Track Containment Limit
5675 5676 5677 5678	A distance that defines the one-dimensional containment limit in the cross-track dimension. The resulting containment region is centered upon the desired path and is bounded by +/- the cross-track containment limit. There is a required cross-track containment limit associated with a particular RNP.
5679	Cross-Track Error
5680 5681	The perpendicular deviation that the airplane is to the left or right of the desired path. This error is equal to the cross-track component of the total system error.
5682	Curvilinear Optimum Path
5683 5684 5685	A vertical flight path composed of multiple straight segments that enable improved flight efficiency through the specification of a path optimized for aircraft performance.
5686	Defined Path
5687	The output of the FMS' path definition function.
5688	Desired Path

**APPENDIX C
GLOSSARY**

5689 The path that the flight crew and air traffic control can expect the aircraft to fly, given
5690 a particular route leg or transition.

5691 Direct

5692 Geodesic track between two navigational aids, fixes, points or any combination
5693 thereof. When used by pilots in describing off-airway routes, points defining direct
5694 route segments become compulsory reporting points unless the aircraft is under
5695 radar contact.

5696 Distance-To-Go

5697 The distance between the aircraft present position and the waypoint to which the
5698 aircraft is flying. In the case of an aircraft flying a parallel offset, the distance-to-go is
5699 measured to the offset reference point.

5700 EFIS – Electronic Flight Instrumentation System:

5701 Digital display that combines aircraft attitude and performance data from different
5702 sources on a single display.

5703 EGNOS – European Geostationary Navigation Overlay Service:

5704 Europe's SBAS implementation (see also SBAS).

5705 Estimate of Position Uncertainty (EPU)

5706 A measure based on a defined scale in nautical miles or kilometers which conveys
5707 the current position estimation performance.

5708 Estimated Position

5709 The output of the FMS' position estimation function.

5710 Estimated Time of Arrival

5711 The time at which the FMS predicts that a fix will be crossed.

5712 FANS-1/A – Future Aircraft Navigation System 1/A:

5713 A set of operational capabilities centered around direct datalink communications
5714 between the flight crew and air traffic control. Operators benefit from FANS-1/A in
5715 oceanic and remote airspace around the world.

5716

**APPENDIX C
GLOSSARY**

- 5717 **Fix**
5718 A fix is a generic name for a geographical position. A fix is referred to as a fix,
5719 waypoint, intersection, reporting point, etc.
- 5720 **Flight Level (FL)**
5721 A surface of constant atmospheric pressure which is related to a specific pressure
5722 datum, 1013.2 hPa and is separated from other surfaces by specific pressure
5723 intervals.
- 5724 **Flight Path Angle**
5725 The angular displacement of the vertical flight path from a horizontal plane that
5726 passes through a reference datum point. The specified angle is from the TO fix or
5727 reference datum point.
- 5728 **Flight Technical Error (FTE)**
5729 The accuracy with which the aircraft is controlled as measured by the indicated
5730 aircraft position with respect to the indicated command or desired position. It does
5731 not include blunder errors.
- 5732 **FMF – Flight Management Function:**
5733 A collection of processes or applications that facilitates area navigation (RNAV) and
5734 related functions to be executed during all phases of flight. The FMF is resident in
5735 an avionics computer and automates navigational functions reducing flight crew
5736 workload particularly during instrument meteorological conditions. The Flight
5737 Management System encompasses the FMF.
- 5738 **FMS – Flight Management System:**
5739 A computer system that uses a large database to allow routes to be
5740 preprogrammed and fed into the system by a means of a data loader. The system is
5741 constantly updated with respect to position by reference to designated sensors. The
5742 sophisticated program and its associated database insure that the most appropriate
5743 aids are automatically selected during the information update cycle. The flight
5744 management system is interfaced/coupled to cockpit displays to provide the flight
5745 crew situational awareness and/or an autopilot.
- 5746 **GBAS – Ground-Based Augmentation System:**
5747 The ICAO defines GBAS as a system that augments ground systems (typically at
5748 an airport) with equipment similar in functionality to a GPS satellite. This
5749 augmentation allows an aircraft to determine its vertical/lateral position to very great
5750 accuracy. The ultimate goal is CAT IIIC operation. The US LAAS is a GBAS.
- 5751 **Geodesic Line**
5752 A line of shortest distance between any two points on a mathematically defined
5753 surface. A geodesic line is a line of double curvature and usually lies between the
5754 two normal section lines which the two points determine. If the two terminal points
5755 are nearly in the same latitude, the geodesic line may cross one of the normal
5756 section lines. It should be noted that, except along the equator and along the
5757 meridians, the geodesic line is not a plane curve and cannot be sighted over
5758 directly.

**APPENDIX C
GLOSSARY**

- 5759 **Geometric Path**
5760 A vertical flight path defined by a straight line between two points or based upon a
5761 specified flight path angle from a reference datum point.
- 5762 **GLS – GNSS Landing System:**
5763 A safety-critical system consisting of the hardware and software that augments the
5764 GPS SPS to provide for precision approach and landing capability (much like the
5765 ground-based ILS does now). The positioning service provided by GPS is
5766 insufficient to meet the integrity, continuity, accuracy, and availability demands of
5767 precision approach and landing navigation. The GLS augments the basic GPS
5768 position data in order to meet these requirements. These augmentations are based
5769 on differential GPS concepts.
- 5770 **GNSS – Global Navigation Satellite System:**
5771 GNSS is the ICAO recognized term for space-based navigation systems that
5772 provide en route/terminal navigation with non-precision approach and precision
5773 approach capabilities. The US system is GPS.
- 5774 **GPS – Global Positioning System:**
5775 A minimum of 24 satellite constellation in six orbits 11,000 miles above the earth.
5776 Positioned so that users can receive signals from six satellites nearly 100% of the
5777 time at any point on Earth. Developed by DoD primarily for military purposes. When
5778 receiving signals from at least four satellites, a GPS receiver can determine latitude,
5779 longitude, altitude and time. Without RAIM (see also RAIM) and FDE (see also
5780 FDE), the user cannot be certain that GPS meets the accuracy, availability, and
5781 integrity requirements critical to safety of flight.
- 5782 **Heading**
5783 The direction in which the longitudinal axis of an aircraft is pointed, usually
5784 expressed in degrees from North (true, magnetic, compass or grid).
- 5785 **Holding Procedure**
5786 A predetermined maneuver which keeps an aircraft within specified a airspace while
5787 awaiting further clearance.
- 5788 **Host Track/Route**
5789 The track or route defined by the waypoints in the active flight plan.
- 5790 **Integrity – For Navigation:**
5791 Ability of a system to provide timely warnings or shut itself down when it shouldn't
5792 be used for navigation.
- 5793 **IRS – Inertial Reference System:**
5794 Uses laser gyros vice an INS' accelerometers placed on gyro-stabilized platforms.
- 5795 **LINK 2000+ – The EUROCONTROL LINK 2000+ Program:**
5796 Packages a first set of en-route controller-pilot data-link-communication (CPDLC)
5797 services into a set for implementation in the European Airspace using the ATN and
5798 VDL Mode 2 (Aeronautical Telecommunication Network and VHF Digital Link).

**APPENDIX C
GLOSSARY**

- 5799 **Leg**
- 5800 A leg is a segment of the flight plan consisting of a path type (e.g., Track, Course,
5801 Heading) and a termination type (e.g., fix, altitude). In an RNP environment, a leg is
5802 typically a path over the earth terminating at a fixed waypoint.
- 5803 **LNAV – Lateral Navigation:**
- 5804 The terminology for a DME/DME or GPS approach where lateral guidance is being
5805 provided along a designated course. LNAV incorporates RNP requirements,
5806 generally RNP 0.3 accuracy, and all monitoring, alerting, integrity and continuity
5807 limits for the navigation system and aircraft.
- 5808 **Magnetic Variation**
- 5809 The angle between the magnetic and geographic meridians at any place, expressed
5810 in degrees and minutes east or west to indicate the direction of magnetic north from
5811 true north. The angle between magnetic and grid meridians is called grid magnetic
5812 angle, or grivation. Also called magnetic declination.
- 5813 **MASPS – Minimum Aviation System Performance Standards:**
- 5814 High level documents produced by RTCA that establish minimum system
5815 performance characteristics.
- 5816 **MMR – Multi-Mode Receiver:**
- 5817 Contains Instrument Landing System, ILS Marker Beacon, VOR, Microwave
5818 Landing System, and GPS functions.
- 5819 **Multi-Sensor Navigation**
- 5820 Where aircraft position is determined using data derived from two or more
5821 independent sensors, each of which is useable (i.e., meets required navigation
5822 performance including accuracy, availability and integrity) for airborne navigation.
- 5823 **MOPS – Minimum Operational Performance Standards:**
- 5824 Standards produced by RTCA that describe typical equipment applications and
5825 operational goals and establish the basis for required performance. Definitions and
5826 assumptions essential to proper understanding are included as well as installed
5827 equipment tests and operational performance characteristics for equipment
5828 installations. MOPS are often used by the FAA as a basis for certification.
- 5829 **Nautical Mile (Nm)**
- 5830 The length equal to 1,852 meters exactly.
- 5831 **Navigation Performance Accuracy**
- 5832 Total navigation accuracy based on the combination of the navigation sensor error,
5833 airborne receiver error, path definition error and flight technical error. Also called
5834 system use accuracy. This performance accuracy is the uncertainty of the horizontal
5835 total system error.
- 5836 **NOTAM**

**APPENDIX C
GLOSSARY**

- 5837 A notice containing information concerning the establishment, condition or change
5838 in any aeronautical facility, service, procedure or hazard, the timely knowledge of
5839 which is essential to personnel concerned with flight operations.
- 5840 **Offset Distance**
5841 The lateral distance, measured in nautical miles left or right, that the offset track
5842 center line is offset from the host track centerline.
- 5843 **Offset Track/Route**
5844 The track or route that describes a flight path that is offset from the host track as
5845 defined by the waypoints in the active flight plan. The offset track/route is defined by
5846 the offset reference point computed by the navigation system.
- 5847 **Offset Reference Point**
5848 The computed offset reference point is located on the line that bisects the track
5849 angle between route segments. The location of the offset reference point for each
5850 waypoint of the host track/route is computed by the navigation system so that it lies
5851 on the intersection of the lines drawn parallel to the host track/route at the desired
5852 offset distance and the line that bisects the track change angle.
- 5853 **Parallel Offset**
5854 The parallel offset path is defined by one or more offset reference points computed
5855 by the navigation system that comprise the active flight plan. The magnitude of the
5856 offset is defined by the offset distance.
- 5857 **Path Definition Error**
5858 The difference between the defined path and the desired path at a specific point
5859 and time.
- 5860 **Path Steering Error (PSE)**
5861 This error is determined by the difference between the defined path and the
5862 estimated position. The PSE includes both FTE and display error (e.g., CDI
5863 centering error).
- 5864 **PBN – Performance Based Navigation:**
5865 PBN is a concept based on the use of Area Navigation (RNAV) systems that
5866 defines required performance in terms of accuracy, integrity, continuity and
5867 availability. The defined performance includes descriptions of how this capability is
5868 to be achieved in terms of aircraft and crew requirements. The general capabilities
5869 are defined in International Civil Aviation Organization (ICAO) Doc 9613,
5870 Performance Based Navigation Manual Implementation Guidance for National
5871 Airspace System (NAS) through Federal Aviation Administration Advisory Circulars.
- 5872 **Position Estimation Error**
5873 The difference between true position and estimated position
- 5874 **Position Uncertainty**
5875 A measure that bounds the magnitude of an unknown position estimation error at a
5876 specific confidence level (e.g. 95%)

**APPENDIX C
GLOSSARY**

- 5877 **P-RAIM – Predictive RAIM:**
 5878 Determines RAIM availability for the ETA at the destination airport. While en route
 5879 to the destination, predictive RAIM is automatically revised as the receiver
 5880 continually calculates a new ETA. It's critical to understand that just because the
 5881 receiver predicts RAIM will be available at the destination, it doesn't *guarantee* there
 5882 will be sufficient satellite coverage on arrival, only that the receiver expects to have
 5883 sufficient coverage to calculate RAIM. It's possible, for example, that a satellite
 5884 could go unhealthy while en route. R signals from satellites low on the horizon could
 5885 be masked by terrain (the receiver's RAIM function has no way of knowing about
 5886 terrain masking). P-RAIM does not have to reside in the GPS receiver. It can be
 5887 provided by FAA Flight Service (US NAS only) and other ground-based RAIM
 5888 algorithms.
- 5889 **RAIM – Receiver Autonomous Integrity Monitoring:**
 5890 RAIM is a two-step process. First, the receiver has to determine if five or more
 5891 working satellites are above the horizon and in the proper geometry to make RAIM
 5892 available. Second, it must determine if the RAIM algorithm indicates a potential
 5893 navigation error, based upon the range solutions from those satellites. In other
 5894 words, when the receiver indicates a "RAIM-not-available" alarm, it's saying, "there
 5895 may/may not be something wrong with the GPS navigation solution, but I do not
 5896 have enough satellite information to know for sure." If it indicates a "RAIM error"
 5897 alarm, it is saying, "I have enough satellites available and there is something wrong
 5898 with one of them and the GPS navigation solution in general." Flight in some civil
 5899 airspace requires RAIM and FDE (see also FDE).
- 5900 **RNAV – Area Navigation:**
 5901 Rather than fly established airways from one ground navigation aid to another (that
 5902 possibly results in an inefficient "zigzag" route), RNAV ability allows a flight to go
 5903 directly from departure to destination using virtual waypoints in space ("ghost"
 5904 NAVAIDs, as it were).
- 5905 **RNP – Required Navigation Performance:**
 5906 Prescribes the RNAV system performance necessary for operation in a specified
 5907 airspace, based on its required accuracy (RNP value). The basic accuracy
 5908 requirement for RNP-X airspace is for the aircraft to remain within X nautical miles
 5909 of the cleared position for 95% of the time in RNP airspace. Note that there are
 5910 additional requirements, beyond accuracy, applied to a particular RNP type.
- 5911 **RNP Airspace**
 5912 Generic term referring to airspace, route(s), leg(s), where minimum navigation
 5913 performance requirements (RNP) have been established and aircraft must meet or
 5914 exceed that performance to fly in that airspace.
- 5915 **RNP-AR – RNP Authorization Required**
 5916 Special authorization to conduct RNP approaches/missed approaches designated
 5917 as such. Operators can be authorized for any subset of these characteristics: (1)
 5918 ability to fly a published arc (also referred to as a RF leg); (2) reduced lateral
 5919 obstacle evaluation area on the missed approach (also referred to as a missed
 5920 approach requiring RNP less than 1.0). RNP AR is designated for approaches

**APPENDIX C
GLOSSARY**

- 5921 where the final approach segment procedure requires RNP values less than 0.3
5922 NM.
- 5923 **RNP-RNAV – RNP Area Navigation:**
5924 A method of area navigation that includes the concept of navigation performance
5925 (RNP), area navigation (RNAV) **and** the elements of containment integrity and
5926 containment continuity.
- 5927 **SARPS – Standards and Recommended Practices:**
5928 Produced by ICAO, they become the international standards for member states. As
5929 the name implies, they are only “recommended” practices. It is up to each member
5930 states to decide how/if to implement them.
- 5931 **SBAS – Satellite Based Augmentation System:**
5932 A complex infrastructure of ground-based monitors and control centers that
5933 augments the satellite-based position measurement system to meet accuracy,
5934 availability, and integrity requirements for navigation systems. The WAAS in the US,
5935 the EGNOS in the Europe, and the MSAS in Japan are examples of an SBAS.
- 5936 **SESAR – Single European Sky ATM Research:**
5937 European air traffic control infrastructure modernization program. SESAR aims at
5938 developing the new generation ATM system capable of ensuring the safety and
5939 fluidity of air transport worldwide over the next 30 years.
- 5940 **TAWS – Terrain Awareness Warning System:**
5941 Generic term for systems, including EGPWS (see also EGPWS), that provide
5942 situational awareness relative to Controlled Flight Into Terrain (CFIT) and protection
5943 by providing three functions : Forward-Looking Terrain-Avoidance (FLTA),
5944 Premature Decent Alert (PDA) and Ground Proximity Warning.
- 5945 **TOAC – Time of Arrival Control:**
5946 The TOAC function provides the temporal or speed control that enables 4
5947 dimensional (4D) navigation to be accomplished. This function supports the spacing
5948 and metering associated with air traffic management and will be used for NextGen
5949 and SESAR operations.
- 5950 **Total System Error**
5951 The difference between true position and desired position. This error is equal to the
5952 vector sum of the Path Steering Error (PSE), Path Definition Error (PDE) and
5953 Position Estimation Error (PEE).
- 5954 **Track**
5955 The projection on the earth's surface of the path of an aircraft, the direction of which
5956 is usually expressed in degrees from north (true, magnetic or grid).
- 5957 **Transition Altitude**
5958 The altitude at or below which the vertical position of an aircraft is controlled by
5959 reference to altitudes.

**APPENDIX C
GLOSSARY**

- 5960 **Transition Level**
5961 The lowest flight level available for use above the transition altitude.
- 5962 **VNAV – Vertical Navigation:**
5963 A capability that allows the aircraft to fly a computed vertical speed profile which
5964 associates lateral waypoints with given altitude/speed constraints through the
5965 control of FMS, Autopilot and Auto-throttle. The vertical/speed profile can be either
5966 entered by the pilot or generated by the FMS. VNAV is not currently a required
5967 RNP/RNAV capability; however, ATM upgrades, such as NextGen, will include
5968 VNAV requirements. VNAV altitude can be based on either the aircraft's barometric
5969 altimetry system (BARO VNAV) or on GPS. Without differential augmentation
5970 (LAAS/WAAS), BARO VNAV will be the primary method of VNAV altitude
5971 determination. Since BARO VNAV is affected by nonstandard temperature effects
5972 and requires an accurate local altimeter setting, use of BARO VNAV is prohibited on
5973 RNAV instrument approach procedures below VNAV DA(H).
- 5974 **Vertical Flight Technical Error**
5975 The accuracy with which the aircraft is controlled as measured by the indicated
5976 aircraft position with respect to the indicated vertical command or desired vertical
5977 position. It does not include blunder errors
- 5978 **Vertical Path Definition Error**
5979 The vertical difference between the defined path and the desired path at a specific
5980 point and time
- 5981 **Vertical Path Steering Error**
5982 The distance from the estimated vertical position to the defined path. It includes
5983 both FTE and display error (e.g., vertical deviation centering error).
- 5984 **Vertical Total System Error**
5985 The difference between true vertical position and desired vertical position. This error
5986 is equal to the vector sum of the vertical path steering error, path definition error,
5987 and altimetry system error. Barometric altitude correction setting error is not
5988 included .
- 5989 **Waypoint**
5990 A predetermined geographical position used for route definition and/or progress
5991 reporting purposes that is defined by latitude/longitude.
- 5992 **WGS-84 – World Geodetic System 1984:**
5993 Developed by the US for world mapping, WGS 84 is an earth fixed global reference
5994 frame. It is the ICAO standard.
5995